
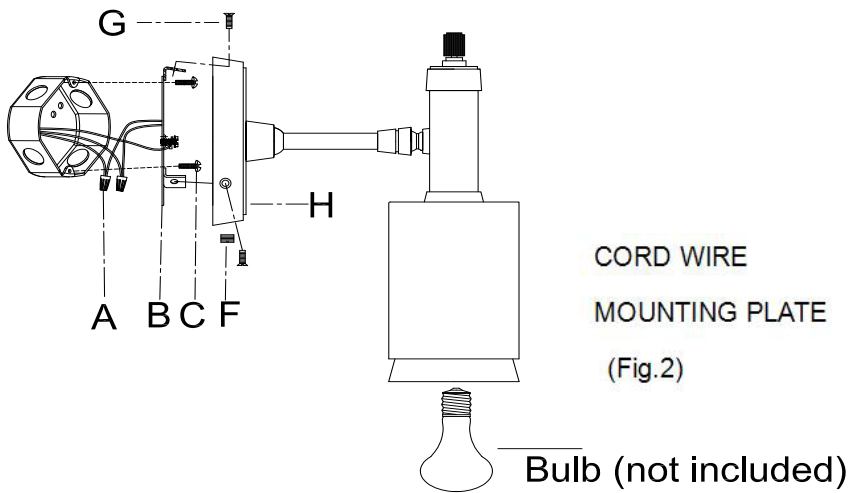


ASSEMBLY INSTRUCTIONS

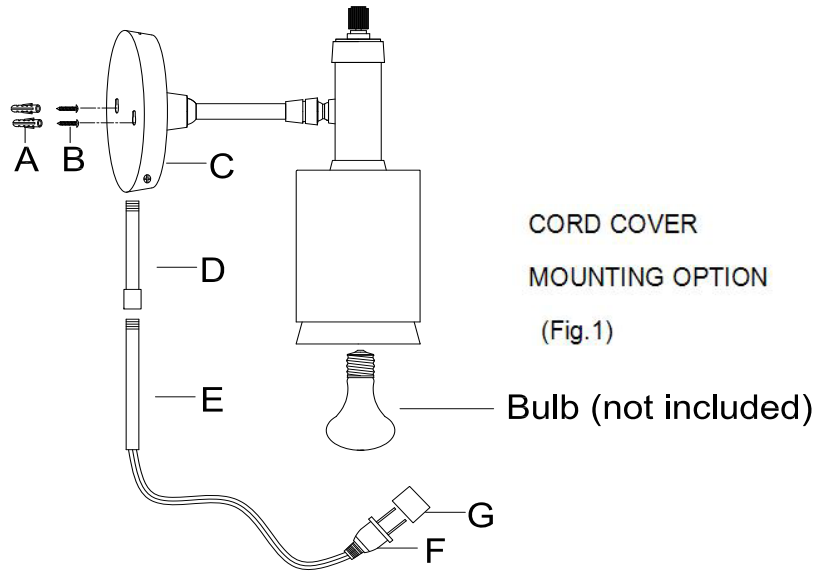

Anders Small Articulating Wall Light Item # TOB 2097

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTILL INSPECTION AND INSTALLATION ARE FINAL.

*** (CORD COVER ASSEMBLY) *** (See Fig.1)

- Carefully remove all parts from the box.
- Screw thread nipple of cord cover (D) into bottom threaded opening of backplate (C).
- Thread cord cover (E) into cord cover (D).
- Measure centre points between both mounting holes at back of fixture base (C). Mark two points with same distance on the wall, make sure they are vertical with each other.
- Drill small holes at both points, holes should be big enough to accomated with plastic anchors (A). Install plastic anchors (A) into the holes in the wall.
- Insert mounting screws (B) into plastic anchors (A), make sure screwhead 1/8" threads are visible.
- Hook fixture base (C) onto both screws (B).
- Insert bulb (not included) into the socket.
- Installation is complete, turn on power at fuse or circuit breaker.

*** (DIRECT WIRE INSTALLATION) *** (See Fig.2)

We strongly recommended that a profssional electrician install the fixture.

- Follow step 1 of the CORD COVER ASSEMBLY.
- Guide wiring from wall outlet through centre hole in mounting plate (B).
- Affix mounting plate (B) to wall outlet box with mounting screws (C). Cut fixture cord twelve inch away from fixture base (H) and remove by grasping plug and pulling out of cord cover (E&D).
- Connect the ground screw (green color) of the fixture to the bare cooper ground wire in the outlet box. The insulation on the fixture cord that was cut to twelve inches in length in step 3 has a smooth side and ribbed side. Connect the smooth wire to the black wire in the outlet box (not shown in diagram) by wire nuts (A). Connect the ribbed wire to the white wire in the outlet box by wiring nuts (A).
- Attach fixture base (H) to the affixed mounting plate (B), and secure with base screws (G).
- Thread the thread pitch (F) into bottom threaded opening of fixture base (H).
- Follow steps 8 of CORD COVER ASSEMBLY.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

