


ASSEMBLY INSTRUCTIONS

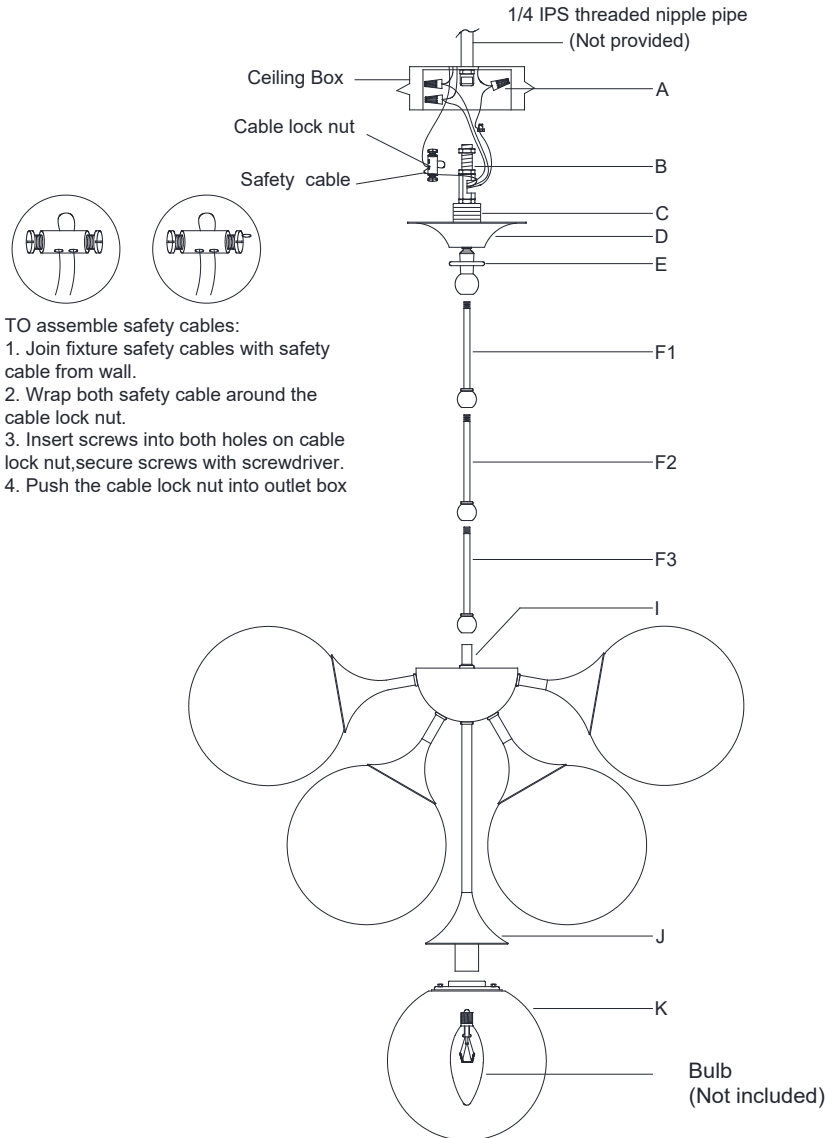

Cristol Tiered Pendant

Item # ARN 5401

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**


INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- Carefully remove all parts from the box.
- A 1/4 IPS pipe must be installed through the junction box and secured to a structural member of the building. This item must hang independently of the junction box. Then install the threaded nipple (B) into the 1/4 IPS PIPE.
- Twist the fixture wires and safety cable together and push through the tube (F3), tube (F2), tube (F1), collar ring (E) and the canopy (D).
- Thread the tube (F3) to the connector (I), then thread the tube (F2) to the tube (F3) and thread the tube (F1) to the tube (F2).
- Measure the wires then cut, be certain to leave enough to connect inside of the junction box.
- Strip the insulation on the fixture wires about 5/8".
- Twist the fixture wires and safety cable together and push through the center hole of the collar loop (C).
- Thread the rod (F1) to the swivel on collar loop (C).
- Run safety cable through junction box and install to structural member of the building. Secure using cable lock nut as shown in figure.
- Connect the fixture ground wire to the ground wire in the junction box using the wire nut (A). IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.

ASSEMBLY INSTRUCTIONS

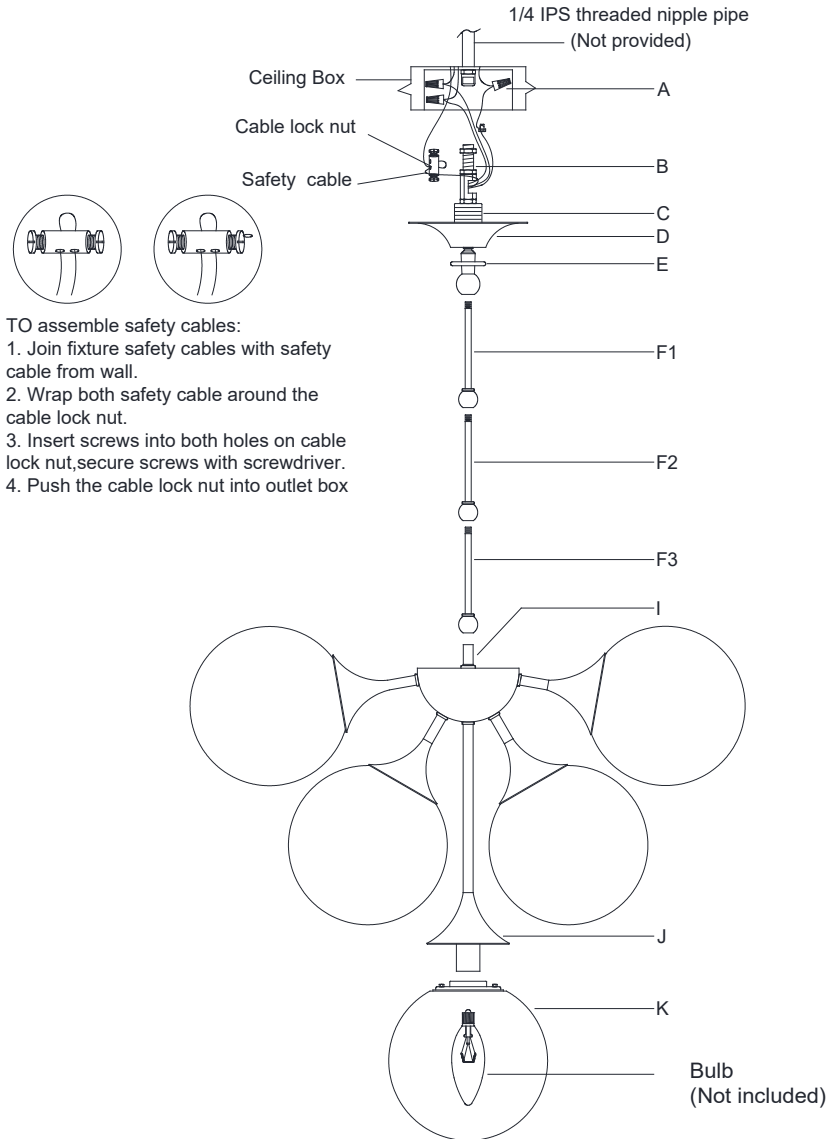

Cristol Tiered Pendant

Item # ARN 5401

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

11. Connect the fixture ribbed wire (no markings) to the neutral wire in the junction box using the wire nut (A).

12. Connect the fixture smooth wire (with markings) to the hot wire in the junction box using the wire nut (A).

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.

13. Carefully tuck the wire connections into the junction box.

14. Install the canopy (D) to collar loop (C) and secure with collar ring (E).

15. Insert bulbs (not included) into the sockets.

16. Thread the glass shades (K) to the metal caps (J).

17. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.