


## ASSEMBLY INSTRUCTIONS

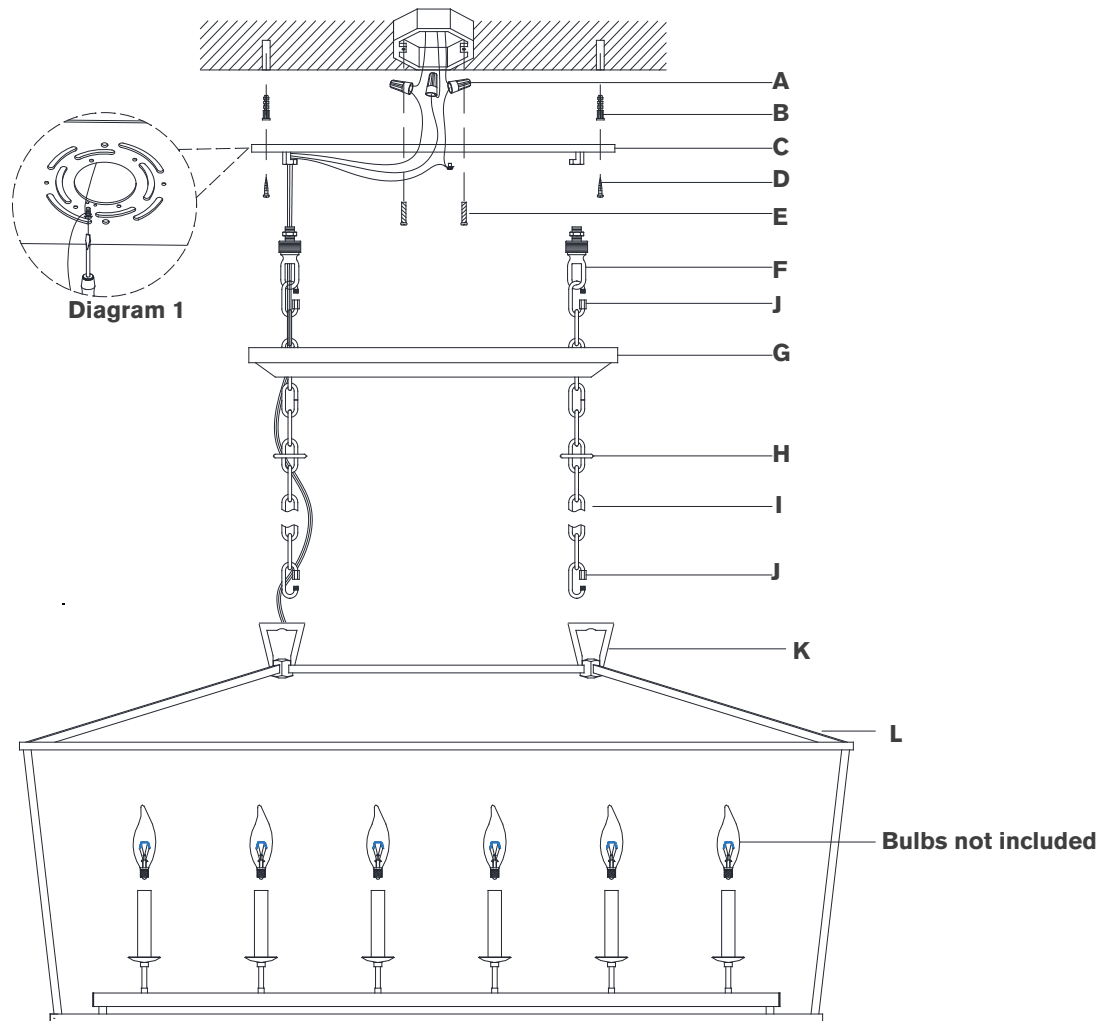

## Darlana Large Linear Lantern

Item # CHC 2166

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.


### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Chain Pliers
Slip Joint Pliers	Wire Strippers	Measuring Tape
Wire Cutters	Drill	Hammer
Pencil		

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Using the mounting plate (C) as a guide, line up with the junction box and mark anchor positions.
3. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (B) into the holes using hammer.
4. Install mounting plate (C) to the junction box and secure with mounting screws (E), then secure wood screws (D) to anchors (B).
5. Remove collar loops (F) from chains (I) by unscrewing quick links (J).
6. Thread collar loops (F) to mounting plate (C).
7. Install canopy (G) to mounting plate (C) and secure with collar rings (H).
8. Determine desired overall length, and amount of chains (I) needed. Shorten chain using chain pliers. (Keep extra chain)
9. Attach chains (I) to collar loops (F) and fixture loops (K) using quick links (J). Secure quick links (J).
10. Thread fixture wire, ground wire and safety cable through chains (I).

**NOTE:** When you reach the collar loop (F), ensure there is no tension on the wires. Cut excess wires, being sure to leave about 12" to reach the junction box.

## ASSEMBLY INSTRUCTIONS

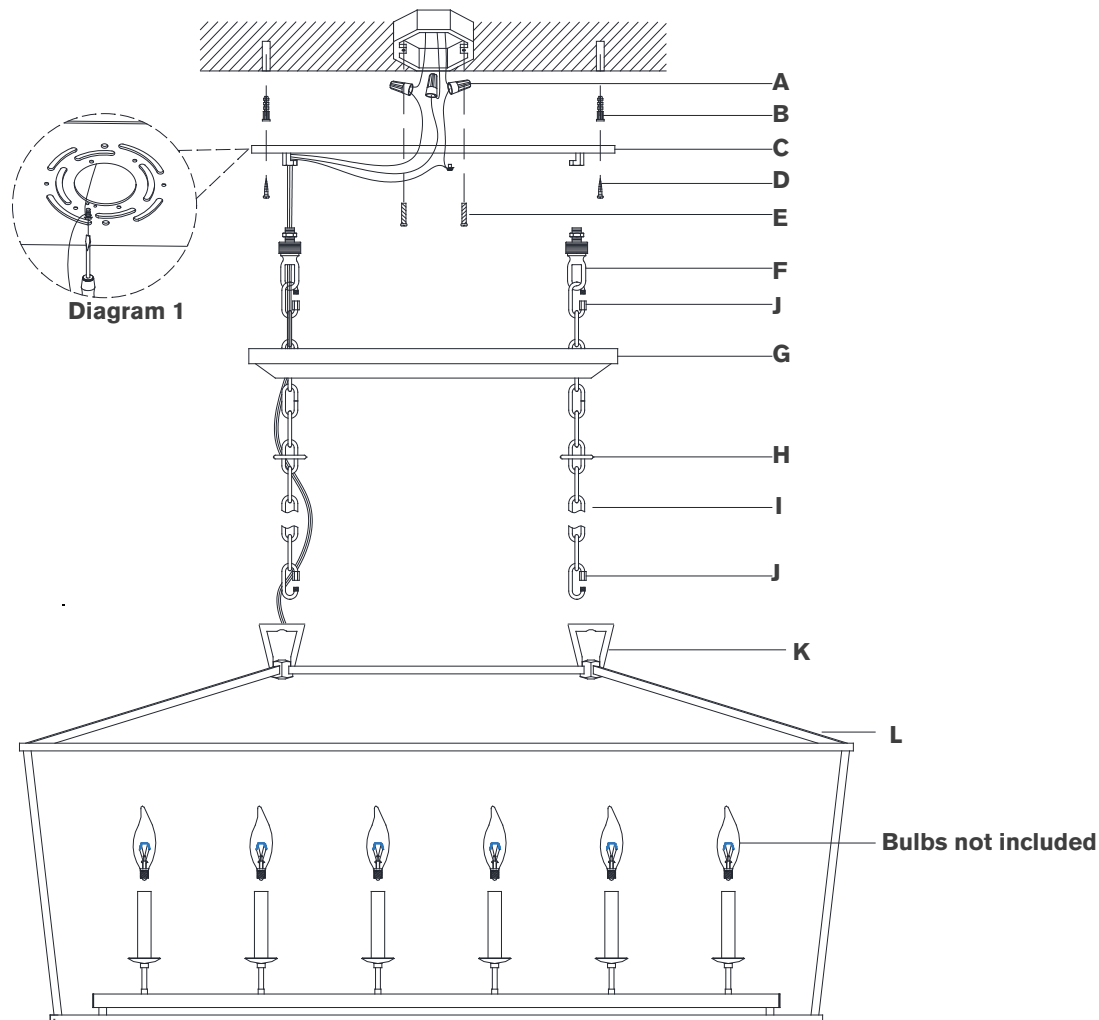

## Darlana Large Linear Lantern

Item # CHC 2166

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Separate two sides of molded wire, and strip insulation on each 5/8".
12. Loosen collar rings (**H**) and let canopy (**G**) slip down chains (**I**) carefully.
13. Twist all fixture wires together. Slip through center hole of collar loop (**D**).  
**NOTE:** Untwist wires and separate to prepare for connection.
14. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (**A**).  
**NOTE:** It is imperative that the fixture is grounded.
15. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut (**A**).
16. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut (**A**).  
**CAUTION:** Do not reverse the hot and neutral connections.
17. Make sure all wire connections are tight, then carefully tuck into the junction box.
18. Install canopy (**G**) to mounting plate (**C**) and secure with collar rings (**H**).
19. Install light bulbs into the sockets.

**Care Instructions:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.