

## ASSEMBLY INSTRUCTIONS

### Prescott 69" Linear Chandelier

Item # KS5406

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

#### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver

Slotted Screwdriver


Wire Cutters

Slip Joint Pliers

Wire Strippers

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate (B) from canopy (E) by removing collar ring (F).
3. Install mounting plate (B) to junction box and secure with mounting screws (C).
4. Feed fixture wires through rod (I), then connect to fixture (J). Repeat for rod (H), connecting to rod (I).
5. Continue feeding fixture wires through rod (G), collar ring (F) and canopy (E).
6. Holding fixture upright, slide collar ring (F), canopy (E) down rods and rest on top of rod (J). Then connect rod (G) to rod (H).  
**NOTE:** Slide components down slowly to avoid damages.
7. Hang fixture fan mount (D) to the bracket of mounting plate (B) and secure with set screws (O) using provided screwdriver (N).
8. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires, and strip insulation on each 5/8".
9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A).

**NOTE:** It is imperative that the fixture is grounded.

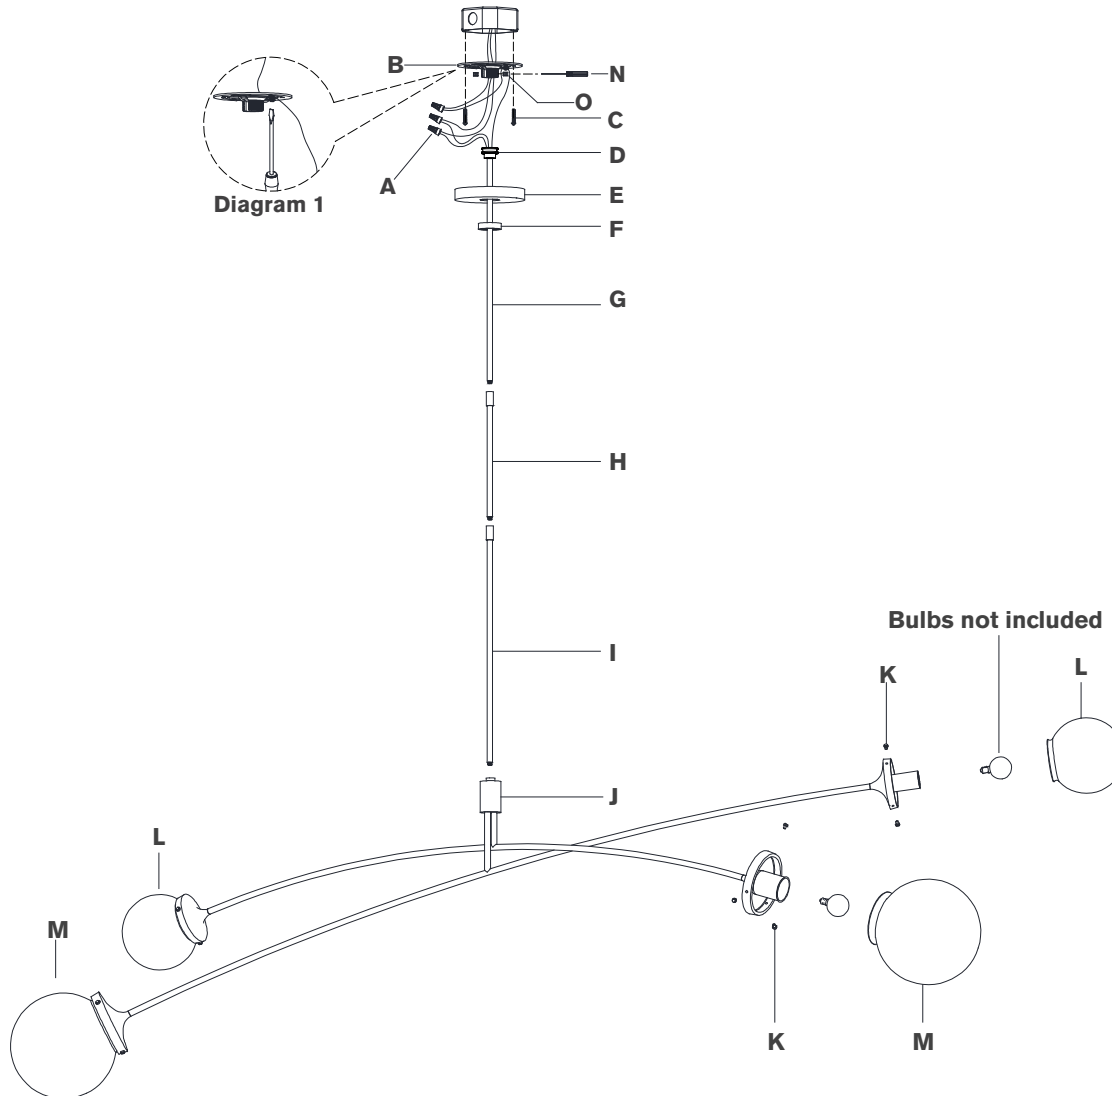

VISUAL COMFORT



## ASSEMBLY INSTRUCTIONS

### Prescott 69" Linear Chandelier

Item # KS5406

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.

11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.

**CAUTION:** Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.

13. Install canopy **(E)** to mounting plate **(B)** and secure with collar ring **(F)**.

14. Install light bulbs into the sockets.

15. Install small glass shades **(L)** to fixture and secure with thumbscrews **(K)**.

**NOTE:** Do not over-tighten otherwise shade could become damaged.

16. Install large glass shades **(M)** to fixture and secure with thumbscrews **(K)**.

**NOTE:** Do not over-tighten otherwise shade could become damaged.

**Care Instructions:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

