


## ASSEMBLY INSTRUCTIONS

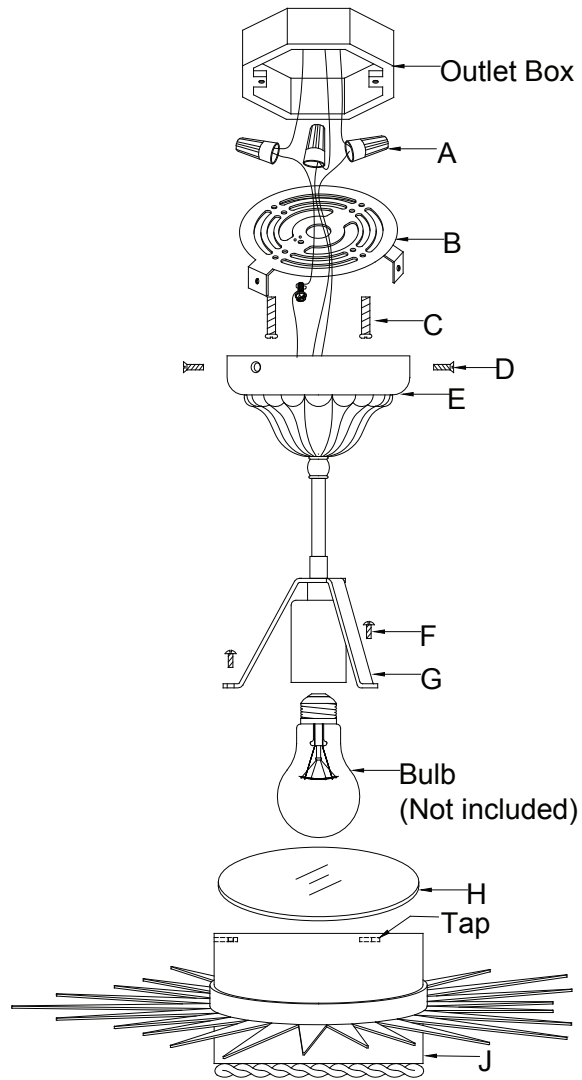

## Soleil Medium Pendant

Item # SK5201

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Put the glass diffuser (H) on the fixture body (J).
2. Place the brackets (G) on the body taps and secure with the round head screws (F).
3. Secure the mounting plate (B) to the Outlet Box with Outlet Box screws (C).
4. Attach the ground wire from the fixture to the ground wire from the building using the provided wire nut (A). If your house has no bare wire (ground) attach this wire to the green grounding screw inside the outlet box. IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
5. Attach the common wire (ribbed, no words) from the fixture to the white wire from the building using the provided wire nut (A).
6. Attach the hot wire (smooth, with words) from the fixture to the black wire from the building with the provided wire nut (A).
7. Secure each connection by tightening and then checking that no wires can be pulled out. IT IS IMPERATIVE THAT YOU NOT MIX THESE WIRES.
8. Wrap each connection individually with electrical tape, if necessary.
9. Neatly tuck the connections into the Outlet Box.
10. Install the canopy (E) to the mounting plate (B) and secure with flat head screws (D).
11. Install lamp bulb (not included) into socket.
12. Restore power and enjoy your new fixture.

