

# Brockway 6-Light Linear

TFC1086 1.0

## GENERATION LIGHTING CHANDELIER

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

**Use minimum 90°C supply conductors.**

**SAVE THESE INSTRUCTIONS!**



GENERATION LIGHTING


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F 847.410.4500

[www.generationlighting.com](http://www.generationlighting.com)

# Install the Fixture

1A

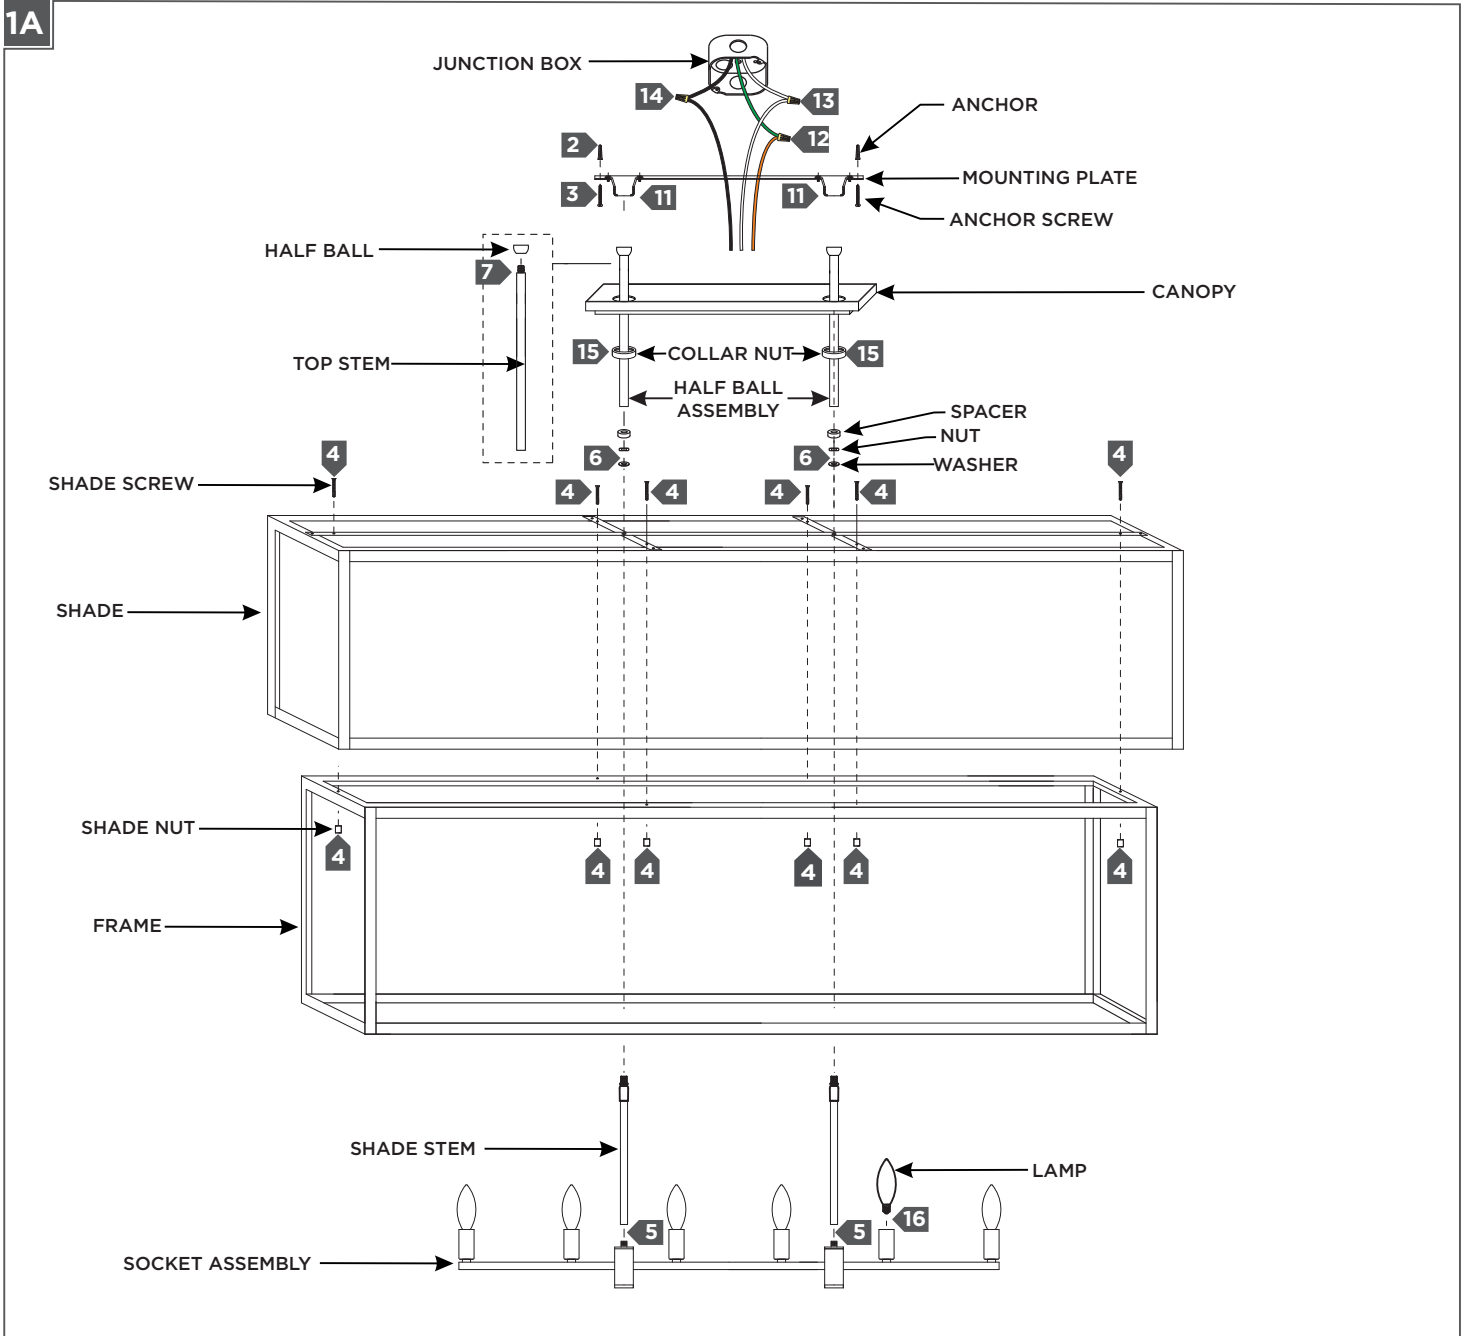

- 1** Temporarily install the mounting plate to the junction box and mark the anchor locations through the holes on the mounting plate. Remove the mounting plate.
- 2** Drill appropriate sized holes at the marked locations and install the anchors.
- 3** Secure the mounting plate to the junction box and screw the anchors screws into the anchors.
- 4** Assemble the shade to the frame by lining up the holes on top, then secure them together with the shade screws and nuts.
- 5** Feed the fixture wires through the shade stems and screw them onto the socket assembly.
- 6** Feed the fixture wires through the shade/frame assembly, insert the shade stems threads into the shade, and secure them together with the washers and nuts.
- 7** Screw the half ball to the top stem.
- 8** Determine the wanted height or look of the fixture with the stems, then assemble them by screwing them together.
- 9** Feed the fixture wires through the stem assembly, place the spacers on the shade stem threads, then screw the stem assemblies onto the shade stems.
- 10** Feed the fixture wires through the collar nut, canopy, and the half ball assembly then screw them onto the stem assemblies.
- 11** Slide the half ball assemblies onto the mounting plate.
- 12** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 13** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 14** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 15** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nuts tightly onto the mounting plate.
- 16** Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage Information.