

# 2015-2021 Ford Mustang EMP Mud Flap Installation Instructions

Evans Motorsport Performance Mud Flaps are Made in USA From 1/8" ABS Plastic. Front only, rear only, or set of 4. Visit [www.EMP.parts](http://www.EMP.parts) and go to the mud flaps page to view installation video.

## Tools Needed:


Automotive Push Pin Removal Tool OR  
Flat Head Screwdriver  
Phillips Screwdriver OR  
Power Drill/Driver  
Pliers

## Hardware Provided:

2 - Black Screws (Front Set)  
2 - Black Bolts  
2 - Clip Nuts  
2 - Clips  
2 - Spacers  
1 - 3/16" Allen Wrench

Perform installation at your own risk. We are not responsible for damage to vehicles or injury to persons during installation and/or use of these mud flaps.

1. Place vehicle in park with parking brake on. Double check everything and surroundings to be sure all is safe before starting installation.
2. After turning wheel to access front inner wheel well, use a plastic rivet removal tool or flat head screwdriver to remove plastic rivet shown.
3. Place plastic rivet into bottom hole on front mud flap as shown and insert back into hole it was removed from then insert plastic rivet pin.

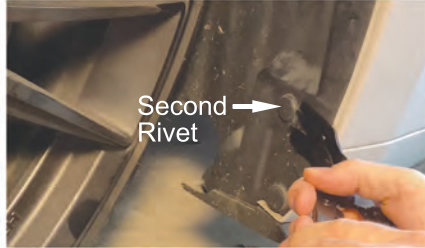

4. Insert small black screw into top hole of front mud flap and hand tighten into mud flap only, not into wheel well liner yet.



5. Align top of mud flap with edge of body and press middle into shape of wheel well.



6. Make sure mud flap is conformed to the shape of the wheel well and top of mud flap is aligned with body then drive screw into wheel well liner. Do not over tighten.



7. Optionally, use a hair dryer or heat gun to conform mud flap perfectly to the wheel well curve. After heated, use cool setting on hair dryer or other means to cool mud flap while holding to the wheel well curve.



8. Front done, now for the rear. Use a plastic rivet removal tool or flat head screwdriver to remove plastic rivet shown in rear wheel well.



9. Optionally, for better hold at bottom of rear mud flap, insert clip into bottom dual slot and press hooks through to other side.



10. Locate hole inside rear wheel well where clip nut will be placed. Insert socket screw into clip nut as shown below.



11. Slip clip nut over hole, push to lock into place then remove screw.



Clip nut may need to be pried apart to more easily fit over hole

# 2015-2021 Ford Mustang EMP Mud Flap Installation Instructions

12. Insert socket screw into top hole of rear mud flap as shown then slide spacer over screw. Slip mud flap between tire and wheel well.



14. Using pliers, tighten socket screw until you can insert Allen wrench. Leave loose so you can position mud flap. Be careful not to damage finish on screw or car paint.



16. Hold mud flap in place and firmly push plastic rivet against wheel well to ensure it is seated in hole while inserting plastic rivet pin to lock in place.




18. Using wrench or supplied 3/16" Allen wrench, tighten socket screw until slot in top of mud flap lines up with edge of body.




13. Insert screw into clip nut and hand tighten as much as possible.



15. Place plastic rivet removed earlier from wheel well into mud flap hole shown then maneuver into place.

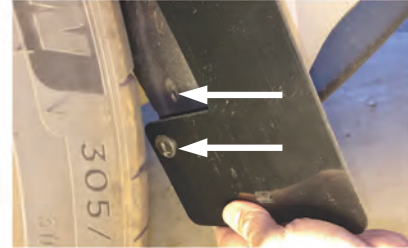

17. Push optional clip onto rocker panel lower edge.

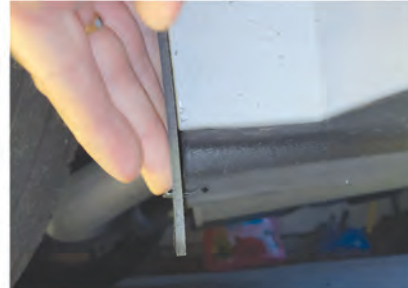

19. Rear complete now repeat for other side.

