




BURLEY®






Rainfly Instructions

## Travoy Rainfly

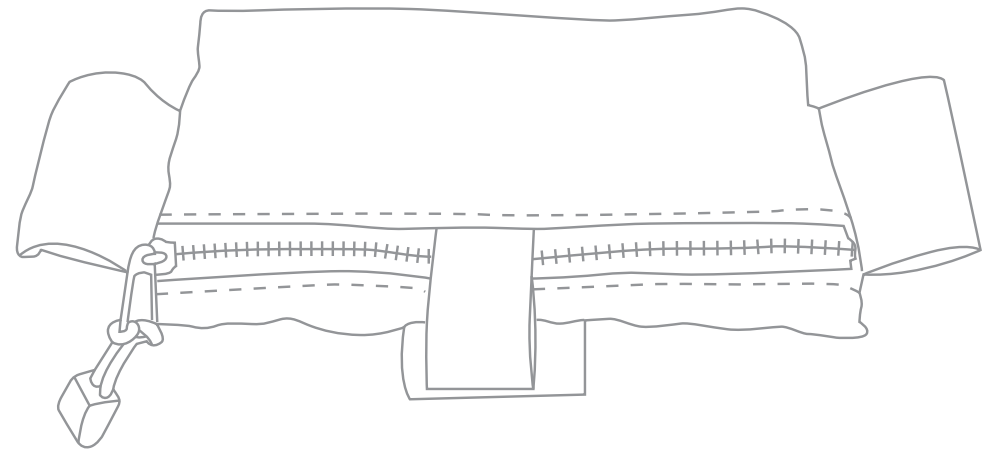

BURLEY®

P.541.687.1644 800.423.8445 F.541.687.0436  
BURLEY DESIGN: 4020 Stewart Rd., Eugene, OR 97402  
burley@burley.com burley.com

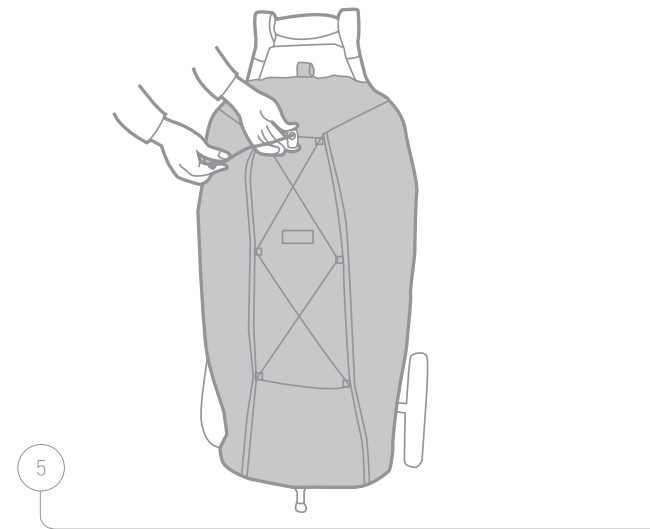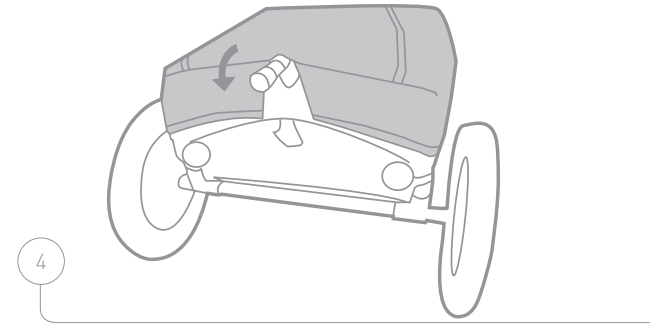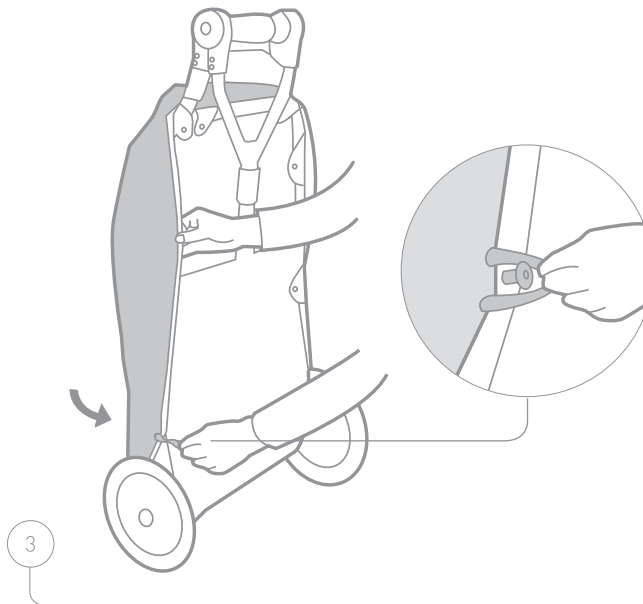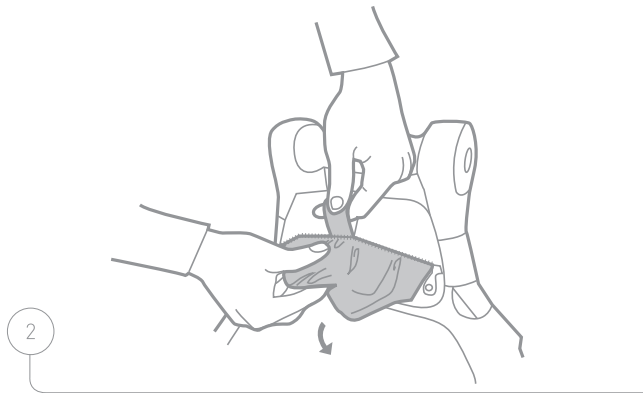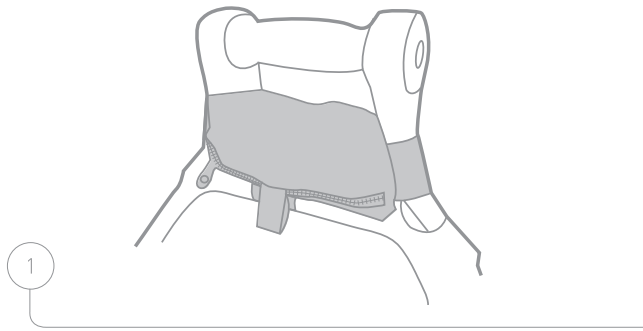

1. Install rainfly pouch to upper portion of trailer frame using the three Velcro straps. (The zipper should be located closest to the bags.)
2. Unzip the pouch and pull out the rainfly.
3. Cover bags with rainfly, stretching the edge of the rainfly around the back of the trailer frame and pulling the shock cord over the tie-down buttons by pulling on the tab.
4. Pull elastic loop over kickstand and secure rainfly under shelf.
5. Tighten the shock cord as necessary to secure rainfly for smaller loads.