
## RANS Rear Rack w/adapter for Dynamik & Zenetik



- (1) Rack
- (2) Adapter T-bar
- (3) 8-5mm washers
- (4) 2- 5mm nuts
- (5) 8-5mm socket cap head screw
- (6) 2 Adapter plates

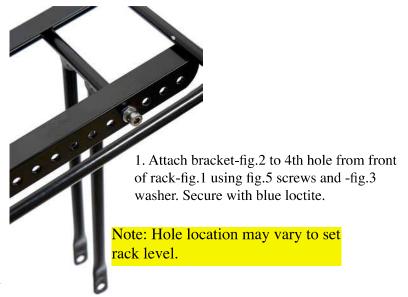

2. Remove QR and reinstall with ends of bracket in place.

Zenetik



3. Locate the bracket holes at the rear dropouts.




Dynamik

Note: On left side of Dynamik make sure you locate the two lower aft holes on the left side

4. Install Adapter plate-(fig.6) to each dropout at aft side using screw (fig.5) and one washer (fig.3). Secure with blue loctite.

Note: Be sure that the screws do not extend past through the thickness of the dropouts on either side of the hub.



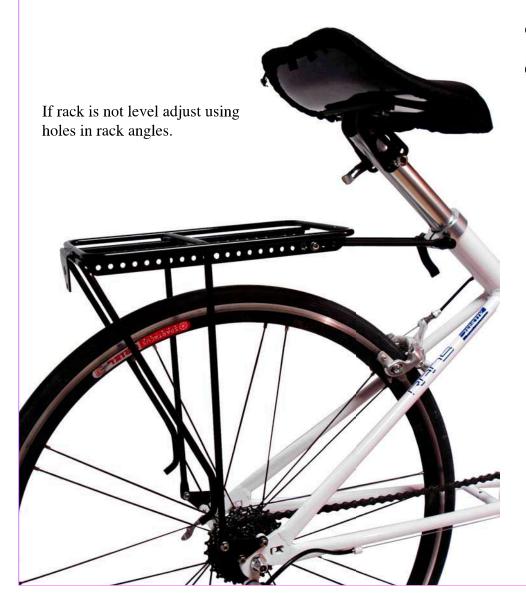

5. Bolt rack legs to remaining hole with screw (fig.5) and washer (fig.3) secure with nut (fig.4)

on each side.



