

OW Installation Guide

Revision date: 14/10/20




Instructions

 Please read entire instruction sheet before you start.


Step 1

Remove the bracket from the rear of the screen, by removing the locking bars that hold it in place. This will then slide off.

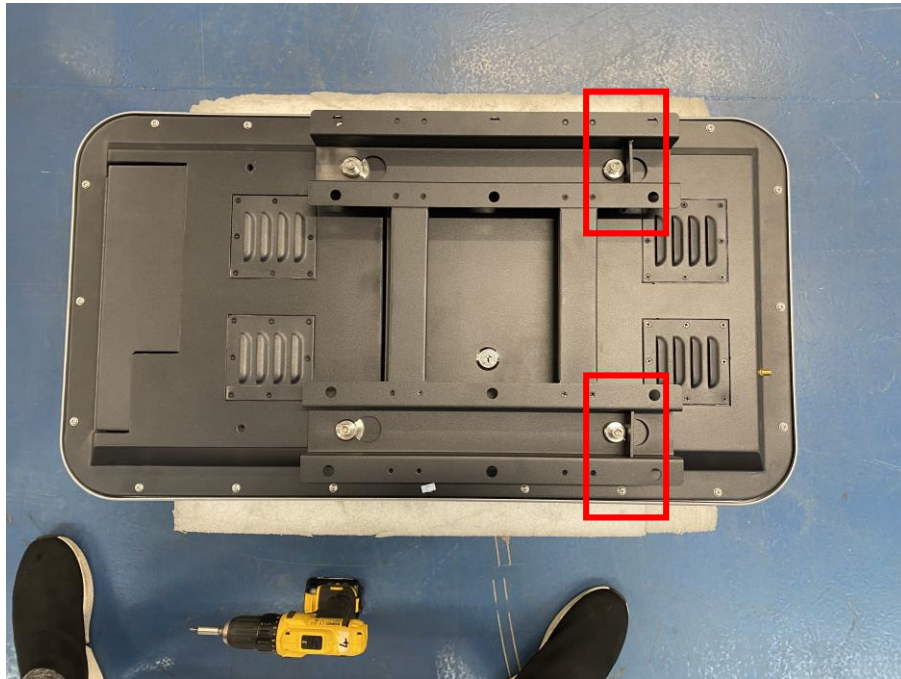

Step 2

Take the measurements where you want to mount the screen, and mark out the screw holes on the wall through the holes on the bracket.

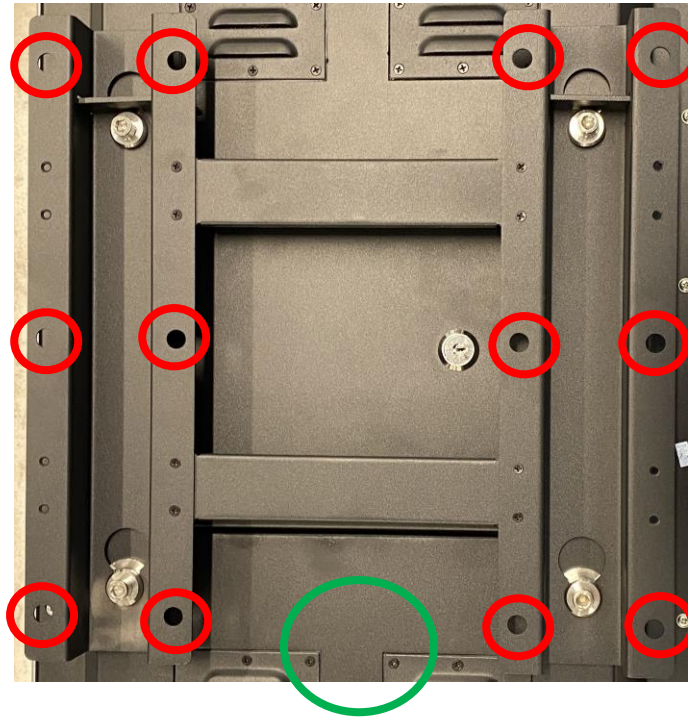

Step 3

Use an SDS drill to drill the holes into the wall, ensuring the holes are the same depth of the screws that will be going into it (plus the wall plugs).



Please ensure that the Power Cable and (if needed) Network Cable are in place prior to the beginning of the installation. This will require holes to be drilled through the wall for the cables to come through.

It is best to have the hole for the power cable (and LAN cable) in line with the bottom row of bracket holes, shown by the Green outline above. This will hide the cables behind the screen.

Step 4

Insert the wall plugs into the holes you have drilled into the wall.

Step 5

Have someone hold the bracket in place, while you secure it with the screws into the wall plugs.

Step 6

Place the screen onto the bracket, slotting it into the 4 holes on the bracket and allowing it to drop down into place.

Note: Ensure the vents on the back of the screen remain pointing down; any damage as a result of the vents not being in the correct orientation will not be covered under warranty.

Note: When attaching the screen to the bracket, ensure that the mounting peg slots onto the bracket correctly; the bracket should slide into the middle of the mounting peg, shown below:



Step 7

Re-insert the locking bars shown in Step 1. You can then lock this in place with a padlock or other locking mechanism, but this does not come with the screen.



Step 8

Ensure the port cover is fully attached at the bottom of the screen to ensure the integrity of the ports.