



HARDWARE:

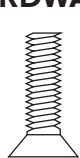

25mm

QTY
8

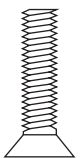

30mm

QTY
2



Project Aero
Spacer


QTY
2



QTY
10



QTY
10

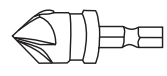

Countersunk
Drill Bit

QTY
1

STEP 1:

To begin installation, drive your car up a pair of ramps or jack up the front end to help give access and clearance to removing the bumper.

Once your bumper has been removed, sit it on a pair of stools with the Front Splitter Lip placed underneath it. Using clamps will help keep the Front Splitter Lip and bumper still. Now mark out your holes with a pen. **An optional countersunk drill bit has been provided incase you would like to add/ or relocate holes elsewhere for mounting.**

With a drill bit the same size as the hardware (6mm/6.5mm) drill out all your holes. Place the countersunk bolts through the holes.

STEP 2:


Place a washer on the back side as well as the nut, do up each nut and bolt loosely as you work your way along the front bumper. It is key not to tighten until the front splitter lip is completely attached to the car.

When you get to the third hole from the side that requires a 10mm spacer (provided) use the 30mm countersunk bolt.


STEP 3:

***Please note, we found the bolt hole with the spacer to be optional when we were using the prototype Front Splitter for the Evo X.** Once the front splitter lip has been fitted. Go through and tighten all the hardware. Check the front splitter lip has been secured, firmly press on it to make sure it has been attached correctly. Now you can enjoy your new Project Aero Mitsubishi Evo X Front Splitter Lip! Make sure to tag us on Instagram and Facebook for your chance to be featured.

@project.aero / info@projectaero.com.au

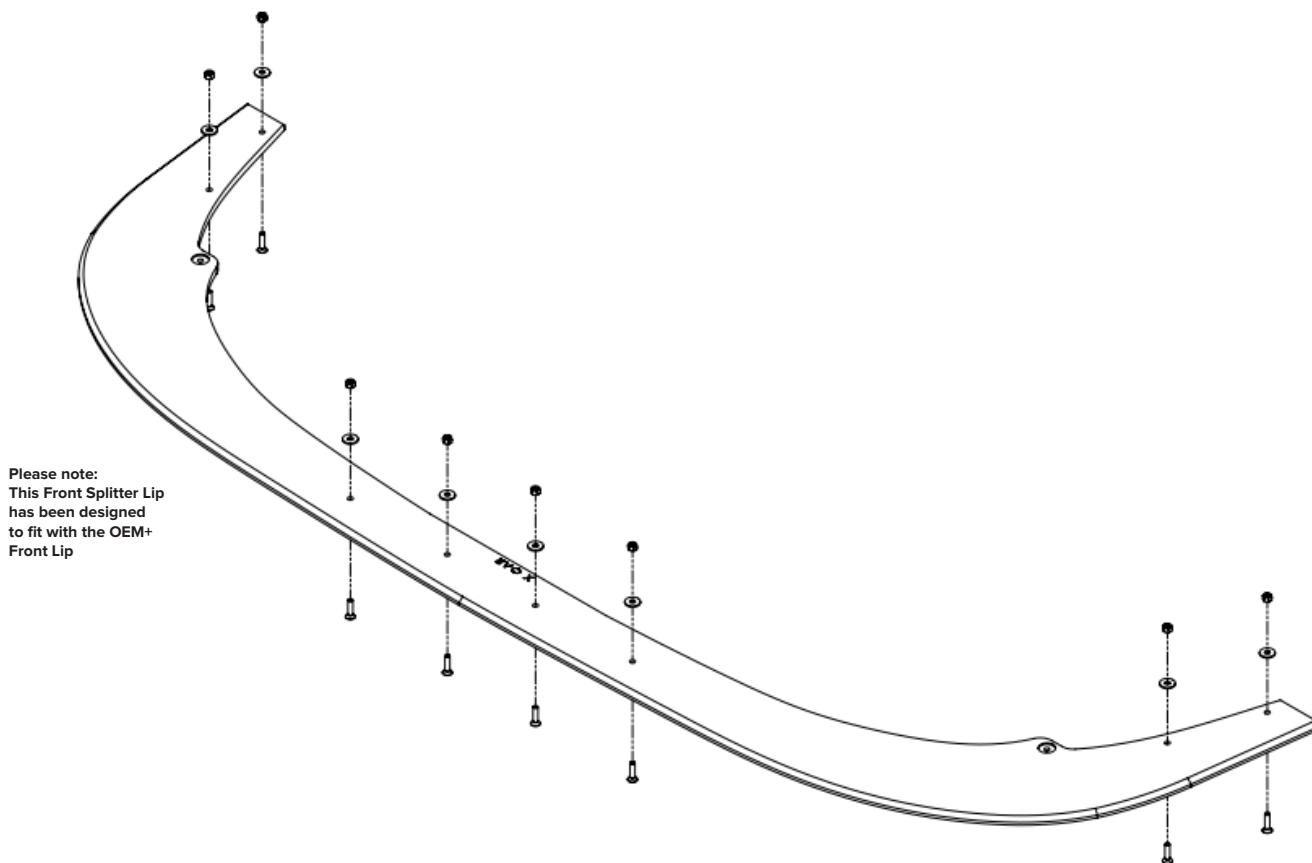

HARDWARE:

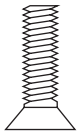

25mm



QTY
12

QTY
12

QTY
12

STEP 1:

Before you can install your new Project Aero Mitsubishi Evo X Side Skirt Extensions, you will need to remove your side skirts from the car.


STEP 2:

Place your side skirt onto the side skirt extension. Make sure you line it up correctly.

TIP: Doing both side skirts at the same time helps. If you have access to a ruler or measuring tape this will assist in getting both sides accurate and even.

Once you are happy with the placement, with a pen or texter out all the holes.

After you have marked the holes, use a drill bit the same width as the hardware to drill out the holes you have marked.

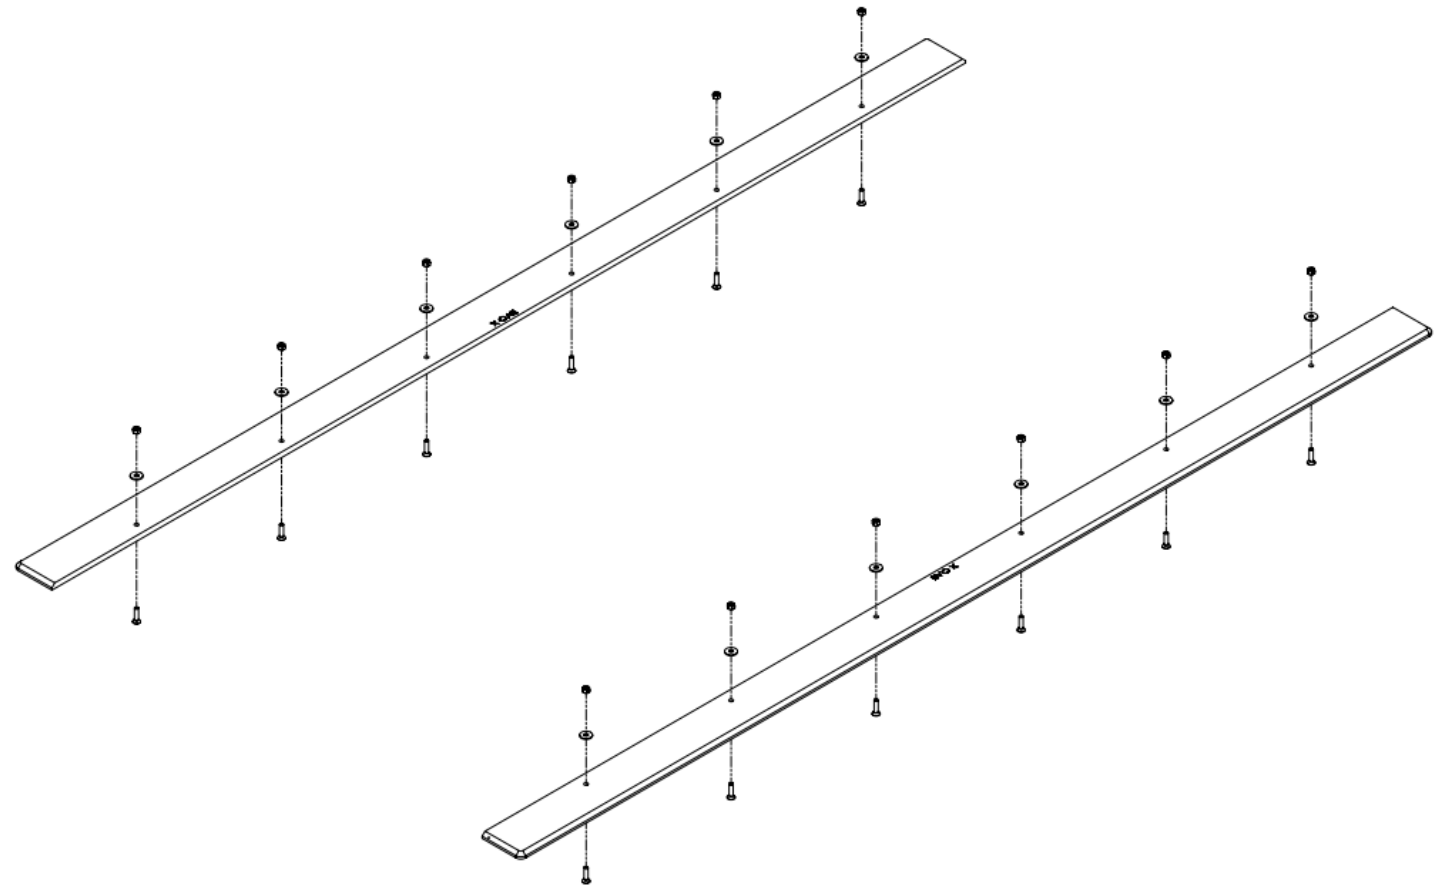


STEP 3:

Slide the 25mm countersunk bolts through the holes and place a washer and nylock nut on the back to secure. Do not over tighten.

Repeat Steps 2 and 3 for the other side skirt. Now you can re-attach your side skirts back to the car.


And you're done! Enjoy your new Project Aero Mitsubishi Evo X Side Skirt Extensions! Make sure to tag us on Instagram and Facebook for your chance to be featured. @project.aero / info@projectaero.com.au

HARDWARE:

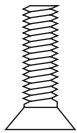

40mm

QTY
2

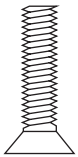

50mm

QTY
2



Project Aero
Spacer

QTY
4




QTY
4



QTY
4

Please note:
Project Aero Spacers
are optional. These
are designed to fit the
aftermarket OEM+
Rear Pods.

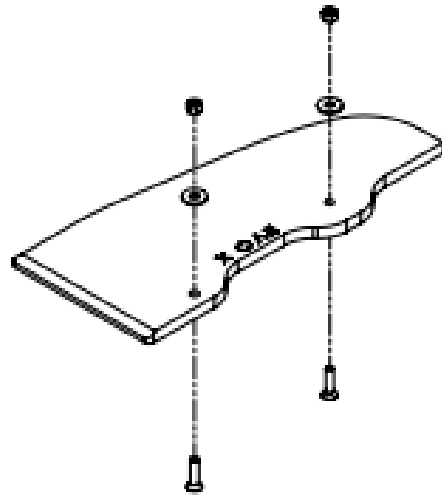

STEP 1:

Hold up the Mitsubishi Evo X Rear Spats/Pods to the rear bumper. Having an extra pair of hands to help will make the process quicker.

Mark out your holes ready for drilling.

STEP 2:

Place 1 x 40mm bolt through the hole closest to the wheel, use the other 50mm bolt for the remaining hole and secure tightly.

TIP: If you need extra space, take some clips off the rear plastic splash guard/plastic, this will help gain access to the nut with a spanner.

STEP 3:

If you removed the OEM clips to gain access, be sure to clip this back into place. Repeat steps 1, 2 and 3 for the other side of the rear bumper. Now you can enjoy your new Project Aero Mitsubishi Evo X Rear Spats/Pods!

Make sure to tag us on Instagram and Facebook for your chance to be featured.

@project.aero / info@projectaero.com.au

