


HARDWARE:




25mm



QTY
8



QTY
8

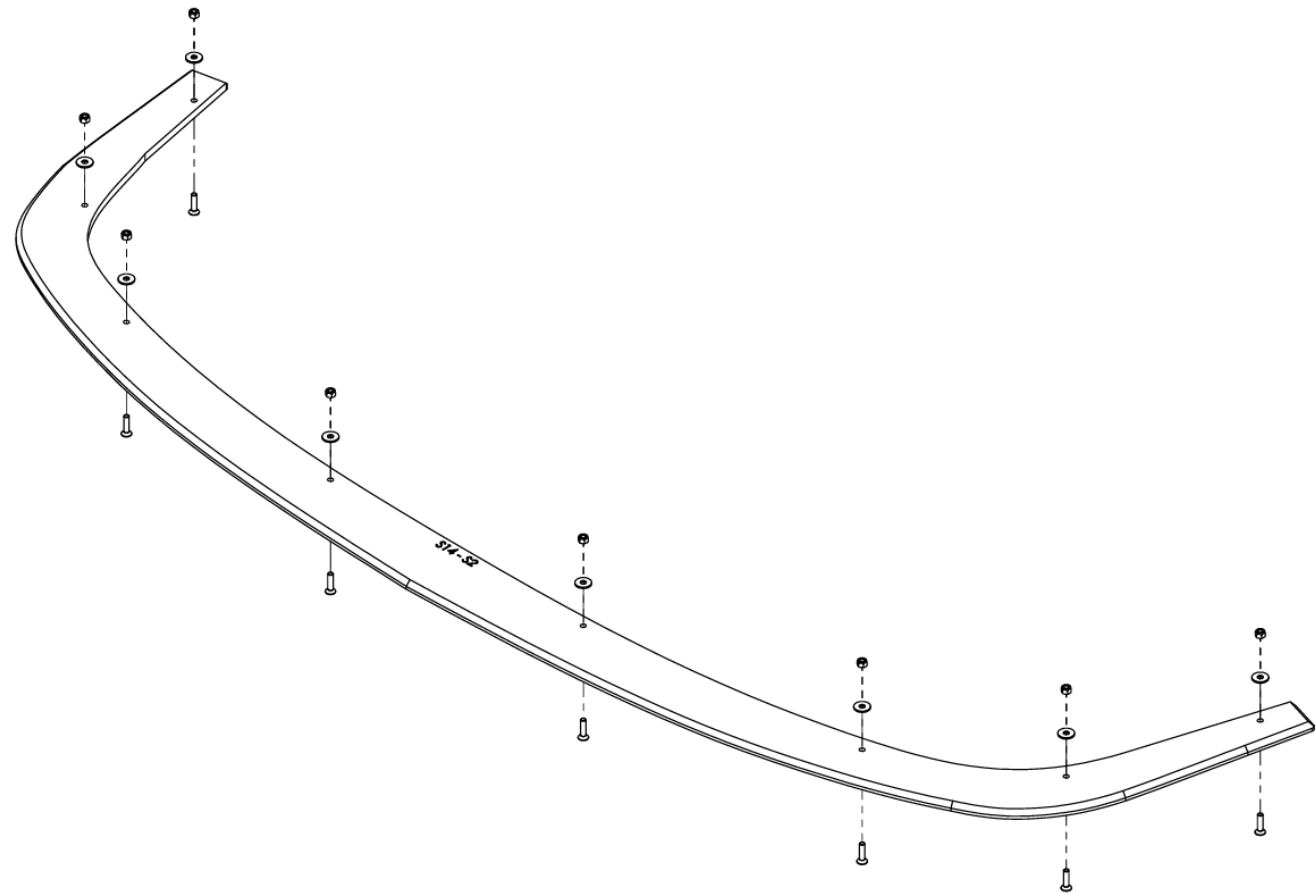

STEP 1:

Jack up the front of the car and place it on jack stands. Remove your Nissan Silvia S14 S2 front bumper.

*Please note, this front lip does not attach to the factory black plastic lip at the bottom of the bumper. This lip is designed to fit to the bumper and not to aftermarket or OEM lips.

STEP 2:

Place the front bumper on a pair of stools and place the front splitter lip underneath it. Line it up and use some clamps to hold it in place. Mark out the pre-drilled holes in the lip with a pen or marker.

Using a drill with a 6.5mm drill piece, drill out all your holes. Starting closest to the wheel arch, put in the 25mm bolt, followed by the washer and nylock nut. Do up loosely.

STEP 3:

Continue the same process working your way around the front of the bumper. Do not tighten up hardware just yet. Finger tight is fine.

There is no need for the use of locktite. All hardware is zinc plated and tucked into the lip.

STEP 4:

Once the front splitter lip has been fitted. Go through and tighten all the hardware. Make sure to not over tighten. Once the front splitter lip has been secured, firmly press on it to make sure it has been attached correctly. Re-attach your front bumper back onto the car. Now you can enjoy your new Project Aero S14 S2 Front Splitter Lip! Make sure to tag us on Instagram and Facebook for your chance to be featured.
@project.aero / info@projectaero.com.au