




PSCBATH



SOLIDNEXT PS IDV 280285



SOLID SURFACE WALL HUNG VANITY

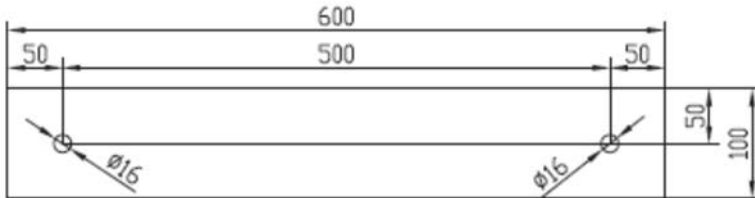

DEAD VIEW

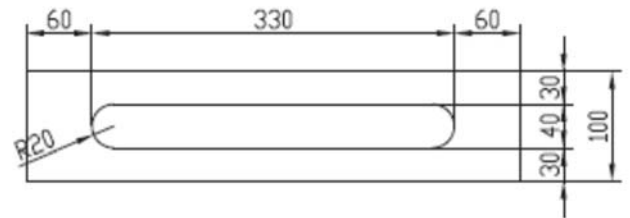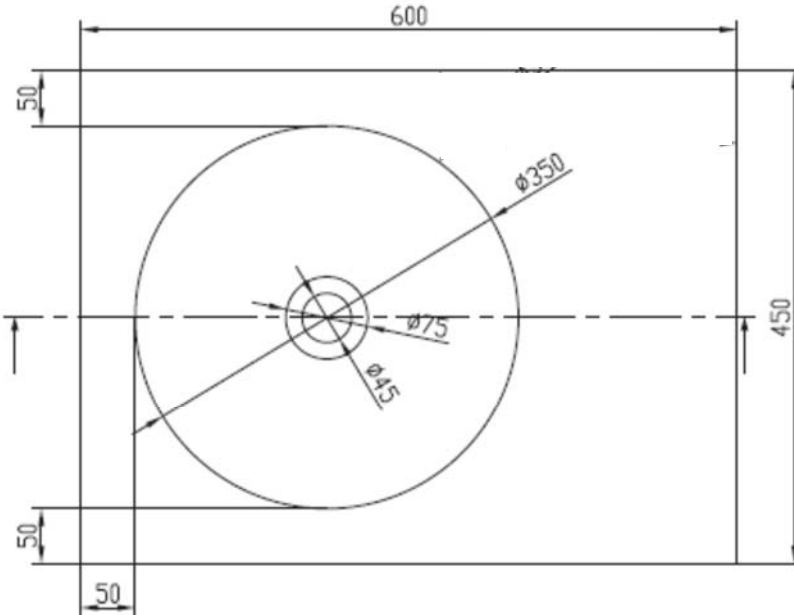

SIDE VIEW



SOLIDNEXT PS IDV 280285 24"x 18"x 4" 37 LBS

MATTE WHITE WITH ROUND BASIN.
LEFT OR RIGHT REVERSIBLE WITH 1 TOWEL BAR.
MOUNTING HARDWARE INCLUDED. NO FAUCET HOLE.
DRAIN & P-TRAP NOT INCLUDED.




Project Information

Job Name: _____ Date: _____ Type of hardware: _____


Comments: _____

Approved: _____


INSTALLATION INSTRUCTIONS

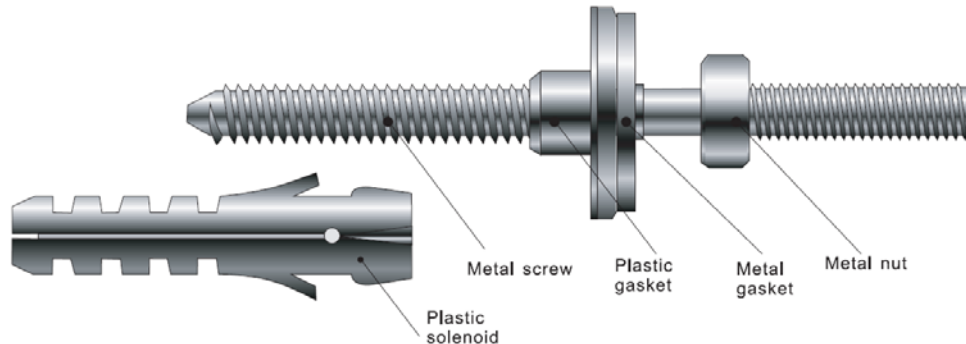


Note: These fixings are suitable for solid walls only. Plasterboard or stud walls may require specialist fixings (not supplied). Caution: care should be taken when drilling walls and floors to avoid any sunken wires or pipes.

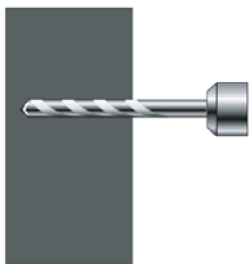


1. Drill two holes in the required position on the wall using a 14mm masonry drill bit, to a depth of 75mm

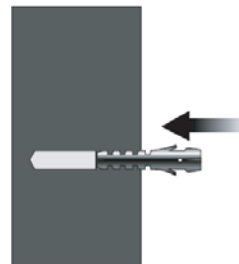


2. Push a wall plug into each hole

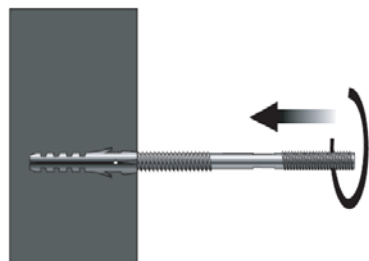

3. Screw a fixing bolt into each fixing plug using a 8 mm spanner until the spanner contacts the wall

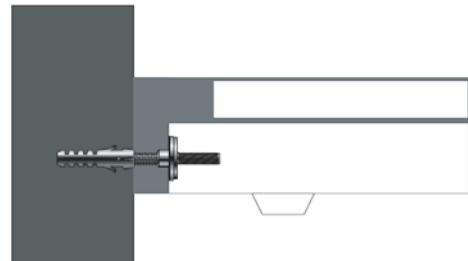

4. Place the basin in position against the wall, locating the fixing bolts through the holes in the rear of the basin. Push a plastic washer, followed by a metal washer, onto each fixing bolt

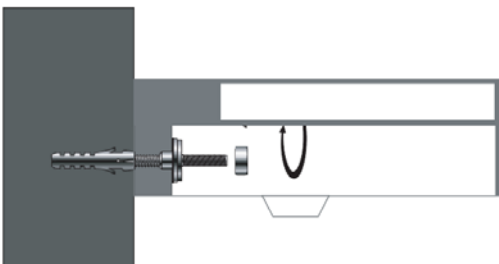

5. Screw a metal nut onto each fixing bolt to secure the basin. Caution: Do not over-tighten, as this may damage the materials.

