






ASSEMBLY INSTRUCTION MODEL #5316-AW

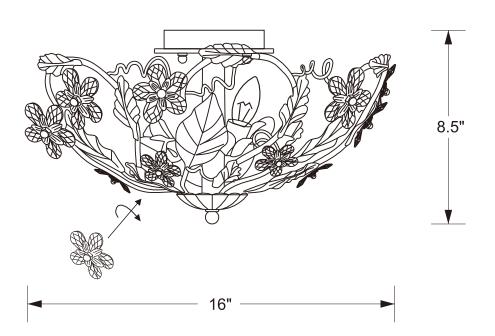

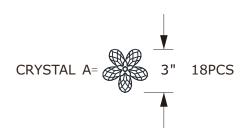



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 6 -Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS DAMP RATED.


How to Install

- 1. Attach the crystal flowers onto the metal frame by twisting clockwise.
- 2. Install bulbs(not applied).
- After safely attaching fixture into outlet box, proceed to connecting the power.





PART NUMBER MODEL #5316-AW

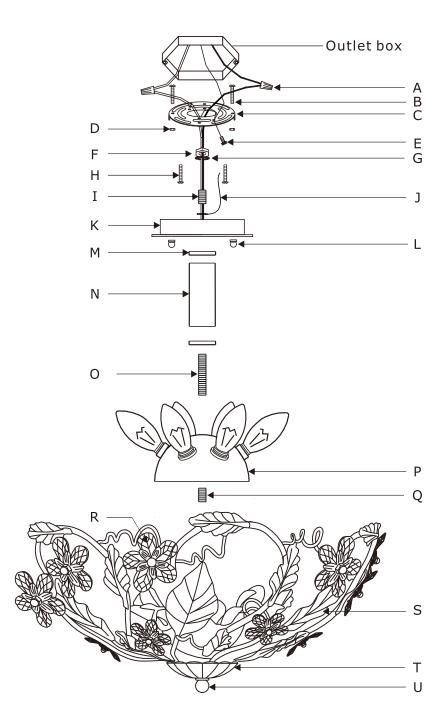

Part Number

- A. (2) Wire Connector
- B. (2) Screw
- C. (1) Mounting Plate
- D. (2) Hex Nut1
- E. (1) Ground Screw
- F. (1) Hex Nut2
- G. (1) Lock Washer
- H. (2) Outlet Box Screws
- I. (1) Threaded Pipe1
- J. (1) Ground Wire
- K. (1) Canopy(W4.5", H1") #XRE5316AWCAN4.5IN
- L. (2) Ball nut
- M. (2) Metal Flat Cover
- N. (1) Metal Tube
- O. (1) Threaded Pipe2
- P. (1) Lighter Cluster
- Q. (1) Threaded Pipe3
- R. (18) Crystal Flower
- S. (1) Metal Frame
- T. (1) Bottom Cap
- U. (1) Finial #XRE5316AWFIN