






ASSEMBLY INSTRUCTION MODEL# KAR-90902-AG-CL-MWP

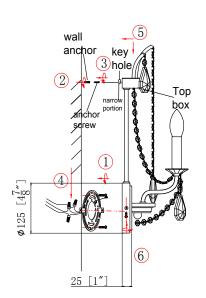

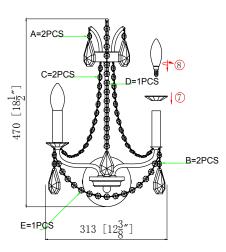





All electrical components must be

installed by a licensed electrician

in accordance with the National

Electric Code and the appropriate

local electrical codes.



You will need 2 Candelabra Base Bulb 60 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE(This fixture is Dry rated)

How to Install

- Measure the spacing between the center of the backplate and the center of the narrow portion of the key hole on the backside of top box.
- 2. Mark a point on the wall with the same distance as measurred above between the center of outlet box and it.
- Drill a hole at the marked point and insert the wall anchor. Screw the anchor screw into the wall anchor using a screwdriver and leave approximately 1/8" of threads exposed
- Install the mounting plate onto the outlet box and connect the wires.
- **5.** Hook the top box of the fixture onto the anchor screw. Secure the backplate onto themounting plate using the screws.
- 6. Dress the crystal as illustrated.
- 7. Slide the bobeche over the candle sleeve.

Crstal Sets

- A. 2sets 1*14mm+1*63mm drop
- B. 2sets 2*14mm+1*63mm drop
- C. 2sets 15*14mm
- D. 1set 14*14mm+1*63mm drop
- E. 1set 17*14mm





PART NUMBER MODEL KAR-90902-AG-CL-MWP

Part Number

Part Numbers

A. (1)-Mounting Hardware

B. (3)-Scroll arms, L2"

C. (2)-Candle Sleeve,L3 1/2" (XBN90902AGCDL3.5IN)

D. (1)-Center stem,L9 3/4"

E. (2)-Lamp arms,L8"

F. (1)-Backplate,D4 7/8" X H1" (XBN90902AGBACKP4.875IN)

G.(1)-Final

H. (2)-Crystal Bobeche,D 2 3/8" (XBN90902BOB2.375IN)

