

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL#MOQ-A3692-PN

WARNING:



Electrical Danger




Turn Power off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.




You will need 2- Medium Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE

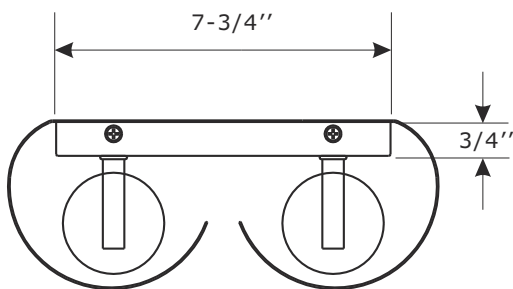


TOP VIEW

How to install

1. Install the metal shade to the outlet box using two knurled nut screws.
2. Install backplate into the metal shade, and secure with the screws.
3. Install the bulb(not included) into socket.

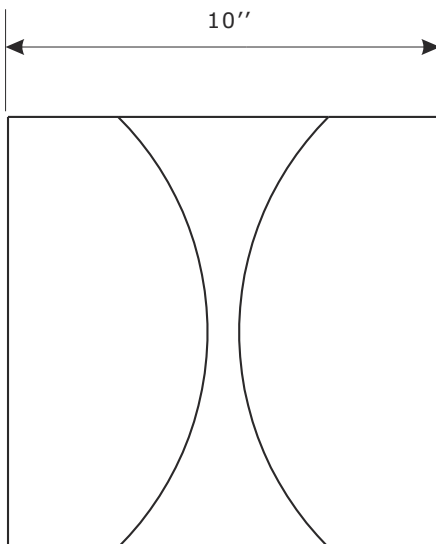

FRONT VIEW

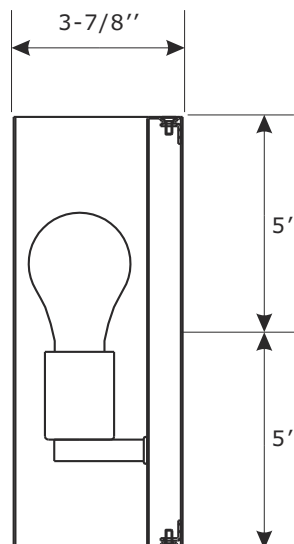

SIDE VIEW

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL#MOQ-A3692-PN

Part Number

Part Numbers

A. (1)-Mounting hardware

B. (1)-Metal shade

C. (4)-Screw

D. (1)-Backplate L10''xW7-3/4''xD3/4'' #XRF3692PNBKP10IN

E. (2)-Socket

