




WARNING:

ASSEMBLY INSTRUCTION MODEL#XAV-B8305-MK

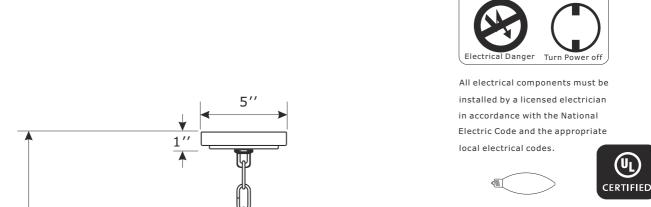


How to install

 ${\bf 1.}\ {\bf Determine}\ {\bf the}\ {\bf preferred}\ {\bf hanging}\ {\bf height}\ {\bf and}$ adjust to the chain required.

You will need 3- Candelabra Base Bulb 40 Watts Recommended 60 Watts Max.

- 3. Install the bulb(not included) into the socket.

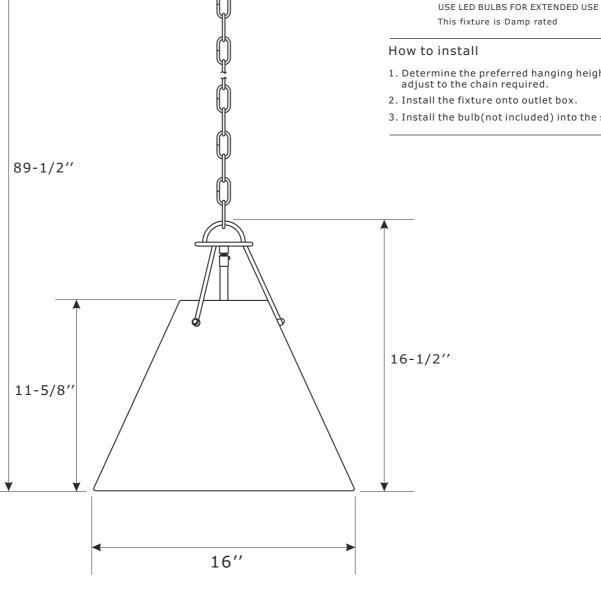





PART NUMBER MODEL#XAV-B8305-MK

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy W5"xH1" #XRF8301MKCAN5IN
- C. (1)-Collar Loop
- D. (1)-Collar ring
- E. (1)-Chain -L72 $^{\prime\prime}$, 3.8mm thick #XRF8301MKCHA3.8MM
- F. (1)-Loop
- G. (1)-Socket
- H. (1)-Metal shade #XRF8305MKSHA12IN

