

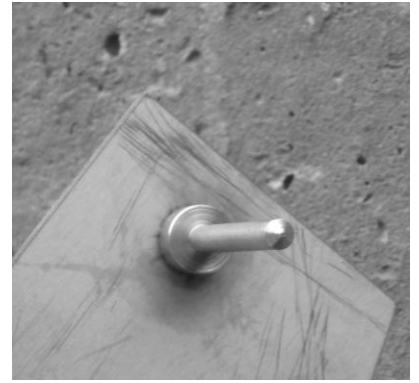
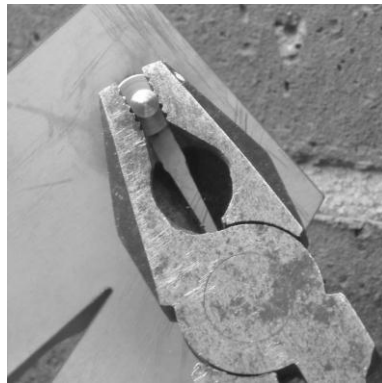


How to Install your House Number with Hidden Fixings

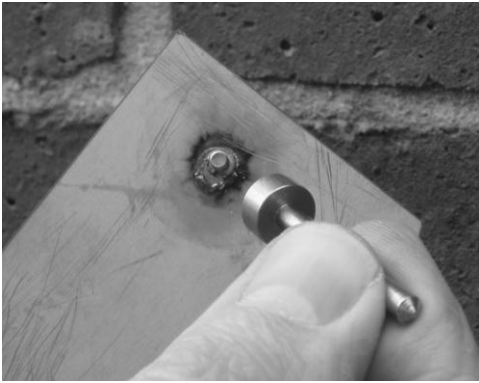

Stage 1. Having decided on the position of your house number, assemble the fixing pins as shown above. The pins can be tightened with pliers but do not over tighten. Epoxy resin [Araldite] may also be used at this stage for added permanence but tests have shown that if these instructions are followed accurately, the final assembly is secure to the extent that removal from the wall is not possible without hand tools.

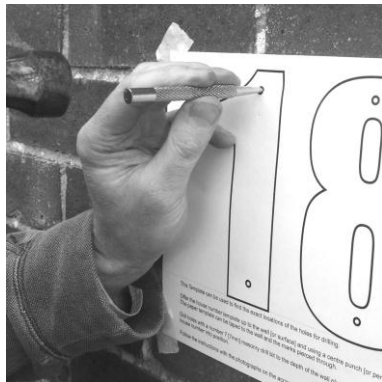

Stage 2. Put the house number drilling template up to the wall and tape it in place. Using a centre punch [or pencil] mark the fixing centres. Drill holes with a number 7 [7mm] masonry drill bit to the depth of the wall plug supplied. Insert the wall plugs and offer the house number into position.



Stage 3. Check the centre points of the hidden fixings are aligned with the two holes [and add a small pea sized amount of Araldite into the wall plugs at this stage if desired]. Gently guide the house number pins into the holes by hand ensuring that the front surface of the number stays parallel to the wall. **Push the number in by hand as far as it will go ensuring that it travels equidistant [both top and bottom] to the wall surface.** Finally, using a hammer with a piece of soft wood or fibre board to protect the surface of the house number, **gently** tap the house number until it stops against the base of the fixing pins.

Cleaning instructions: Your house number should only need an annual clean. Please **do not** clean your stainless steel number with anything other than a proprietary stainless steel cleaner such as 3M Stainless Steel Cleaner and Polish.