


## INSTRUCTIONS:

## 1A) When installing on a wall

Insert the anchors into the wall. Screw in nails using a screwdriver through the VESA canopy into the anchors until securely tightened.

## When installing on a pole 1B) Screw in nails through the VESA canopy into pole directly until

securely tightened.

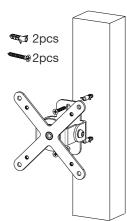

\varTheta 2pcs

