




Flush Tilted Wall Mount For 43"-90" Displays


ADD-FTWM

INSTRUCTION - MANUAL


CONTENTS:

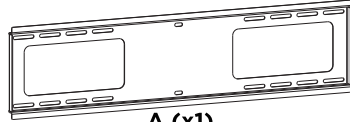

A (x1)



B (x1)



C (x1)



D (x1)



M-A (x4)
M6x14




M-B (x4)
M8x16



M-C (x4)
M6x30



W-A (x6)
ST6.3x55



M-D (x4)
M8x35



M-E (x4)
D8



W-B (x6)
Ø10x45



M-F (x4)
Ø15xØ8x5



M-G (x4)
Ø15xØ8x15



W-C (x6)

INSTALLATION:

VESA Compatible
200x200 300x200 300x300
400x200 400x300 400x400
600x400 800x400


90°
MAX
FLAT/CURVED

80kg
(176lbs)
RATED


**BELOW : TOOLS REQUIRED FOR INSTALLATION BUT NOT INCLUDED



1.1 Setting up Wall Mount Bracket on Dry Wall

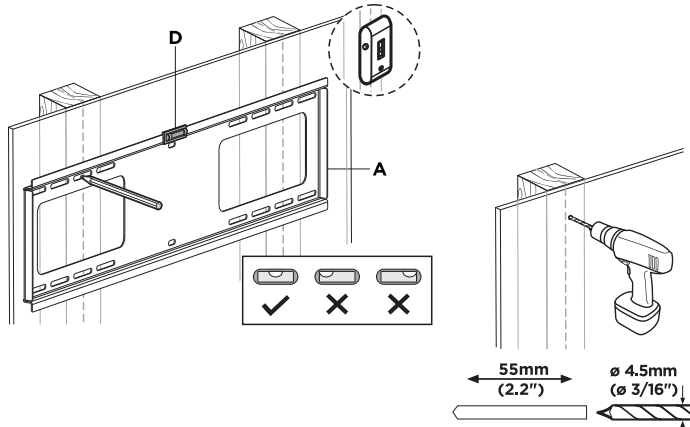


1.1A : Identify the wall studs and locate where you want to place your mount. Place the wall bracket (A) on the wall and with a level (not included), mark off the location of the drill points as illustrated above. My point is to align any of the holes to the spacing of the studs. Afterwards use a powerdrill (not included) with a 2.2" length and a 3/16" diameter drill bit, and drill where was marked.

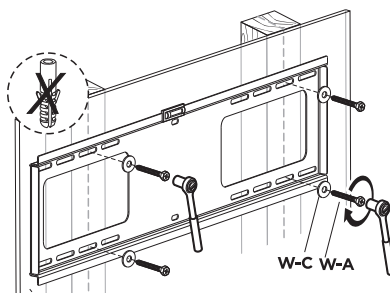


1.1B : While holding the wall bracket (A), align the 4 washers and screws (W-C, W-A) to the pre-drilled holes. Using a socket wrench tool (Not included), rotate in the screws until securely tightened.

1.2 Setting up Wall Mount Bracket on Solid Wall

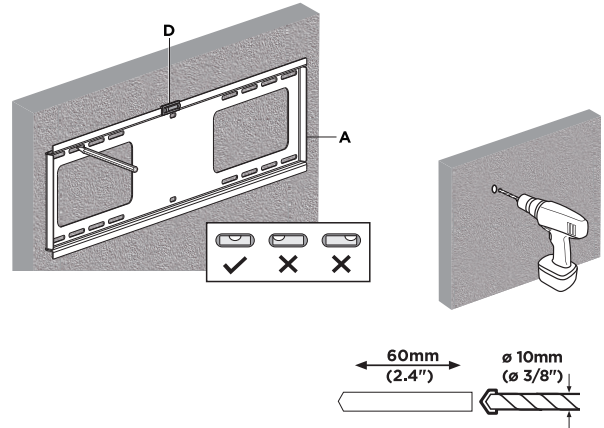


1.2A : Place the wall bracket (A) on the desired location on the wall and with a level (not included), mark off the location of the drill points as illustrated above. Afterwards use a powerdrill (not included) with a 2.4" length and a 3/8" diameter drill bit, and drill where was marked.

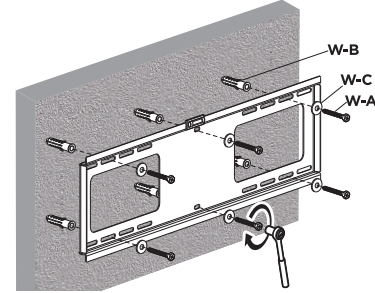


1.2B : Place the anchors (W-B) into the wall, and then place the wall bracket back on the wall. Align the 4 washers and screws (W-C, W-A) to the pre-drilled holes. Using a socket wrench tool (Not included), rotate in the screws until securely tightened.

2 Attaching Vertical Brackets to Back of TV

2A : Identify the VESA holes on the back of the TV(Not Included). Align the vertical bracket (B,C) as shown to the VESA holes. Using a screwdriver (not included), rotate in 1 out of the 2 combinations of screws, washers, screw ends and possibly spacers as illustrated in the call out box below. Each combination has different screw diameter and lengths and really depends on the TV that's being attached. Test out different screws and find the combination set that works for you. Make sure to rotate the screws until securely tightened.

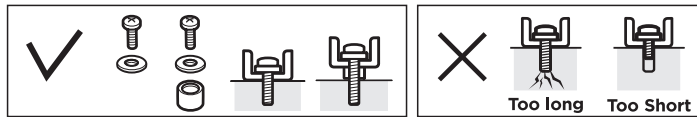


**TV is illustrated for example purposes and not included

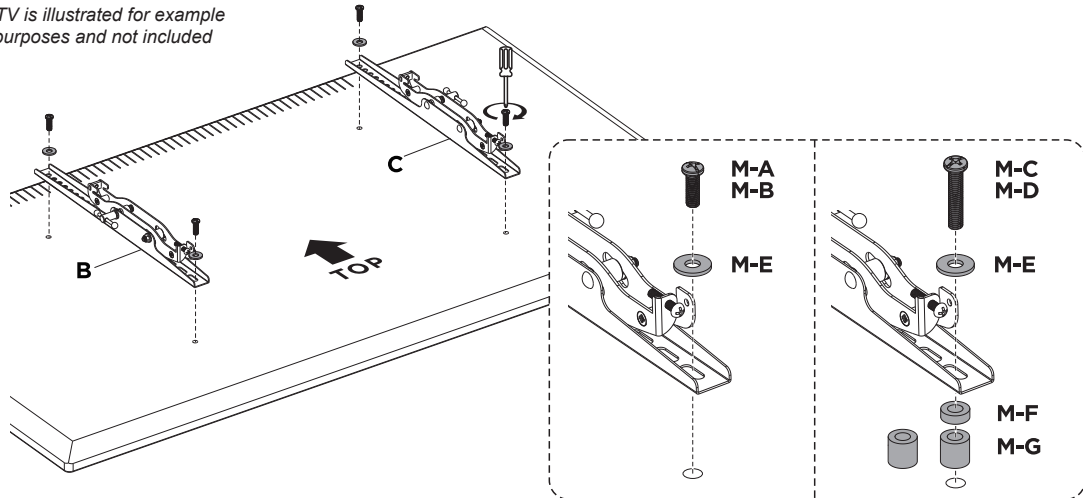


3 Mounting TV to Wall Brackets

3A : Pick up the attached vertical brackets to the TV, and latch onto the wall bracket from above as illustrated.

3B : Using a screwdriver tool, not included, tighten the integral screw at the bottom until the screw is securely tightened onto the wall bracket.

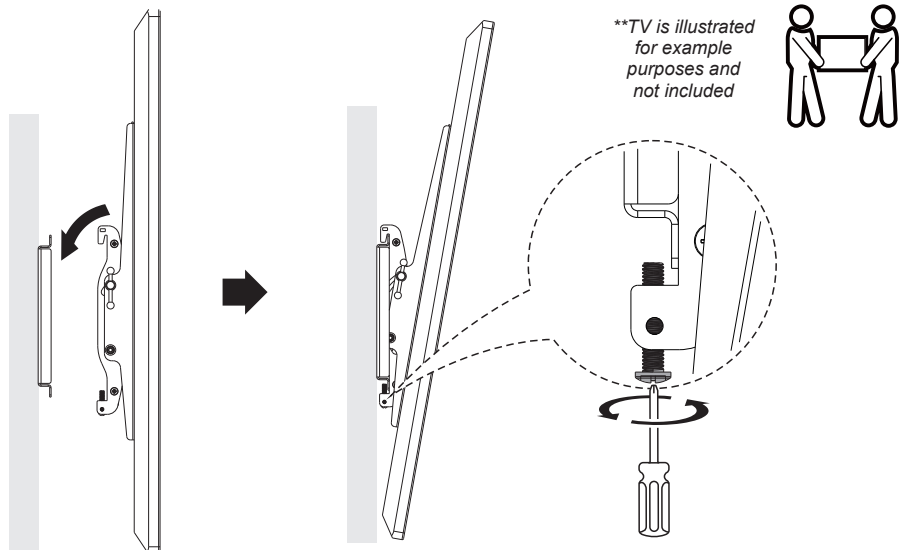

4 Adjustability

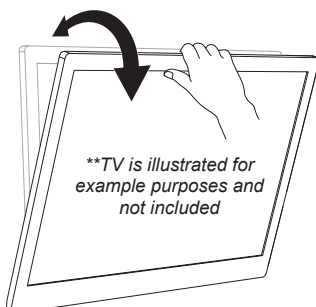

4A : Adjust your TV vertical angles by tilting up and down as illustrated.

5 Adjustability

5A : After tilt adjustments are made, locate the tighten lever component as shown to the right. Rotate and tighten to set your preferred viewing angle. Keep rotating until securely tightened.

