




# ADD-On Keyboard Tray for ADD-PARAFS / ADD-PARAFSW

ADD-KBTB / ADD-KBTW

## INSTRUCTION - MANUAL

### CONTENTS:

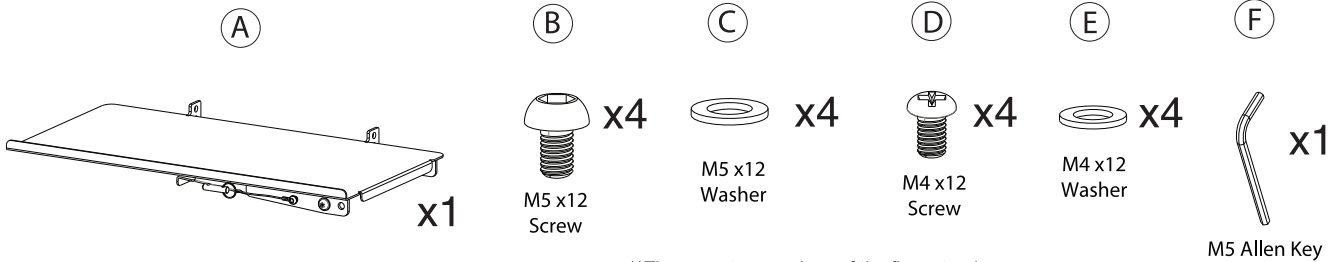

*\*\*There are two versions of the floor stand so both set of installation hardware have been included. One of the sets (either B&C or D&E) will be left unused.*

### INSTALLATION:

#### 1. Setting up Tray to Floor Stand

**\*\*Floor Stand is just for illustration and NOT INCLUDED**

**\*\*There are two versions of the floor stand so both set of hardware have been included. One of the sets will be left unused.**

(B) M5 x12 Screw

(C) M5 x12 Washer

**OR**

(D) M4 x12 Screw

(E) M4 x12 Washer

(F)

1A. Identify the holes on the side of the ADD-PARAFS/ADD-PARAFSW floor stands (not included).

Align to the holes of the vertical support components of the tray. Use the provided allen key tool (F) and rotate in screws (B) with washer (C) as shown. Do this twice on each side. Rotate until securely fastened.

There are two versions of the floor stand so both set of hardware have been included. If B & C doesn't work, try D & E components and use a screwdriver (not provided). One of the sets will be left unused.

#### 2. Expanding or Stowing Tray Extension

**\*\*Floor Stand is just for illustration and NOT INCLUDED**

2A. If not extended, find the tray extension on the underneath of the main tray body. Firmly adjust and fold out tray extension. Insert metal rod component into hole as shown to securely lock extension piece in place. When stowing away, you need to remove rod first, then fold up by rotating around the joint.