




LED Light Bar Add-Ons For CTA Digital PAD-PARAF Floor Stand

ADD-LEDPARAF


INSTRUCTION - MANUAL

CONTENTS:

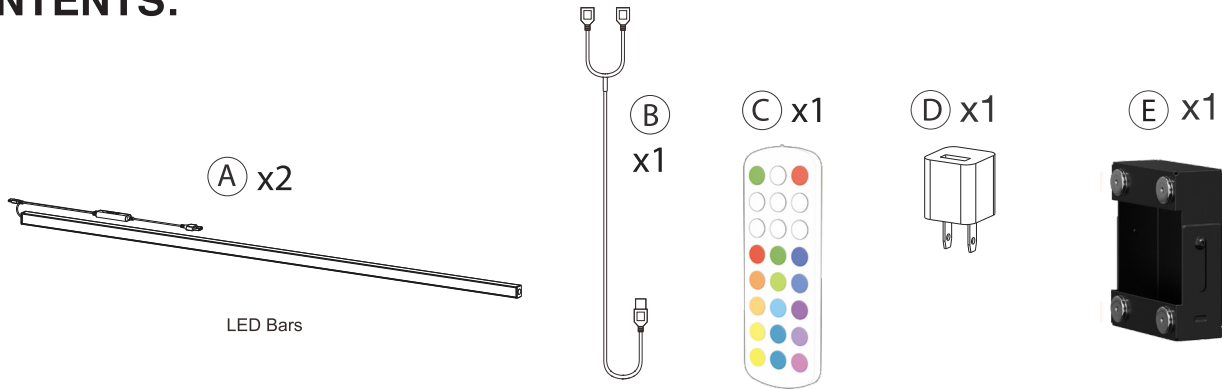

INSTALLATION:

1. Setting Up LED Bar

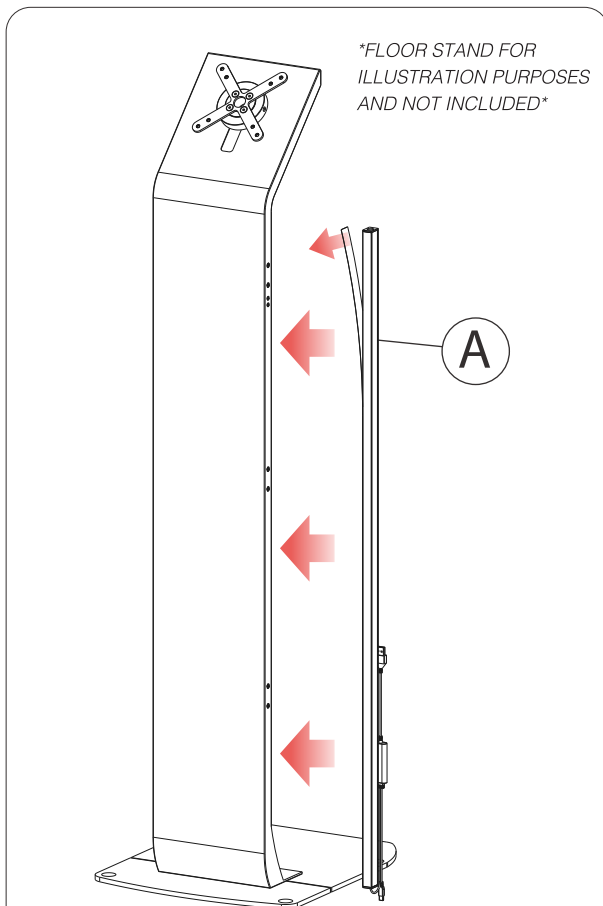

1A. Peel off the 3M adhesive sticker on the back of the LED light bar (A) as illustrated. Attach the LED bar onto the edge of the CTA floor stand (not included) with the wire end on the bottom side. Repeat same steps for the LED bar on the other side of the floor stand.


2. Attaching Wire Storage Component



2A. Take the cable storage (E) and magnetically affix onto the backside of the floor stand as illustrated above. Be sure to have the openings at the bottom side when orienting storage component .

3. Cable Routing and Cable Management

FLOOR STAND FOR ILLUSTRATION PURPOSES AND NOT INCLUDED

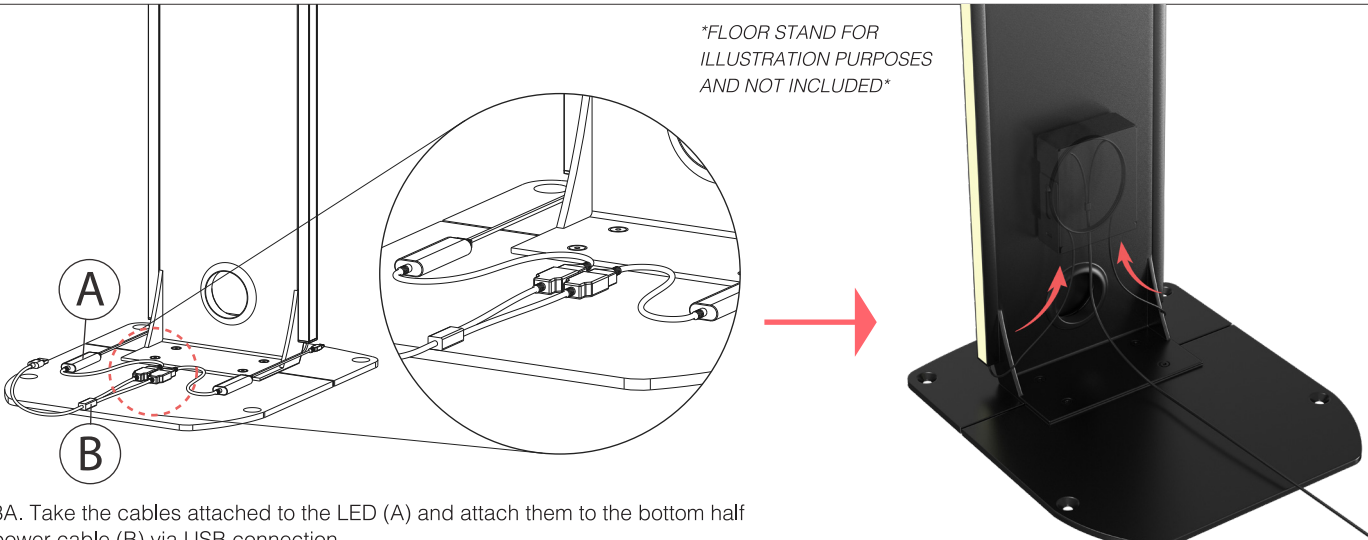


3A. Take the cables attached to the LED (A) and attach them to the bottom half power cable (B) via USB connection.

3B. Route all the cables into the cable storage component (E) as illustrated.

4. Cable Routing and Cable Management (Continued)

FLOOR STAND FOR ILLUSTRATION PURPOSES AND NOT INCLUDED

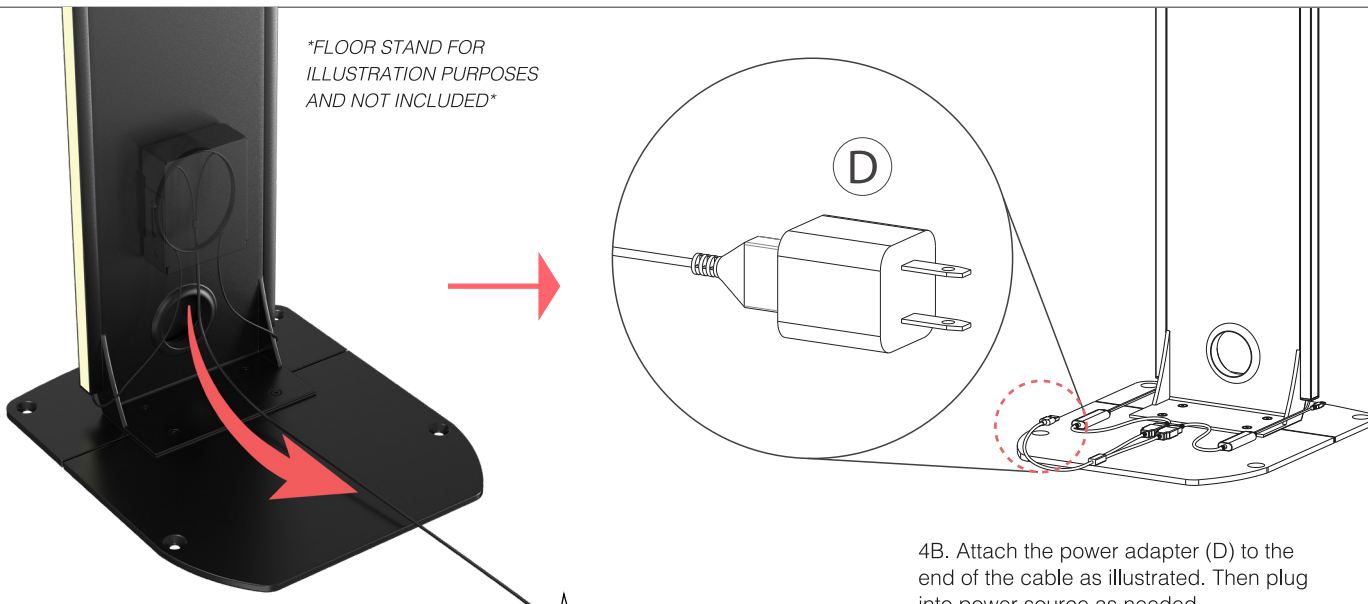

4A. Route the power cable out the bottom of the cable storage (E)

4B. Attach the power adapter (D) to the end of the cable as illustrated. Then plug into power source as needed.