




Probe Holder

For Ultrasound and Medical Equipment

ADD-PROBE


INSTRUCTION - MANUAL

CONTENTS:

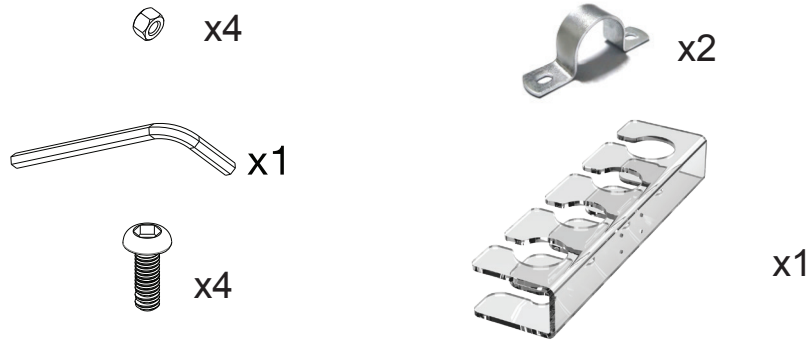

INSTALLATION:

Take the probe holder component and line up holes with the metal clamps. Using the provided allen key tool, insert the screws from the holder side, through the clamps, with the hex nut on the other end holding firm while screwing in the screw.

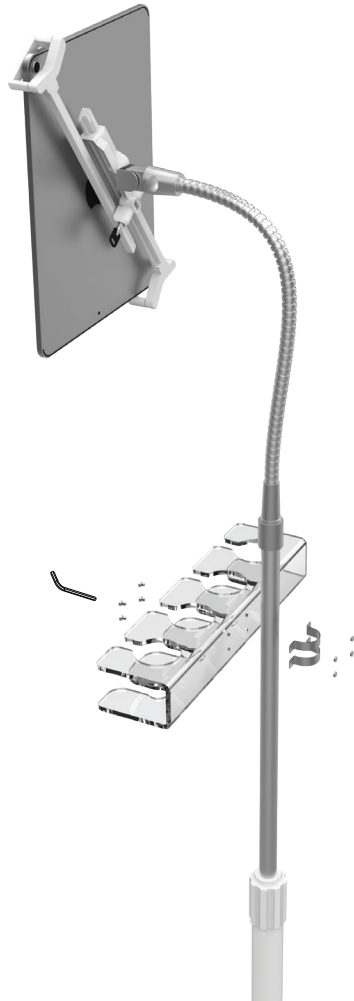

***Tablet Holder, Tablet and Floor stand are not included and are just shown here for example purposes.*