


Premium Security Wall & Desk Enclosure For Tablets


PAD-PARAWM

INSTRUCTION - MANUAL

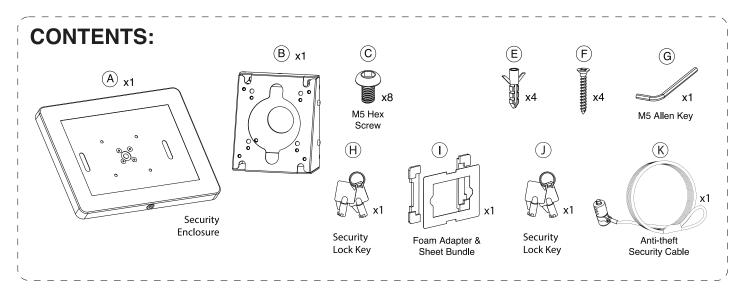


INSTALLATION:

1. Installing VESA Wedge to a Wall or Outlet

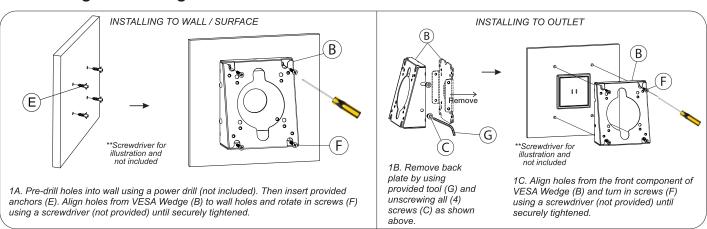

2. Setting up Enclosure to Wedge

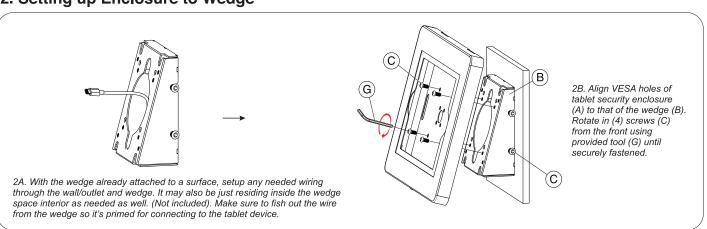


3A. Align enclosure holes (A) to VESA wedge holes (B) then turn in screws (C) using provided tool (G)







3. Setting up Device & Enclosure:

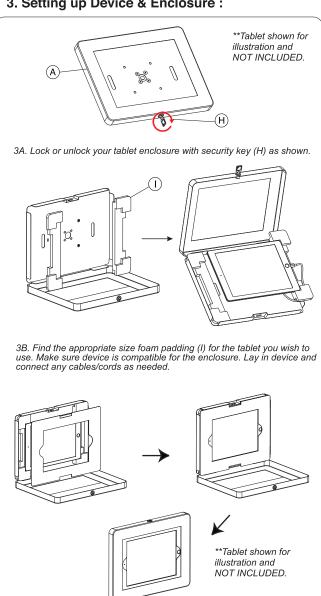

3C. If needed, lay-in correct included masking insert (I). Close and lock enclosure afterwards and you're set

4. Anti-Theft Security Cable Setup:

