





Easy Installation

01

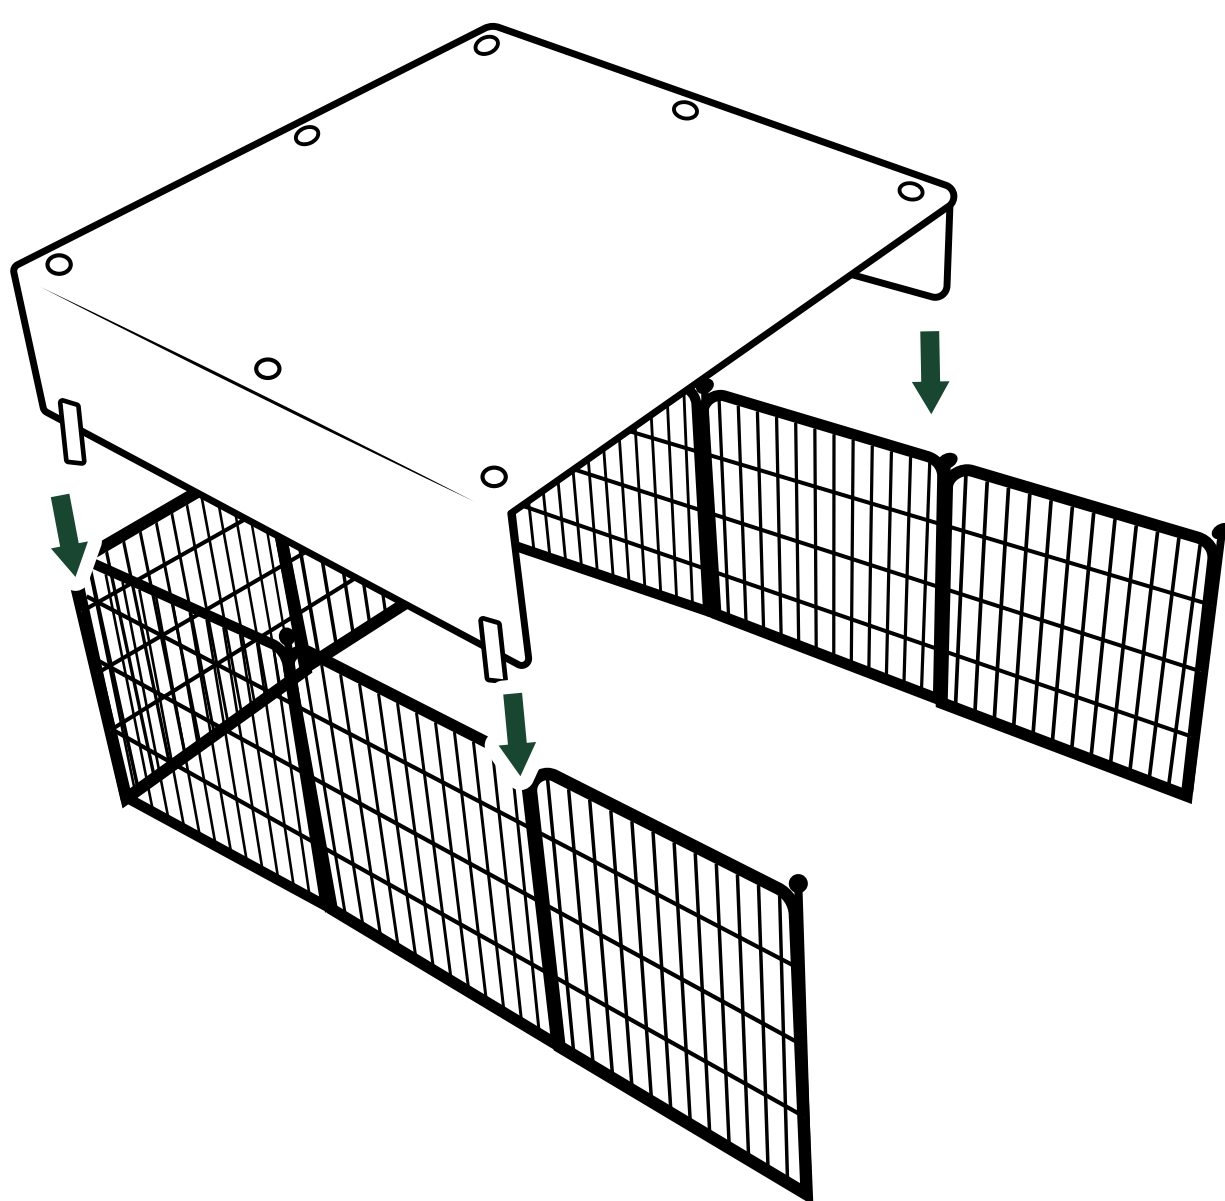


Align the playpen cover with the playpen.

02

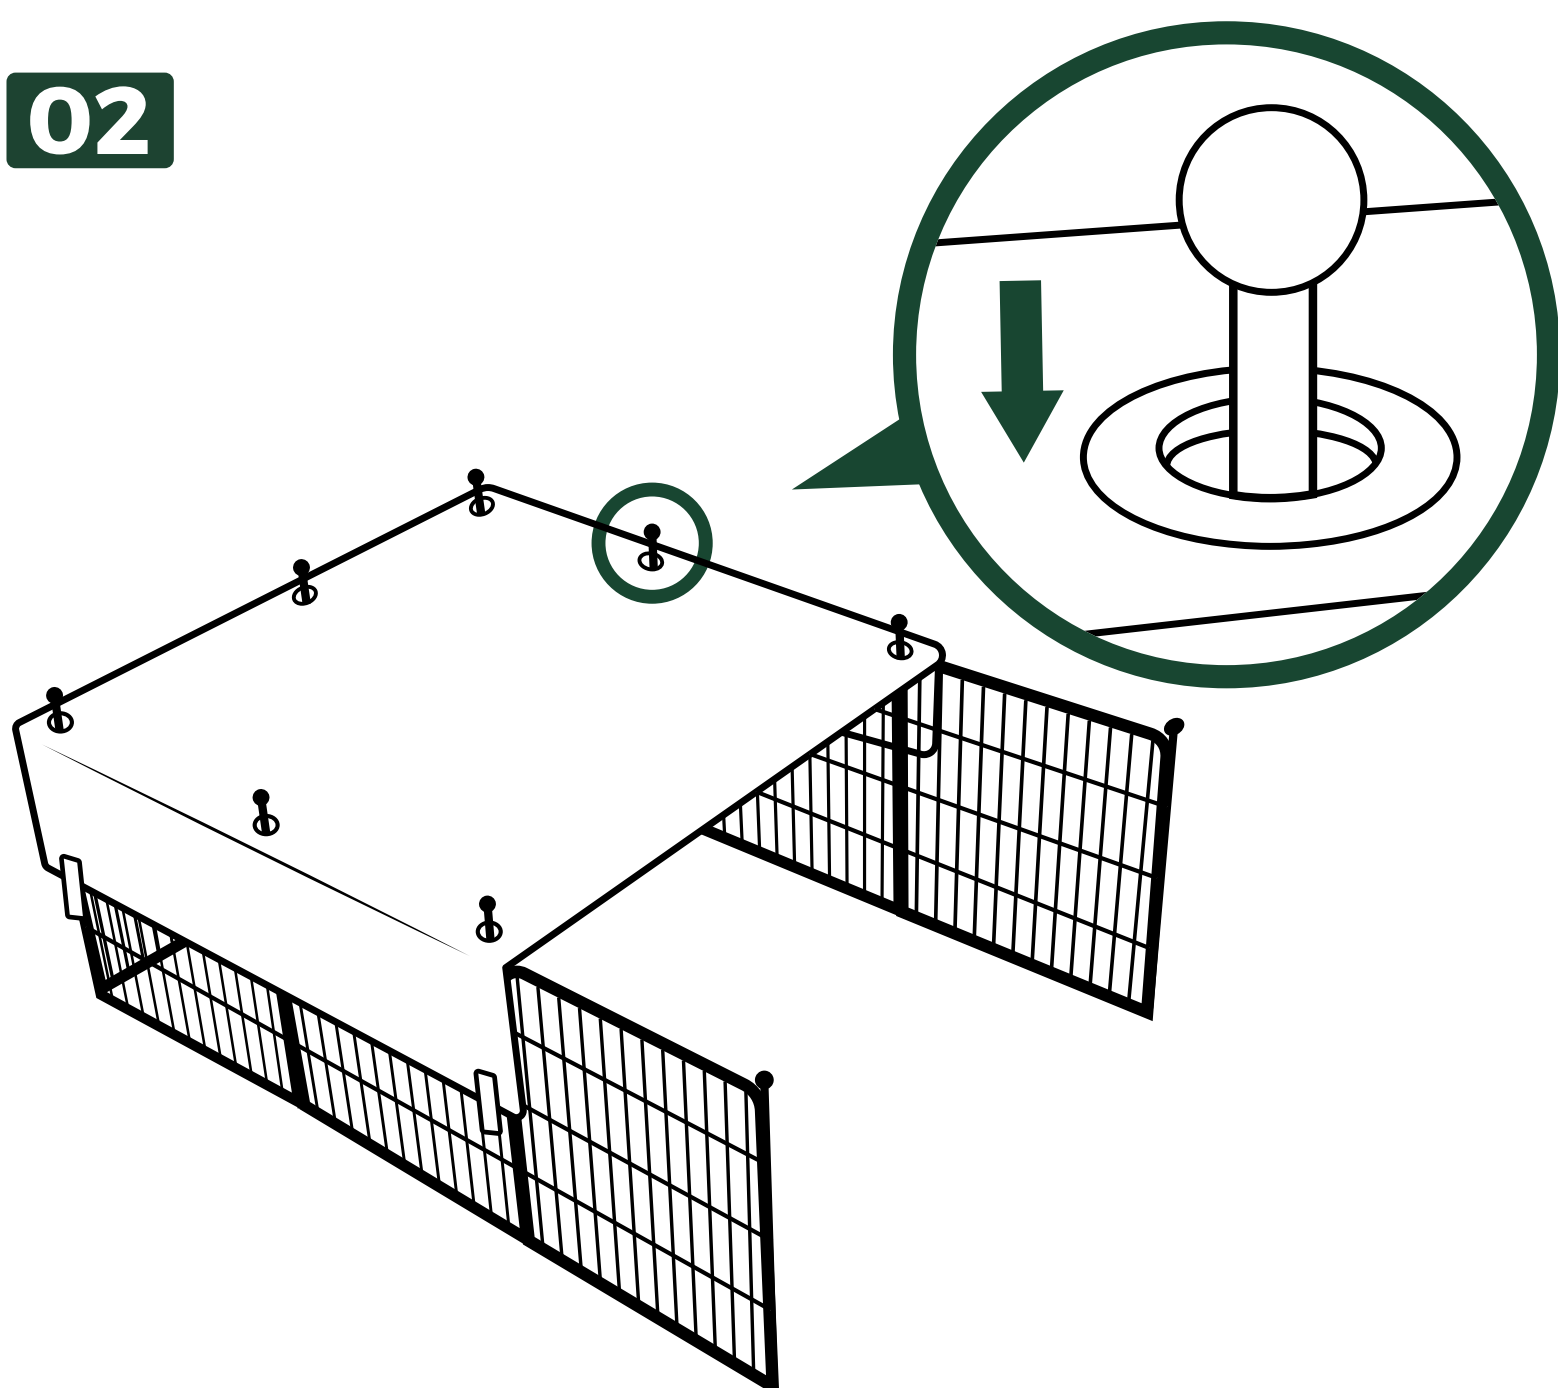

Insert the ring into the rod's head.

03

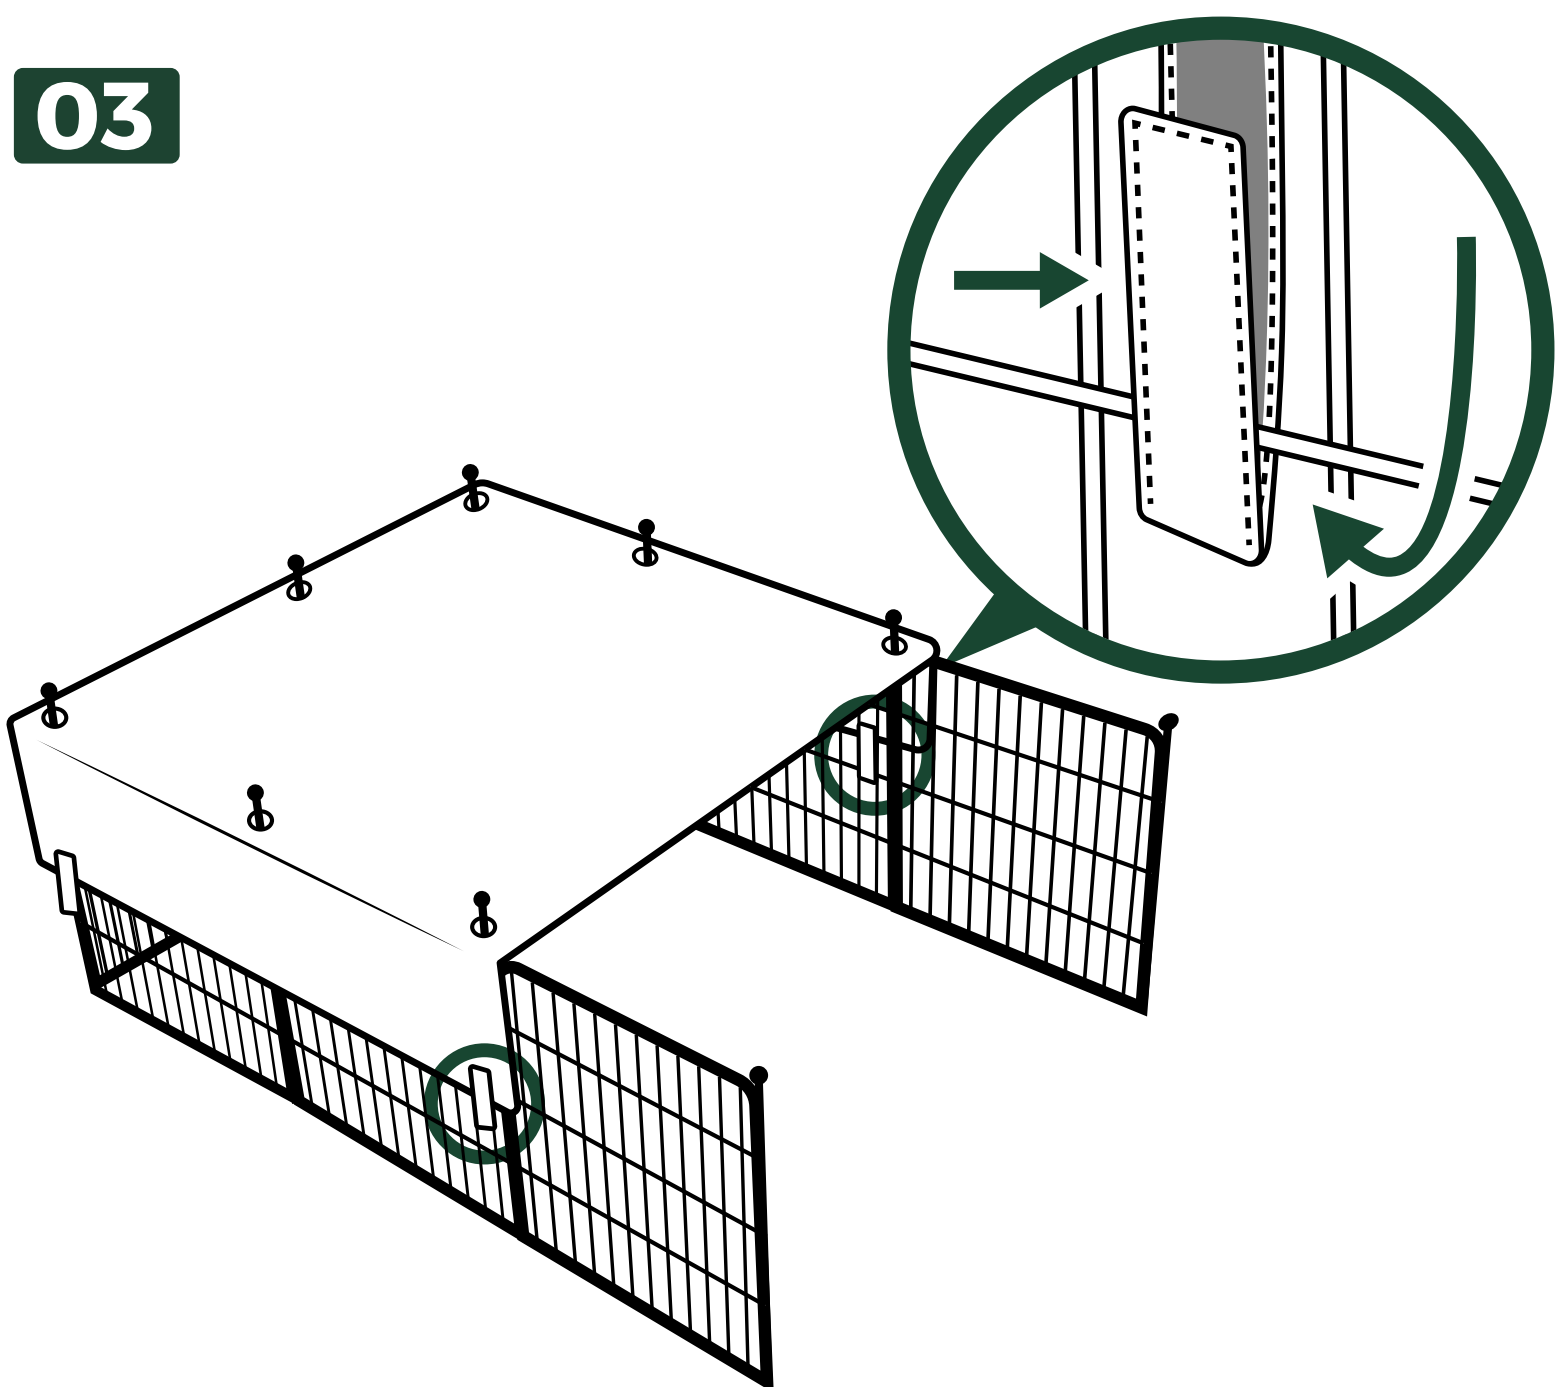

Attach the hook and loop tape to the wire.