



INSTALL INSTRUCTIONS

SEE HOW TO VIDEO AT WWW.LOCKERBONES.COM/HOW

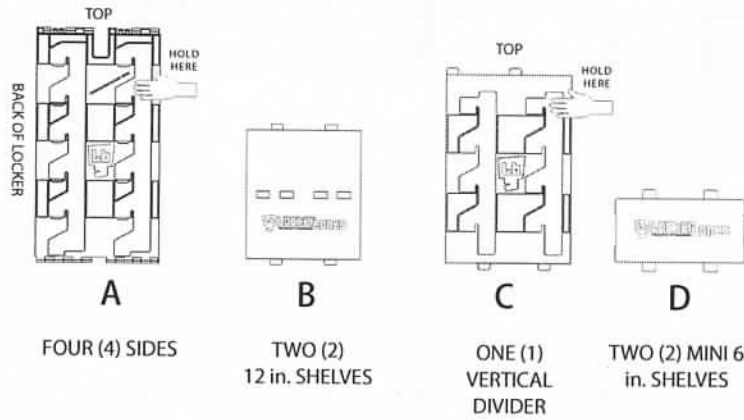

12 in. LOCKER EXAMPLE

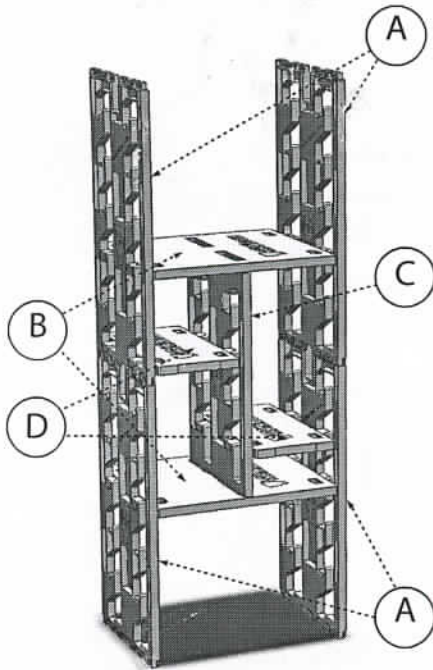

STEP 1: CONNECT BY SNAPPING OR SLIDING THE TOP OF SIDE (A1) INTO THE BOTTOM OF SIDE (A2) (REPEAT FOR OTHER SIDE A3 & A4).

STEP 2: PLACE THE TWO SIDES INTO THE LOCKER AS SHOWN.

STEP 3: INSERT B INTO LOCKER AT A SLIGHT ANGLE AS SHOWN AND SET INTO TRACT (REPEAT FOR B2) SET THE TWO SHELVES LEAVING 4 VACANT LEVELS BETWEEN TO RECEIVE VERTICAL DIVIDER.

STEP 4: INSERT VERTICAL DIVIDER(C) AT AN ANGLE BETWEEN B1 AND B2 PLACING THE TABS ON THE BOTTOM INTO THE SLOTS ON THE SURFACE OF B THEN GENTLY STRAIGHTENING THE DIVIDER INTO PLACE.

STEP 5: INSERT MINI-SHELVES (D) AS DESIRED BETWEEN THE SIDES AND THE VERTICAL DIVIDER.

