
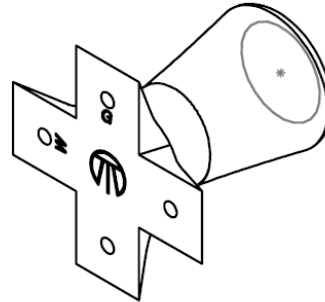


Delivery condition and scope:

- 3D-printed tray
- 3D-printed flange
- 2 nuts and 2 screws


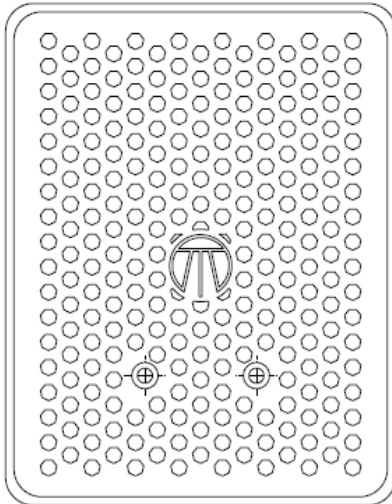


2x

1

- Depending on the mount (Garmin marked with G and Wahoo with W), attach the flange with the corresponding letter facing upwards to the back of the tray using the 2 screws and lock with the nuts

IMPORTANT: Only the horizontal holes of the flange are used (the Garmin mounting is shown here)

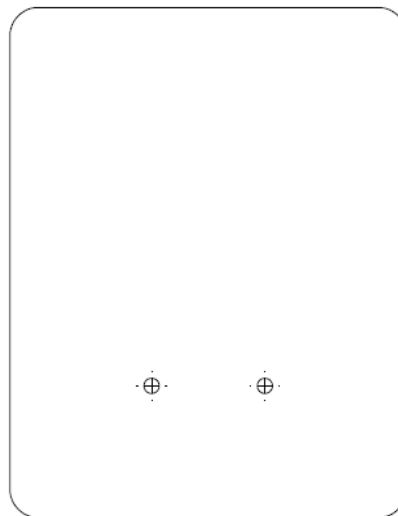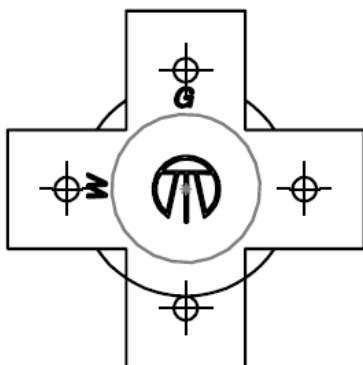

2