


ACTECH 2170 FC:
GENERAL ROOF
PENETRATION
DETAIL DRAWING

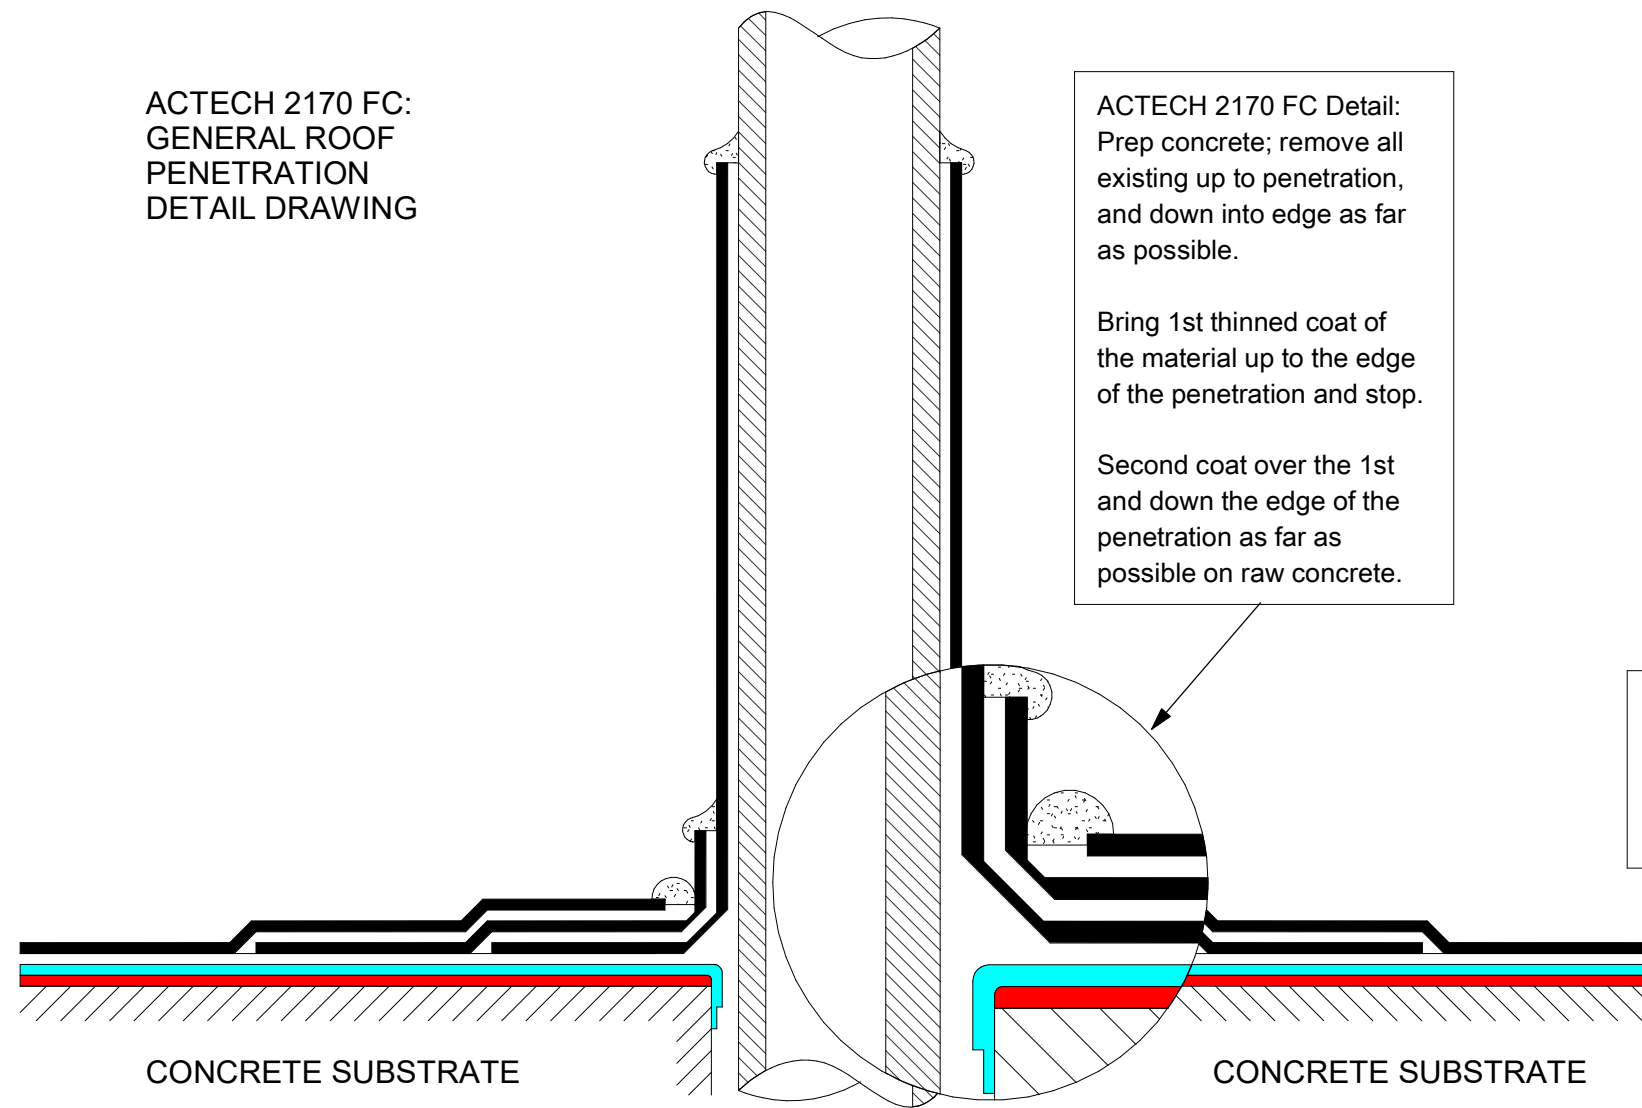

ACTECH 2170 FC Detail:
Prep concrete; remove all
existing up to penetration,
and down into edge as far
as possible.

Bring 1st thinned coat of
the material up to the edge
of the penetration and stop.

Second coat over the 1st
and down the edge of the
penetration as far as
possible on raw concrete.

ACTECH 2170 FC:
1st Coat Mixed with Acetone: █
2nd Coat "Neat" Not Thinned: █

CONCRETE SUBSTRATE

CONCRETE SUBSTRATE

DRAWING NO	FIELD FABRICATED PIPE PENETRATION FLASHING			
	REVISION	ISSUE DATE	SCALE	DRAWN BY
D6		06/21/23		