# Lateral Plungers · smooth, with seal

22150.0160



### **Product Description**

To be used for positioning and applying pressure, e.g. during painting and sandblasting. Sealed against chips and dirt.

#### Material

#### Seal

• CR

#### **Body**

Aluminium

#### **Spring**

Stainless steel

#### Pin

· Thermoplastic POM, white

#### **Assembly**

Installation by pressing in.

Formula for calculating the center distance for the mounting hole:

 $I_0 = z/2 + w + x$ 

 $I_0$  = center distance,

y = workpiece height,

w = workpiece length,

x = coordinate dimension,

- - -----

s = stroke,

z = stop diameter

Calculation dimension x:

y greater than or equal to  $l_2$  -  $d_2/2$ , then x =

 $d_2/2 - s$ 

or

y smaller than  $I_2$  -  $d_2/2$ , then x =

 $d_2/2$  - s - [( $I_2$  -  $d_2/2$  - y) \* 0,123]

#### Characteristic


Light spring load = spring from stainless steel


### More information

#### **Further products**

• Eccentric Mounting Bushings, for lateral plungers, smooth

## Drawing



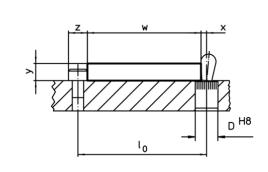

Erwin Halder KG

#### **Order information**

Dimensio d <sub>1</sub>	ns d <sub>2</sub>	Spring load F max. <sup>1)</sup>	Dimensio	ns I <sub>2</sub>	Stroke s	Location hole D H8	max.	ă	Art. No.		
[mm]		[N]	[mm]		[mm]	[mm]	[°C]	[9]			
Pin: Thermoplastic/light spring load											
10	5	20	12	6	1,6	10	80	1,4	22150.0160		


<sup>1)</sup> statistical average value

www.halder.com Page 1 of 2
Published on: 12.4.2019

## Accessories

	Dimensions d <sub>1</sub>	ă	Art. No.
	[mm]	[9]	
assembly tool			
	10	49	22150.0831

# **Application example**

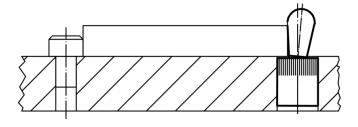

www.halder.com Page 2 of 2
Published on: 12.4.2019