# Lateral Plungers · smooth, with seal - INCH

2B150.0132



# **Product Description**

To be used for positioning and applying pressure, e.g. during painting and sandblasting. Sealed against chips and dirt.

#### Material

### Seal

• CR

#### **Body**

Aluminium

## **Spring**

• Steel, zinc-plated by galvanization

· Steel, case-hardened, zinc-plated by galvanization

### **Assembly**

Installation by pressing in.

Formula for calculating the center distance for the mounting hole:

 $I_0 = z/2 + w + x$ 

 $I_0$  = center distance,

y = workpiece height,

w = workpiece length,

x = coordinate dimension,

s = stroke,

z = stop diameter

Calculation dimension x:

y greater than or equal to  $l_2$  -  $d_2/2$ , then x =

 $d_2/2 - s$ 

y smaller than  $l_2$  -  $d_2/2$ , then x =

 $d_2/2 - s - [(I_2 - d_2/2 - y) * 0,123]$ 

### Characteristic


Heavy spring load = spring from steel, zincplated by galvanization


#### More information

#### **Further products**

· Eccentric Mounting Bushings, for lateral plungers, smooth - INCH

## **Drawing**

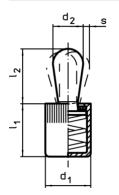

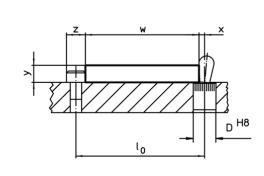

Erwin Halder KG

### **Order information**

Dimensions		Spring load	Dimensions		Stroke	Location		T.	Art. No.		
d <sub>1</sub>	d <sub>2</sub>	max. <sup>1)</sup>	<b>I<sub>1</sub></b> -0,04	l <sub>2</sub>	S	hole D H8	max.	_			
[inch]		[lb]	[in	ch]	[inch]	[inch]	[°F]	[oz]			
Pin: Steel/heavy spring load											
1/2	0,315	34	0,551	0,511	0,09	1/2	230	0,292	2B150.0132		


<sup>1)</sup> statistical average value

Page 1 of 2 Published on: 12.4.2019

# Accessories

	Dimensions d <sub>1</sub> [inch]	[oz]	Art. No.
assembly tool			
	1/2	2,321	22150.0832

# **Application example**

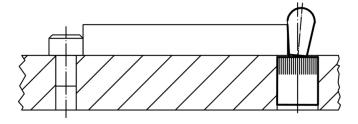

www.halder.com Page 2 of 2
Published on: 12.4.2019