# Lateral Plungers · smooth, with seal - INCH

2B150.0180



## **Product Description**

To be used for positioning and applying pressure, e.g. during painting and sandblasting. Sealed against chips and dirt.

#### Material

#### Seal

• CR

#### **Body**

Aluminium

#### Spring

Stainless steel

· Thermoplastic POM, white

#### **Assembly**

Installation by pressing in.

Formula for calculating the center distance for the mounting hole:

 $I_0 = z/2 + w + x$ 

I<sub>0</sub> = center distance,

y = workpiece height,

w = workpiece length,

x = coordinate dimension,

s = stroke,

z = stop diameter

Calculation dimension x:

y greater than or equal to  $l_2$  -  $d_2/2$ , then x =

 $d_2/2 - s$ 

y smaller than  $l_2$  -  $d_2/2$ , then x =

 $d_2/2$  - s - [( $I_2$  -  $d_2/2$  - y) \* 0,123]

#### Characteristic


Light spring load = spring from stainless steel


### More information

#### **Further products**

 Eccentric Mounting Bushings, for lateral plungers, smooth - INCH

### **Drawing**

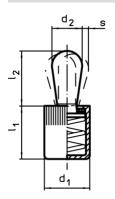

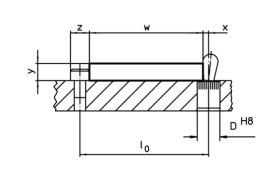

Erwin Halder KG

#### **Order information**

Dir	mensions	Spring load	Dimer	nsions	Stroke	Location	<u>N</u>	Art. No.			
d <sub>1</sub>	d <sub>2</sub>	F max. <sup>1)</sup> ~	l <sub>1</sub> -0,04	l <sub>2</sub>	S	hole D H8	max.	-			
[inch]		[lb]	[inch]		[inch]	[inch]	[°F]	[oz]			
Pin: Thermoplastic/light spring load											
5/8	0,393	22,5	0,708	0,646	0,12	5/8	176	0,299	2B150.0180		


<sup>1)</sup> statistical average value

www.halder.com Page 1 of 2 Published on: 12.4.2019

## Accessories

	Dimensions d <sub>1</sub> [inch]	[oz]	Art. No.
assembly tool			
	5/8	3,749	22150.0833

# **Application example**

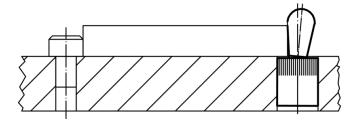

www.halder.com Page 2 of 2
Published on: 12.4.2019