



WILDBEAR

Fitting Instructions From
LS 7808 / LS 7809
Defender NAS Rear Towing
Step / NAS Rear Receiver

A.J.S Fabrications

Our NAS Steps and receivers are designed for all Defender vehicles, they are shipped with bracing bars suitable for 90 and 110.


KIT CONTENTS

1 x NAS Step/Receiver
4x Bracing Bars 90/110
1x Spacer Bar
2x Large Washer
8x M6 Nuts
2x M16 x 30 Cap Heads
8x M10 x 30 Hex
8x M6 x 16 C/S
4x M12 x 50 Hex
4x M12 Nuts
2x M10 Nuts
1x Rubber Treadplate

TOOLS REQUIRED

4mm Allen Key
14mm Allen Key
17mm Socket
19mm Socket
17mm Spanner
10mm Spanner

When working on your vehicle please ensure that it is adequately chocked, and where applicable supported on axle stands. If in doubt please refer to a qualified technician or your nearest Wildbear™ fitting centre.

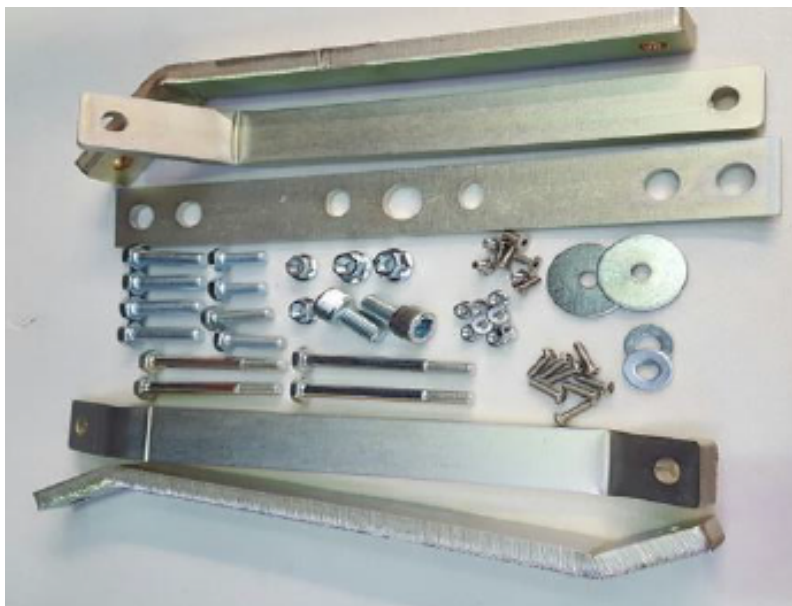


Check you have all equipment needed before you begin and take relevant safety precautions, make sure your vehicle is secure to prevent injury to yourself and others.

1, If your vehicle has an existing towbar or step, you will need to remove these before continuing.




2, Clean the rear crossmember and prepare to fit your NAS. Remove the top left bolts from both sides of the crossmember.

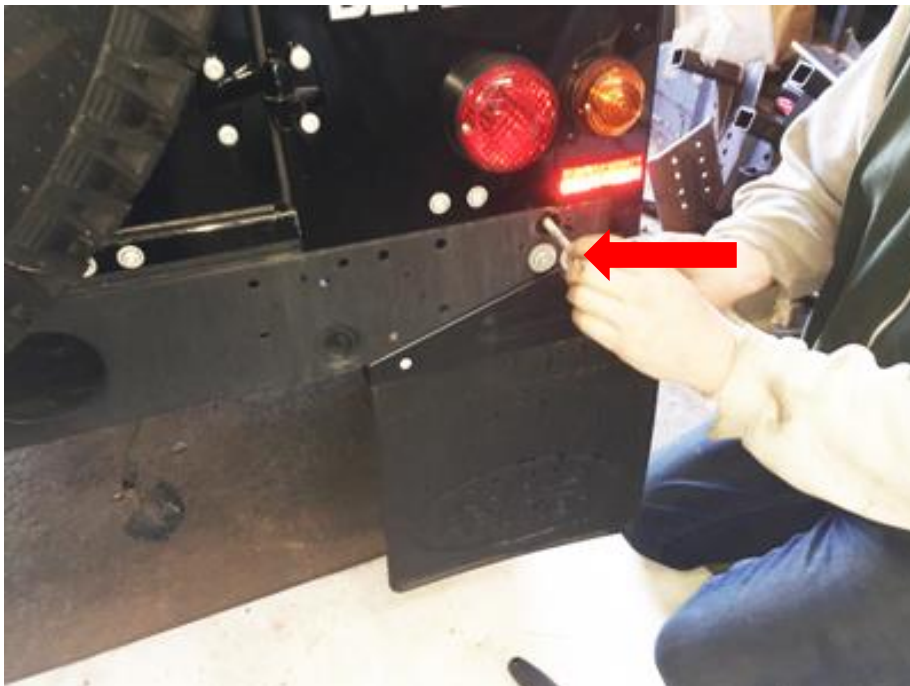

3, Place NAS up to the chassis, through the rear of jacking tubes fasten with 2 M10 x 30mm bolts and large washer (do not tighten at this point)



4, Fix outer end holes with 2 existing M10 x 30mm and 2 M10 nuts (do not tighten at this point)

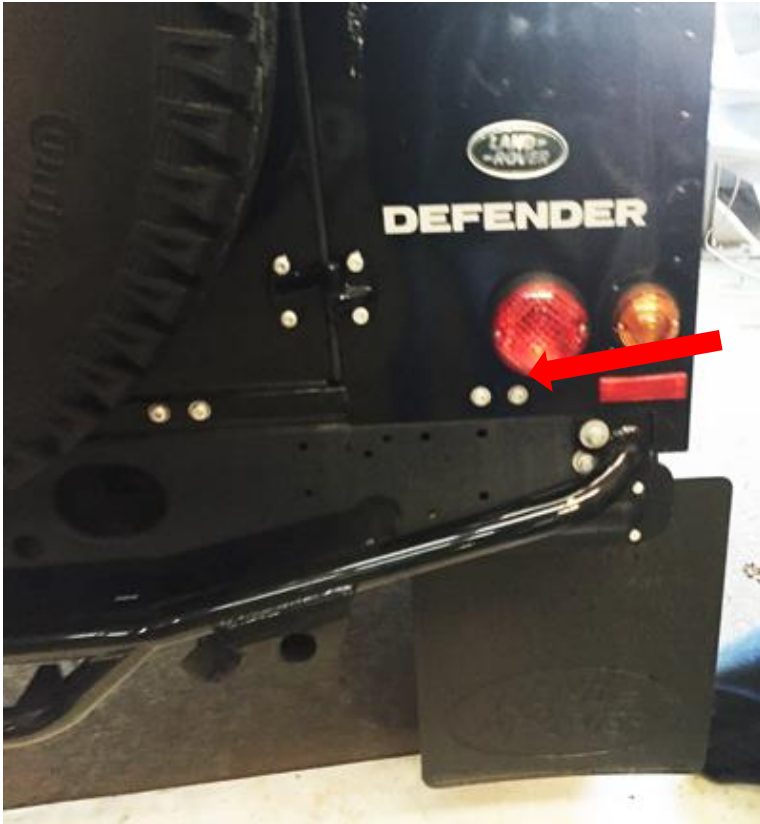

5, Slide spacer bar between chassis and NAS under the rear brackets of the NAS step shown in the picture and use bolts to fasten it in place.
(TD5 and Puma only)



6, Fix rear bracket using 3 M10 x 30mm under NAS into chassis (do not tighten at this point)

7, Fix 2 M16 cap heads into rear chassis (do not tighten at this point)



8, Fix bracing bars from NAS to chassis with 4 M12 x 50mm with nuts



9, Tighten all bolts and check securely fitted.

10, Fit Rubber matting onto top of NAS using M6 dome heads as supplied



Your NAS is now ready

Thank you for buying and using Wildbear™ Products.

Proudly Designed and Manufactured in the UK

A.J.S Fabrications

Parts and Accessories for Land Rovers



Head office: AJS Fabrications Limited, Unit 26 Crossgate Road, Park Farm Industrial Estate, Redditch, B98 7SN
Tel: +44 (0)1527 830552 Email: enquiries@wildbear4x4.com Web: www.wildbear4x4.com