


SET-UP INSTRUCTIONS

PANORAMIC TV STAND PM-04-70/95

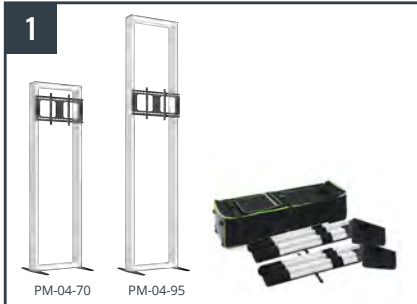

CONTENTS:
x1 Portable TV stand + x1 wheeled bag




Insert the eight 90-degree connectors into the four small profiles and close the handles to lock.



Before connecting the four large profiles, it is important that the blue and orange labels are properly aligned and follow each other from one profile to another: blue with blue and orange with orange.



The blue and orange labels must be pointing in the same direction (arrow pointing up - TOP) from one profile to another.

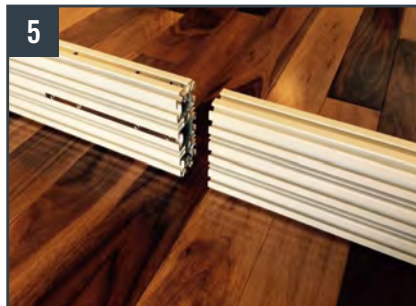

Connect the two profiles together.



Use the "Allen" keys to screw the four joint connectors in place.






Once the vertical profiles have been assembled, position your BASE and TOP profiles.




The small profiles come in pairs labeled BASE or TOP. Here is an example of two TOP profiles. Those for the base are labeled BASE.

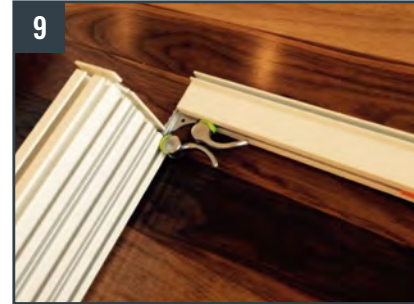

With the 90-degree connectors, insert the two small BASE profiles (bottom of the frame) and the two small TOP profiles (top of the frame) into their respective positions.



It is important that the colored labels on the small profiles are aligned with the colors on the large profiles.

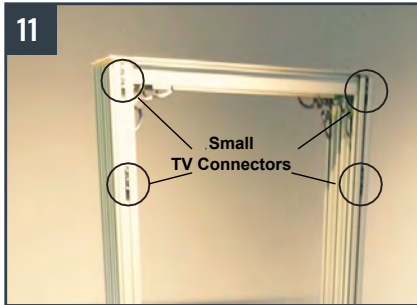

To insert the feet, turn the frame upright with the front facing outward. To ensure that it is the front, you should be able to see the small connectors at the top of the frame when the frame is upright. These are used to connect the TV holder. If you do not see these, this means that the front of the frame is not facing outward. Turn it so that you can see the connectors.



Now, position yourself at the bottom of the frame to install the feet. Unscrew the screws, set the feet in place and screw them into the structure.



Here are the installed feet.





Stand the frame up.

CHANGING THE GRAPHIC


PANORAMIC TV STAND PM-04-70/95



To set up the graphic, use the following images as a guide.

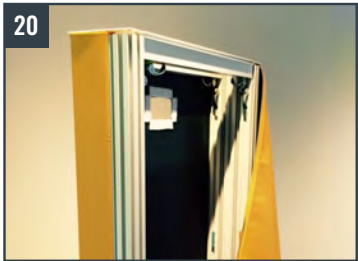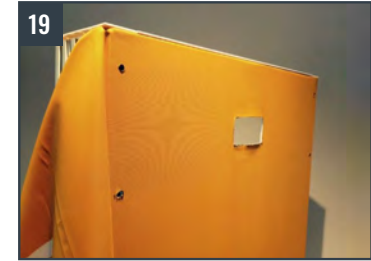

Next the feet. Unscrew the screws, set the feet in place and screw them into the structure.

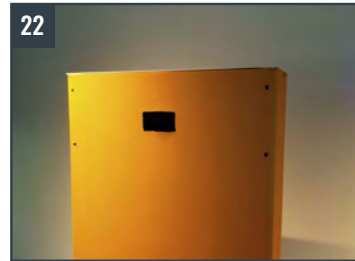

To set up the TV holder, you first need the frame and the four screws provided in the bag.




Screw in the frame.



The following rods must be screwed into your TV.



Once the rods are screwed into your TV, install the rods into the frame like so.

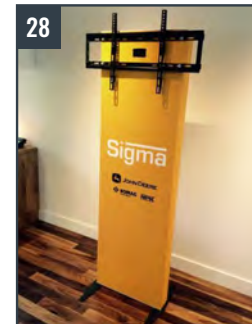

Finished Stand