



# Universal Tach Mounting Bracket

## •Installation Instructions•

Schumacher Creative Services universal tachometer mounting bracket allows mounting an AutoMeter style tachometer under the dashpad of most '60-70's cars without drilling holes. The tach bracket simply slips under the leading edge of the dash pad allowing the tachometer to be positioned within the driver's range of vision.



Our Tech Bracket is designed to use AutoMeter Style Tachometer's with a 3-3/8" body using shock strap kit, Part Number # 3209. It's a perfect fit for our universal bracket, and the rubber insulation works as an excellent gripping device. Other Tachs may work as long as the body is 3-3/8".

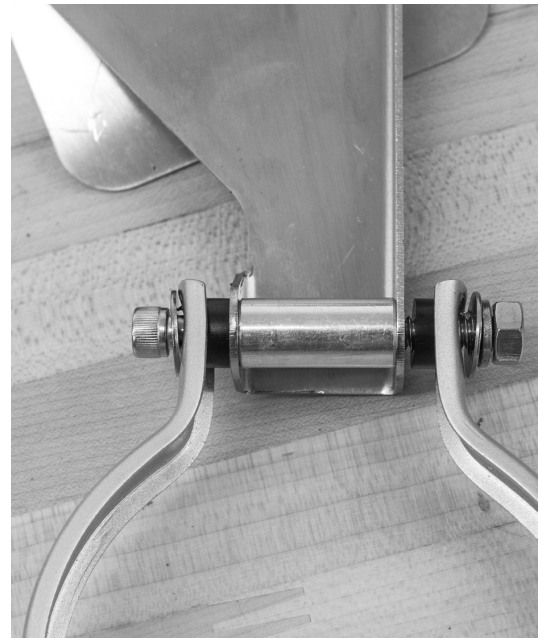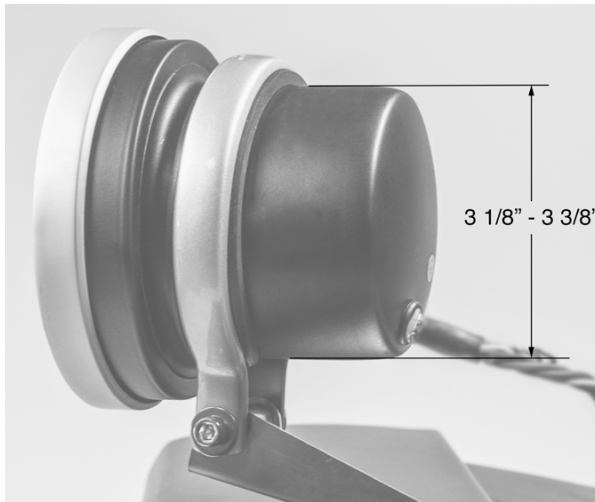


It may not always be possible, but it's easiest to pre-assemble the tach and bracket on the bench first. In some cases the tach may need to be assembled onto the bracket after the bracket is installed under the dash pad.

The rubber shock mount is very “sticky” especially when it is new. If you are installing this for the first time, use a little dish soap as a lubricant to help in the assembly process. The dish soap cleans up well and the small amount left over will disappear on its own.



Leave the tach loose on the bracket in order to install the assembly under the dash pad.

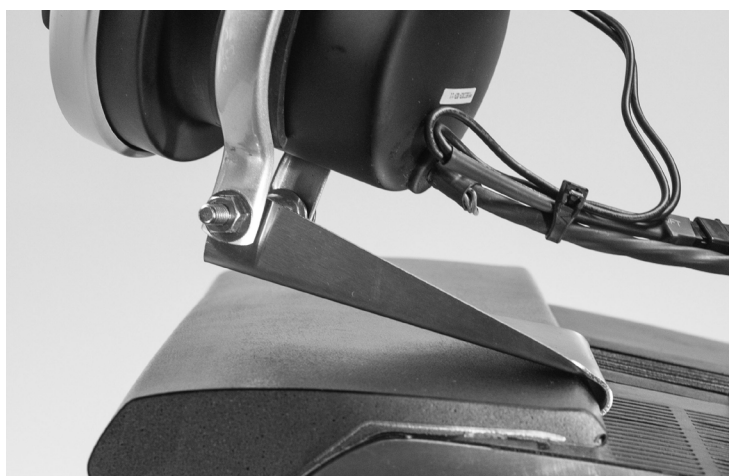

  
**Schumacher Creative Services**

41715 Elm St #301, Murrieta, Ca 92562 951.440.8340 [www.engine-swaps.com](http://www.engine-swaps.com)