




Made in the UK



winksleep
good sleep made easy

Luxury Bed Instructions

Assembly Instructions

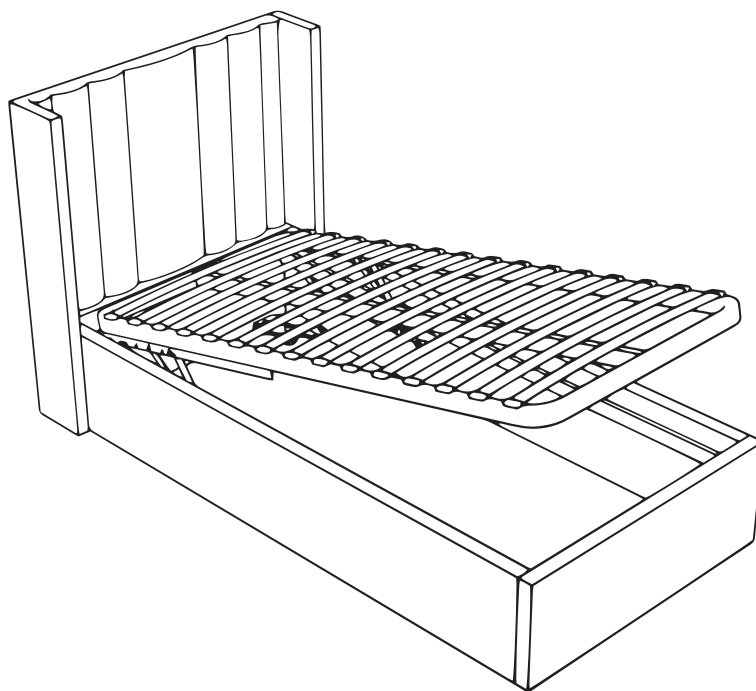

Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Further instructions are on the following pages.


Please keep these instructions for future reference.

www.winksleep.co.uk



BFM British Furniture
Manufacturers

TOOLS

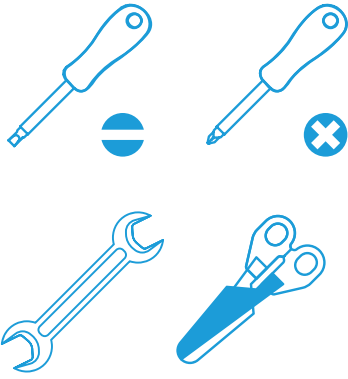

Tools Supplied:

- Spanner for Ottoman frame

Extra Tools required:

- Flathead Screwdriver
- Pozi Screwdriver
- Scissors

SAFETY

- Please take the time to carefully read through the whole of these before you commence.
- Keep these instructions for future reference.
- Unpack, inspect and check off all of the contents.
- Please dispose of all packaging safely.
- Small component parts could choke a child if swallowed.
- We strongly recommend that you keep children well away from the work area.
- It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and to protect your floor.
- This product is heavy. Take extreme care when lifting to avoid personal injury or damage to the product.
- Assemble the product as close to its intended final position in the room as possible.



GENERAL CARE



Wipe clean with a slightly damp soft cloth.



Avoid the use of all household cleaners and abrasives.



When moving your furniture, carefully lift into place.



Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Recommendations

Periodical re-tightening of fixings.

Notes

We've tried to make this piece of furniture as easy to assemble as possible.


In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact our customer services on:

support@winksleep.co.uk




Warning

This unit is heavy! Please use an assistant when lifting


HARDWARE PACK FOR AN OTTOMAN WINKSLEEP BED

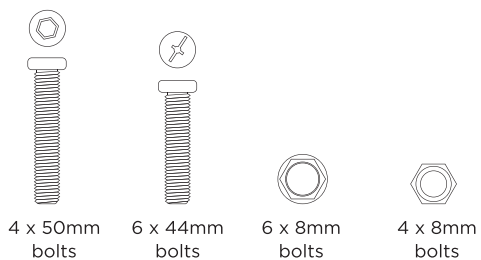


(variable on supplier)

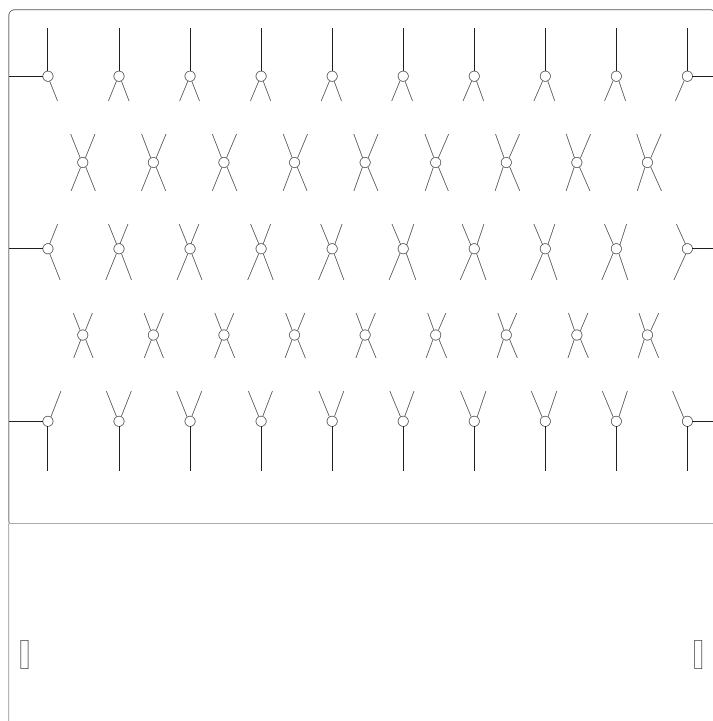

1 x headboard

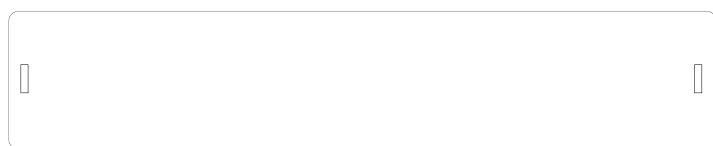

1 x footboard



2 x frame plates


3ft beds do not come with these panels.



1 x Mattress retention bar



1 x Pull strap

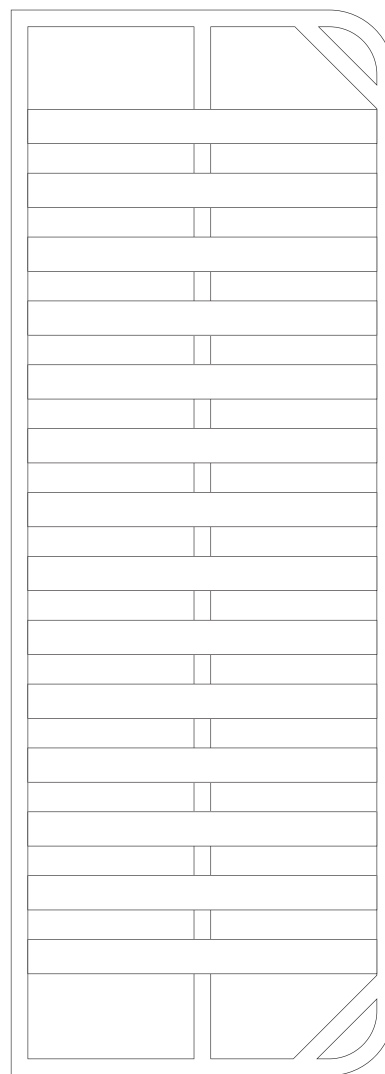


1 x ottoman frame

Note: The folded frame version is for bigger than single bed




2 x siderails



2 x hinges


Optional if Purchased Legs Variant

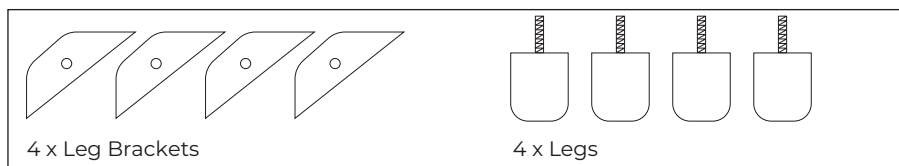

INSTRUCTIONS FOR AN OTTOMAN WINKSLEEP BED


Step 1

Lay out all components to bed

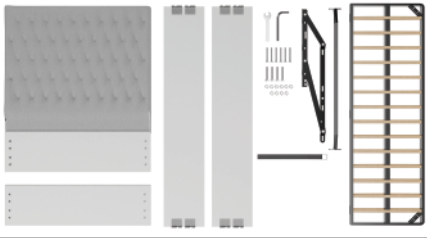


Step 2

Lay out all components to bed

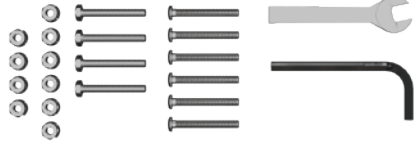


Step 3

Lay out all components to bed

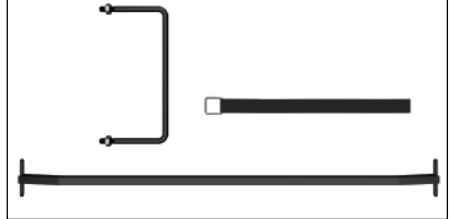

Step 4

Lay out all components to bed

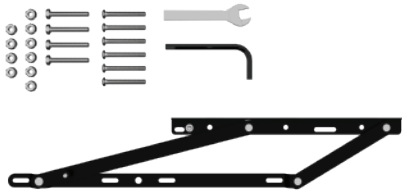

Optional if Purchased Legs Variant

Step 5

Layout all components to bed



(only applicable if feet ordered)


INSTRUCTIONS FOR A WINKSLEEP BED (ORDERED WITH LESS OPTION)

Optional if Purchased Legs Variant

Note: Skip Step 6 to Step 10 if Feet not ordered.

Step 6

Locate at the bottom of the headboard and footboard feet location to pierce through or screw in depending on type of foot ordered

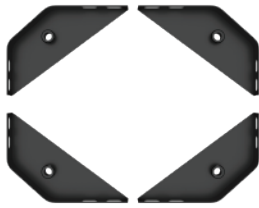

(only applicable if feet ordered)


Step 7

If you have opted for a different type of leg which requires to be screwed please screw this in
(only applicable if feet ordered)



Step 8


Pierce sticker and screw in feet for the headboard
(only applicable if feet ordered)

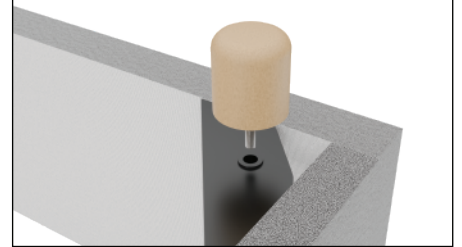

Step 9

Place feet onto the footboard of the bed

(applicable if purchased feet)

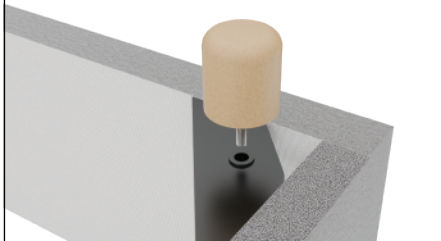

Step 10

If you have opted for an alternative style of foot please screw in to the footboard


(applicable if purchased feet)



Step 11


Place headboard straight and hook on the side rails to the headboard

(brackets can differ)

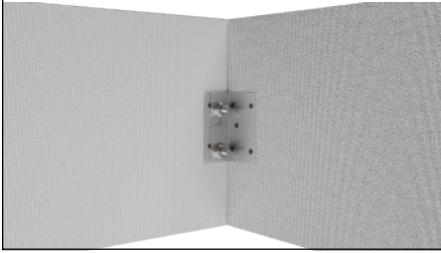


Step 12

Place the second side rail and hook on to both headboard and footboard

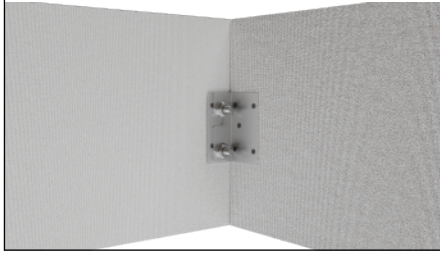

Step 13

Screw or tighten nut in all rail bolts and secure frame

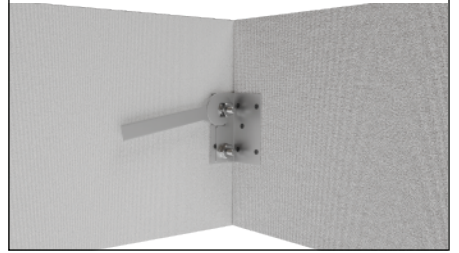


Step 14

Ensure if you have opted for an ottoman the screws are facing the headboard

headboard

footboard

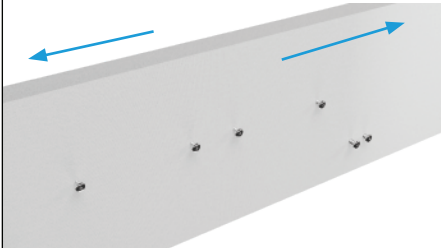

Step 15


Screw in the ottoman hinges onto the side rail

(be careful with screws to avoid cross threading)



Step 16

Screw in the centre support bar to both side rails

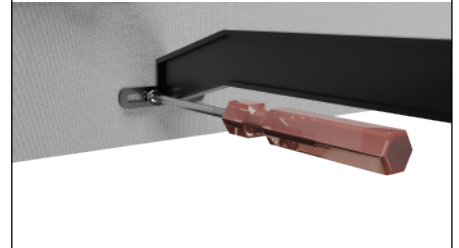


Step 17

The bed should look like this when made up




Step 18

Unscrew the bolts on the ottoman side frames

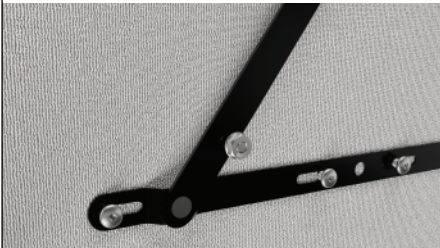

Step 19


Attach the gas bar and re-screw the bolts on top and bottom

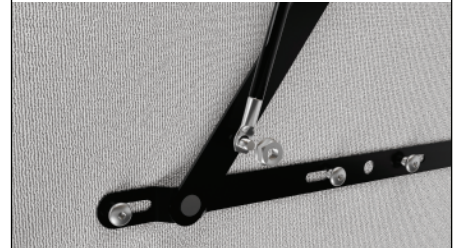

Step 20

Open the ottoman frame

(applicable to 4ft or above)

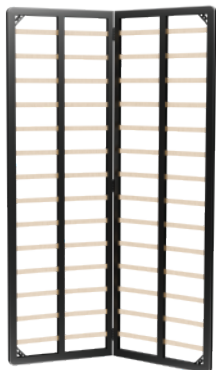

Step 21

Please ensure the hinge side is facing down

(applicable to 4ft or above)



Step 22

Attach the 2 metal plates to lock in the frame from folding in again

(applicable to 4ft or above)



Step 23

Place the allen key bolts in from the top



Step 24

Attach bolt and screw in using tools provided




Step 25

Please attach the mattress retention bar



Step 26

Place the ottoman frame on top of the metal hinges 2 people required and slot in remainder bolts to secure the frame in place

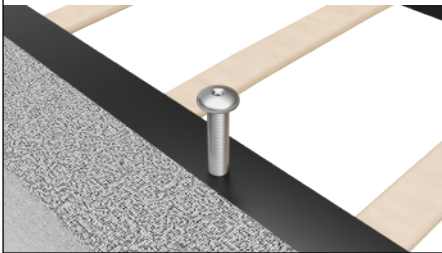

Step 27

Once the frame is held up like this




Step 28

Please screw in bolts to secure the frame



Step 29

Attach the pull up strap to the foot end of the frame

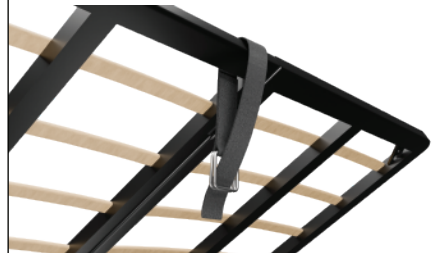

Step 30

Your Bed is Complete



HARDWARE PACK FOR AN DIVAN OTTOMAN WINKSLEEP BED




2 x 8mm bolts




2 x gas pistons

(variable on supplier)

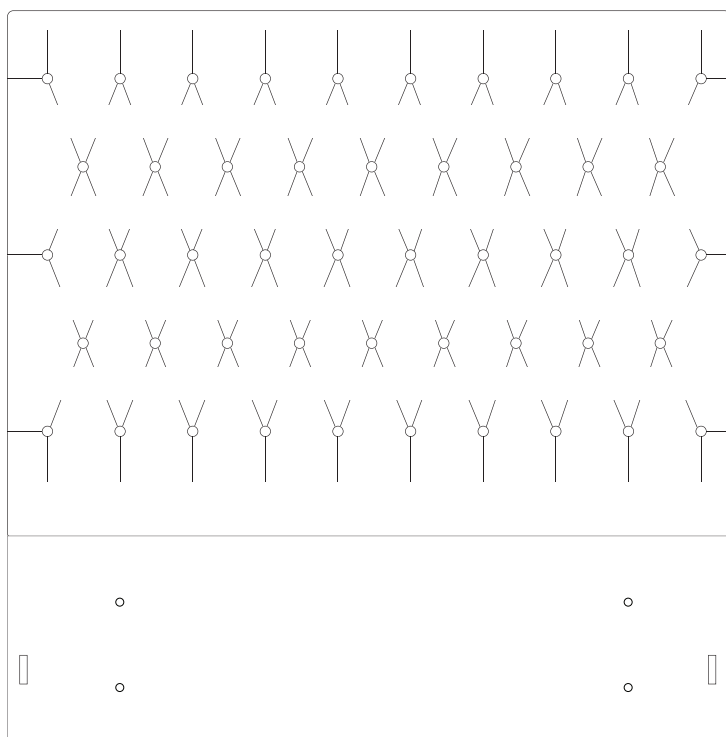


1 x headboard



Divan Ottoman Frame


Optional if Purchased Legs Variant



Chrome Feet
OR Castors




U Clip
Only for 4ft and Above

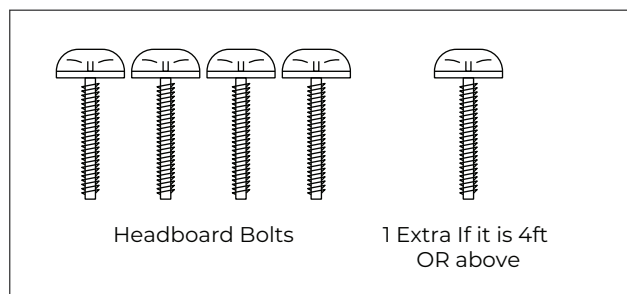

Headboard Bolts

1 Extra If it is 4ft
OR above

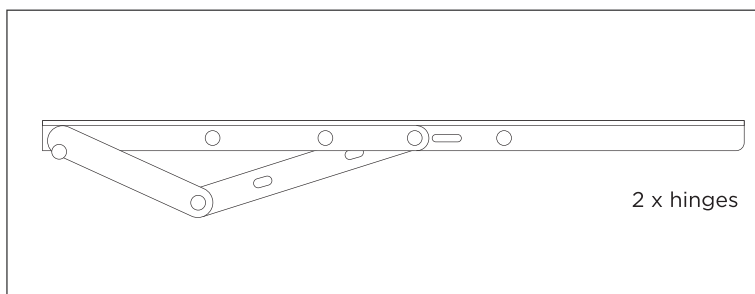

2 x hinges

INSTRUCTIONS FOR AN DIVAN OTTOMAN WINKSLEEP BED

Corner Blocks with 6 Castors

Note: 1 to 6 steps for the Single Divan Ottoman Bed.


Step 1

Total 4 Castors/Chrome Gliders
Fixing in corner blocks.



Step 2

Corner blocks with wood piece
for wood board at bottom.

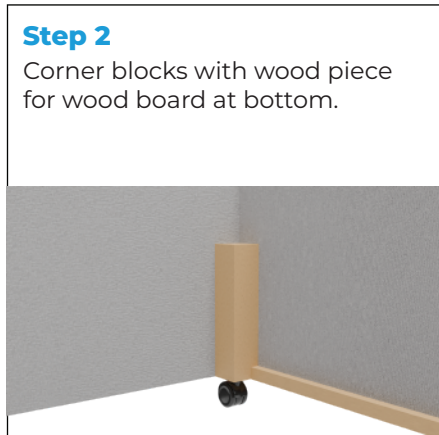


Step 3

Fixing hinge to the side panel on
both sides.




Step 4

Fixing the frame to Hinge and
tie the nut.

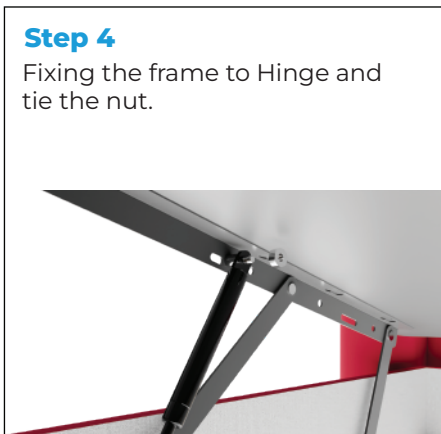

Step 5

Image showing the Hinge fixed.

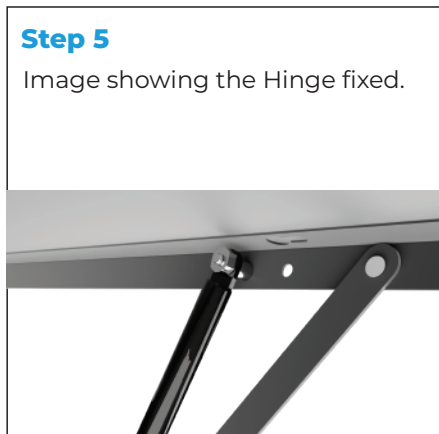

Step 6

Single Divan Ottoman Bed
after fixings all components




(Step before Headboard connection)

Additional

Note: For Double and King Size Bed - Additional fittings setps (Including 1 to 6)

Step 7

In this image showing the U
shape to fix the two bases

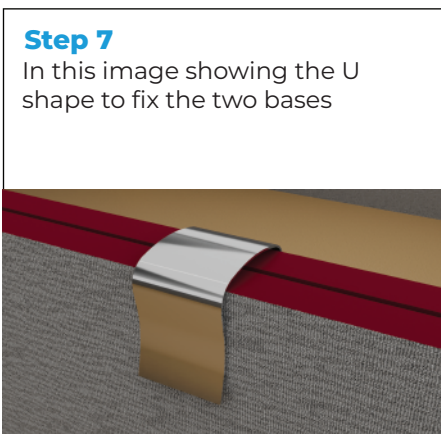


Step 8

Screw the fixing x2 to fix and
connect the ottoman lids
together. (Screw Placement)



Step 9

Screw the fixing x1 to fix and
connect the ottoman lids
together. (Close Shot)

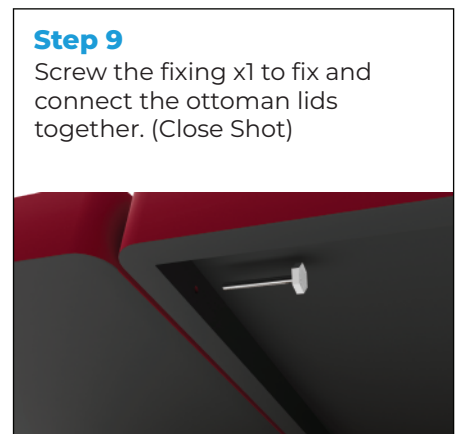

Step 10

Single Divan Ottoman Bed
Headboard with grooves




Step 11

In the image below showing bolts
screw headboard in base to
connect




Step 12

Final output of Single Divan
Ottoman Bed

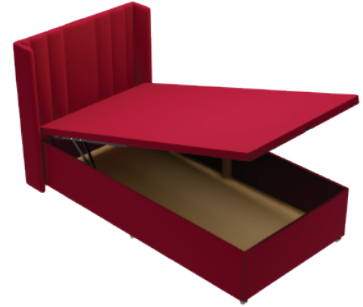

Step 13


Single Divan Ottoman Bed
Headboard with grooves

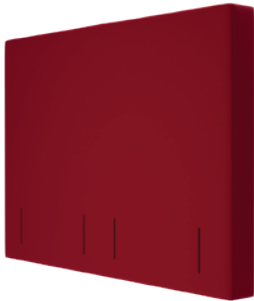

5ft

Step 14

In the image below showing bolts
screw headboard in base to
connect

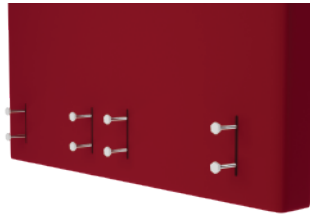

5ft

Step 15

Final output of Single Divan
Ottoman Bed




5ft




HARDWARE PACK FOR AN SLATS FRAME FOR WINKSLEEP BED


1 x HEADBOARD

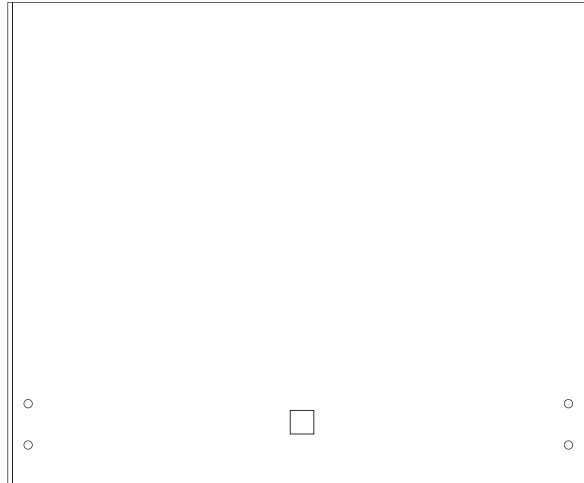


2 x SIDE PANELS

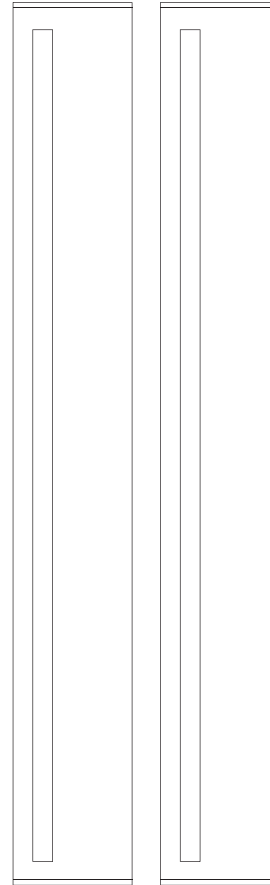

1 X CENTRE POLE



1 x FOOT END

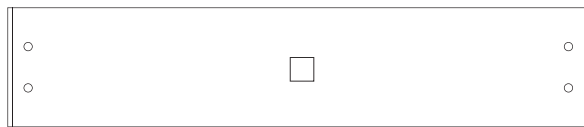

10 x WOODEN SLATS



SCREWS

(only applicable to beds 4ft and above).

INSTRUCTIONS FOR A SLATTED FRAME FOR WINKSLEEP BED

Step 1
Please lay out all contents on to a flat surface

Step 2
Please attach the feet and assemble the bed and insert the centre support rail into the bracket on both the headend and footend
(applicable to 4ft or above)

Step 3
The bed will look like this

Step 4
Please place the slats on to the centre support rails

Step 5
Roll out the slats on the bed

Step 6
With the screws provided please screw in on the edges and onto the side profile of the side rails

Step 7
Your bed is complete

Step 1

Screw in the side rails on all four corners (Brackets and screws pre attached).

Step 2

Place the wooden support rail in the centre of the bed - this remains loose in the middle but will need screws when point 3 is actioned

Step 3

Place the slats on top, and screw between 2-3 on either side using the screws provided.

Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth.
Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit:
<https://www.winksleep.co.uk/help-and-advice>

Notes

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting:

<https://www.winksleep.co.uk/customer-service>

Tel: 0333 091 2003