Water Test Kit Water Test Kit & Professional Analysis



Parts Included







Plastic Ziplock Bag






Water Sample Bottle





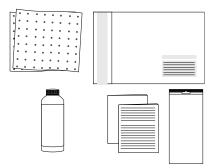

Specifications

Ordering Code			Parameter	s	
WTEST-KIT	рН	TDS	Silica	Nitrate	Copper
	Sulphate	Chloride	Sodium	Total Iron	Fluoride
	Conductivity	Total Alkalinity	r	Total Hardness	Total Manganese

Process Steps

Step 1:	Fill the supplied bottle from the tap of the water source you want tested.
Step 2:	Fill out the details on the form and put it in the supplied clear bag.
Step 3:	Put the water sample and all items back in the box and place into the pre-paid post bag.
Step 4:	Once received, we will run the water test and return the test results & recommendations to you within 5 working days of receipt.



For more information contact your local stockist or visit us at puretecgroup.com Australia 1300 140 140 | New Zealand 0800 130 140

