



10/2023

# Sunlight Outdoor Shower Assembly Instructions



## **Requirements:**

- 2 People (recommended)
- Tape Measure
- Cordless Drill
- Robertson Drill Bit
- $\frac{3}{4}$ "(19mm) Nut Driver Bit

Manufactured by:



tel: 888-923-9813 | [info@leisurecraft.com](mailto:info@leisurecraft.com) | web: [www.leisurecraft.com](http://www.leisurecraft.com)

# 510S Sunlight Outdoor Shower - Clear Cedar

## Parts List

<u>Part #</u>	<u>Description</u>	<u>Quantity</u>
<u>720410</u>	<u>2"x 3"x 31" - Front/Back Floor Support</u>	<u>2</u>
<u>720411</u>	<u>2x3x28" Floor Joists</u>	<u>4</u>
<u>720412</u>	<u>1" x 6" x 31" - Floor Boards</u>	<u>5</u>
<u>720413</u>	<u>1" x 2 1/2" x 31" - Floor Boards</u>	<u>1</u>
<u>720414</u>	<u>1" x 6" x 15" - Shower Pillar Top Plate</u>	<u>1</u>
<u>720415</u>	<u>Assembled Sierra Shower Pillar Only</u>	<u>1</u>
<u>510SHARDWARE</u>	<u>Sunlight/Sierra Shower Hardware Package</u>	<u>1</u>
<u>720400</u>	<u>Stainless Brackets to Mount Pillar</u>	<u>2</u>
<u>510SMANUAL</u>	<u>Sunlight/Sierra Shower Owners Manual</u>	<u>1</u>
<b><u>Options</u></b>		
<u>720404</u>	<u>Economy Shower Hardware (Cold Water Only)</u>	
<u>720405</u>	<u>Premium Shower Hardware</u>	
<u>720439</u>	<u>Single Towel Hook</u>	
<u>720403</u>	<u>Garden Hose Connect Kit</u> <u>(2 Required if ordering Premium Shower Hardware)</u>	

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com

# 512S Sunlight Outdoor Shower - Knotty Cedar

## Parts List

<u>Part #</u>	<u>Description</u>	<u>Quantity</u>
<u>720447</u>	<u>2"x 3"x 31" - Front/Back Floor Support</u>	<u>2</u>
<u>720448</u>	<u>2x3x28" Floor Joists</u>	<u>4</u>
<u>720449</u>	<u>1" x 6" x 31" - Floor Boards</u>	<u>5</u>
<u>720450</u>	<u>1" x 2 1/2" x 31" - Floor Boards</u>	<u>1</u>
<u>720451</u>	<u>1" x 6" x 15" - Shower Pillar Top Plate</u>	<u>1</u>
<u>720452</u>	<u>Assembled Sierra Shower Pillar Only</u>	<u>1</u>
<u>510SHARDWARE</u>	<u>Sunlight/Sierra Shower Hardware Package</u>	<u>1</u>
<u>720400</u>	<u>Stainless Brackets to Mount Pillar</u>	<u>2</u>
<u>510SMANUAL</u>	<u>Sunlight/Sierra Shower Owners Manual</u>	<u>1</u>
<b><u>Options</u></b>		
<u>720404</u>	<u>Economy Shower Hardware (Cold Water Only)</u>	
<u>720405</u>	<u>Premium Shower Hardware</u>	
<u>720439</u>	<u>Single Towel Hook</u>	
<u>720403</u>	<u>Garden Hose Connect Kit</u> <u>(2 Required if ordering Premium Shower Hardware)</u>	

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com


# Sunlight Outdoor Shower Assembly Instructions



Locate the shower pillar top plate and secure it to the top of the assemble pillar assembly with 1 ½" (38mm) screws ensuring it is even on both sides.



Secure the front/back floor supports to the 2 outside floor joists with 2 - 2 ½" (64mm) screws in each corner.

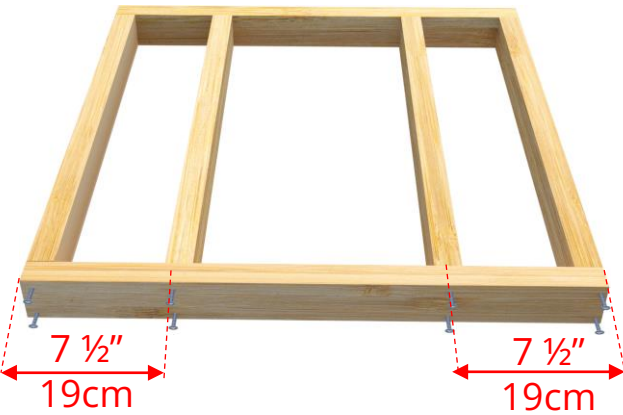

Measure 7 ½" from each end and center the inner floor supports and secure with 2 - 2 ½" (64mm) screws in on each end.

\* It is important these are measured correctly as the shower pillar will bolt into these supports.



Space the floorboards out evenly over the base and secure into each of the floor joists using 2 - 1 ½" (38mm) screws into each joist.

Manufactured by:

# Sunlight Outdoor Shower Assembly Instructions



Position the assembled pillar centered and flush to the back of the shower base.



Secure the assembled pillar to the base with the provided lag screws and brackets.

\* It is recommended to predrill these holes first to prevent splitting.

*Congratulations on the assembly of your Sunlight Outdoor Shower!*

Manufactured by:



tel: 888-923-9813 | [info@leisurecraft.com](mailto:info@leisurecraft.com) | web: [www.leisurecraft.com](http://www.leisurecraft.com)