



Measuring guide for 2'' x 1'' handrail

1. Cut at least 2 templates (see page 3) corresponding to the base plates of our posts that will be fixed on your deck.
2. Position the cutouts, making sure to screw them into the structure or the joists in the case of a wooden patio. For a concrete structure, the anchors must be at least 2'' from the edge of the slab.


A) For a straight section, position the base plates at the ends of the section and measure the length of the handrail as follows:

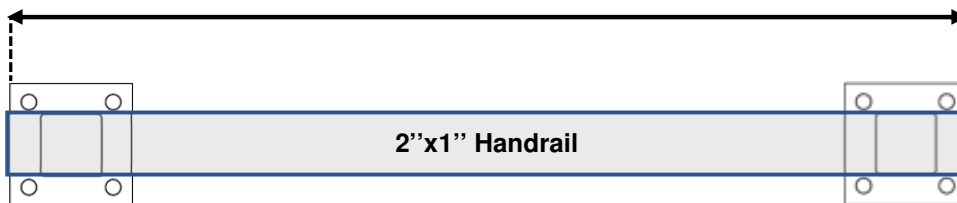

B) For a setup with 1 corner, position the base plates at the ends of the sections and measure the length of the handrails as follows:

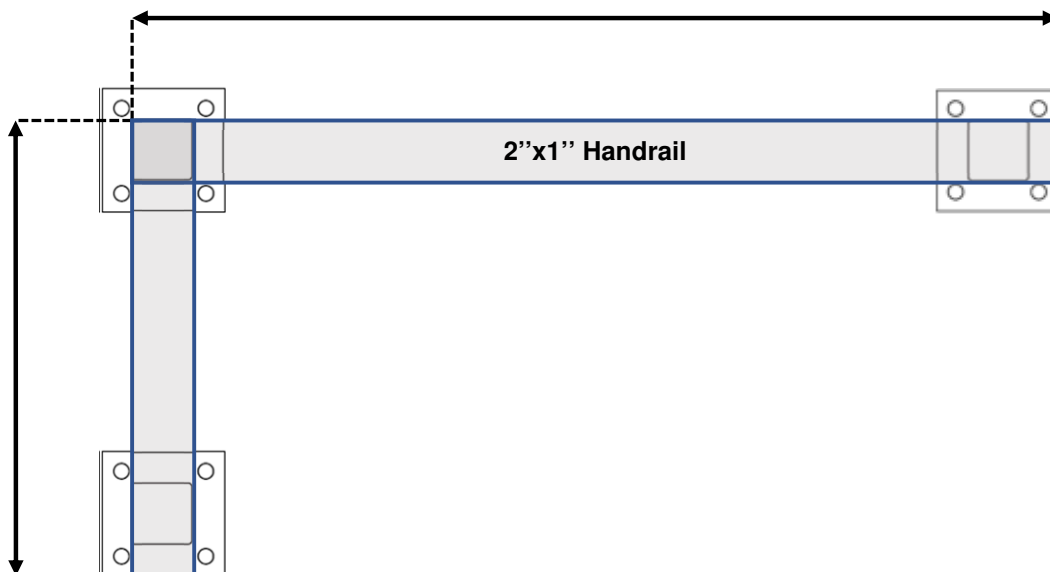

C) For a setup with 2 corners, position the base plates at the ends of the sections and measure the length of the handrails as follows:

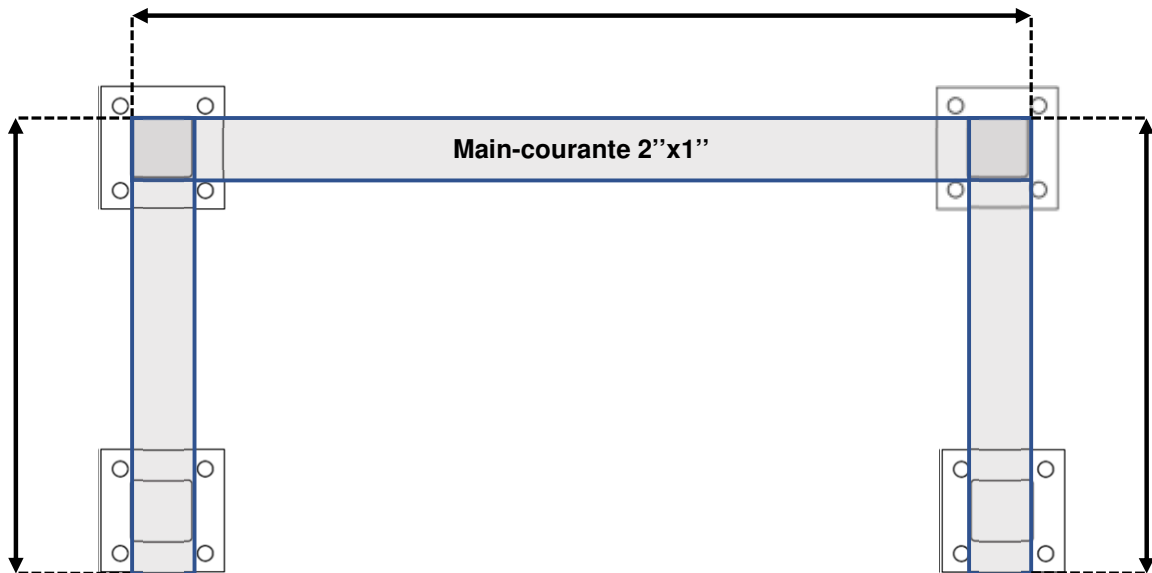

1. Cut out the templates
2. Fix to the floor where there is screwing in the structure (joists)
3. Calculate the lengths of the handrail sections

