


Installation Instructions:

1. Cut out templates below to mark holes to be drilled (1-inch & 5/32").
2. Mark holes using a center punch before drilling.
3. Disconnect battery terminal leads before installation.
4. Install each Pod Light in desired location using supplied bezels, foam isolator & mounting hardware.
5. Connect spade terminal to switched positive power source.
6. A 5-amp fuse is suggested for each pair of Pod Lights (not supplied).
7. Connect ring terminal to ground.
8. Reconnect battery terminals only after all electrical connections are secure.

Parts List:

Qty. 2	Pod Lights
Qty. 4	1.5mm thickness stainless bezels
Qty. 6	M4 mounting bolt
Qty. 6	Nylock nut
Qty. 4	Male connector
Qty. 4	Female connector
Qty. 2	Ring Terminal
Qty. 4	2mm EVA gasket
Qty. 1	180 cm 18awg black wire

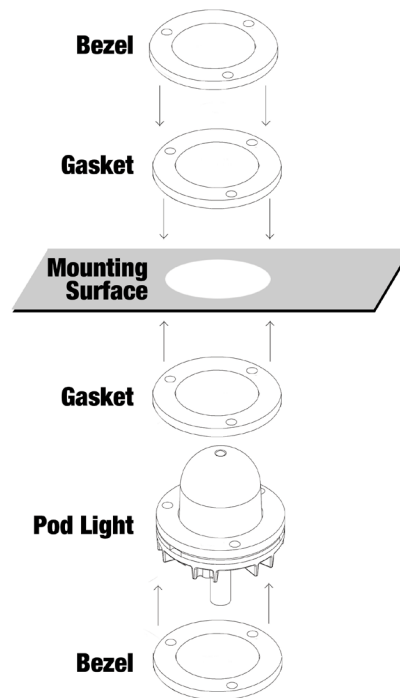

DRILLING TEMPLATE

