
EXTENDED BOSS BARRE PRO ASSEMBLY INSTRUCTIONS

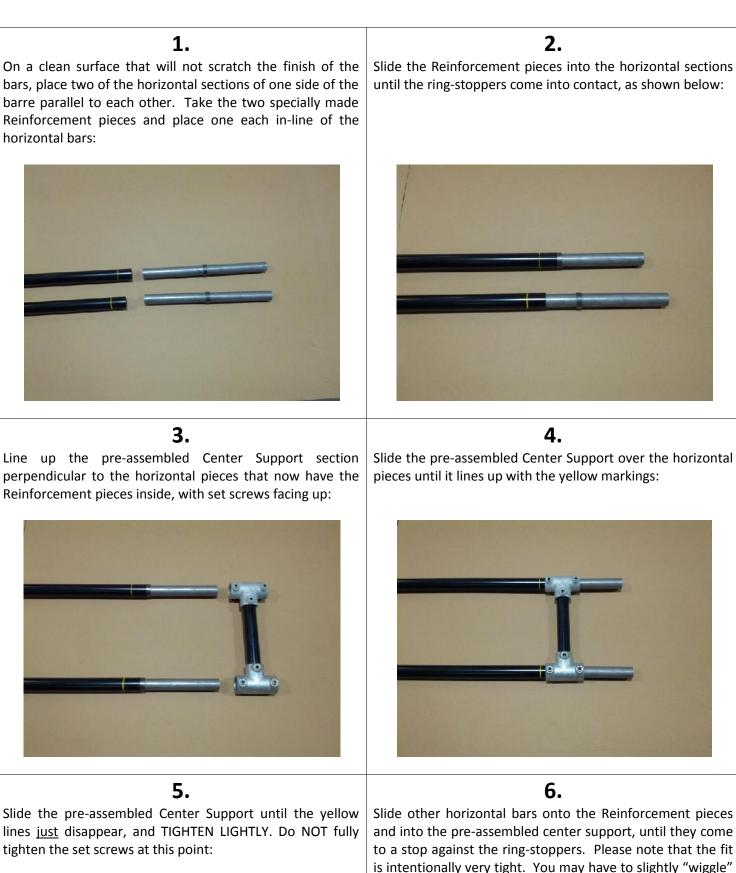



and into the pre-assembled center support, until they come to a stop against the ring-stoppers. Please note that the fit is intentionally very tight. You may have to slightly "wiggle" the horizontals to get them in place. LIGHTLY TIGHTEN set screws. Do NOT fully tighten the set screws at this point:




CONTINUED ON PAGE 2

PAGF 1

Align the pre-assembled barre end verticals with the nowassembled horizontals, on each end of the barre (with set screws facing up):

7.

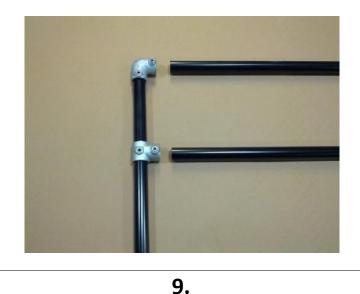

After visually ensuring they are square, fully tighten the preassembled barre end verticals on each side:



10.

Once the barre end verticals are square and tightened in place, fully tighten the set screws on the pre-assembled barre end vertical, making sure they are to the same side of each barre: barre:





11.

With the help of an additional adult, lift the assembled barre upper until it can be placed into the receiving connectors on the base stabilizers: 12.

Place the assembled barre upper into the receiving connectors on the base stabilizers. FULLY tighten all set screws on the entire barre, <u>once you have ensured that all pieces are square</u>:







ENJOY YOUR EXTENDED BOSS BARRE PRO!



8.