
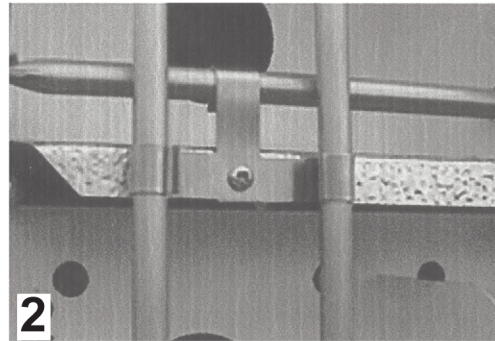


INSTALLATION INSTRUCTIONS

for BirdsChoice Purple Martin House Predator Guard Kit

Materials Required for Installation: Drill with a 5/32 inch bit

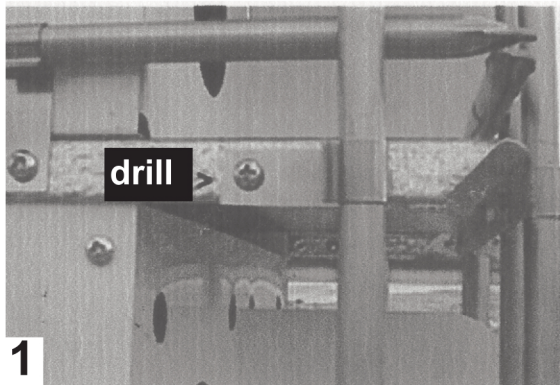

1. Drill a hole in the upper floor panel, 1 inch from the side panel. Then install a clip with nut and screw as shown in picture #1.

2. Repeat the above step two floors below the top floor.
On the 12 unit model, it will be the bottom floor.
On the 16 unit model, it will be the third floor from the top.

3. Remove the screws that retains the front guard rail on the upper floor unit. Place three clips on this screw and install as shown in picture #2.

4. Repeat step 3 on the third floor from the top.

5. Snap the guard rails into place. See picture #3.

You have completed one corner side area.

Repeat these steps for each of the four corner areas of the house.



NOTE: It will be necessary to unclip (remove) the front rails to open the doors for nest inspection.

Thank you for purchasing one of our fine products. If you have any questions or would like more information, please contact us toll-free or email us at birdlovers@birdschoice.com. Visit our website www.birdschoice.com for more of our profesional outdoor birding supplies.

Made in USA according to BirdsChoice quality standards and specifications

birds
CHOICE

477 Vogt Lane • Chilton, WI 53014
866-995-BIRD (2473)
www.birdschoice.com