


ASSEMBLY INSTRUCTIONS

for BirdsChoice Purple Martin House

PMSR8, PMSR12, PMSR16

with Starling Resistant Entrance Holes

Tools Needed: Phillips screwdriver, 5/16" wrench, pliers or adjustable wrench

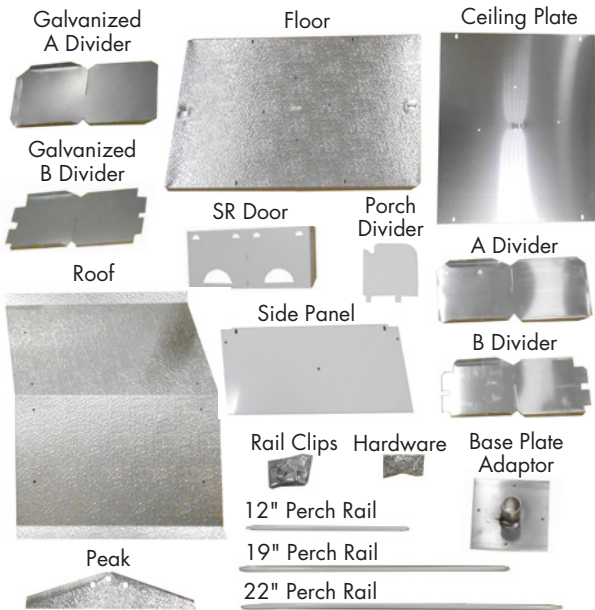

PMSR8 Parts:

- 1 - Galvanized A Divider
- 1 - Galvanized B Divider
- 2 - Floors
- 1 - A Divider
- 1 - B Divider
- 4 - SR Doors
- 4 - Porch Dividers
- 1 - Roof
- 2 - Peaks
- 1 - Base Plate Adaptor
- 4 - Side Panels
- 1 - Ceiling Plate
- 4 - 12" Perch Rails
- 4 - 19" Perch Rails
- 1 - 22" Perch Rail
- 18 - Rail Clips
- 1 - Package Hardware

PMSR12 Parts:

- 1 - Galvanized A Divider
- 1 - Galvanized B Divider
- 3 - Floors
- 2 - A Divider
- 2 - B Divider
- 6 - SR Doors
- 6 - Porch Dividers
- 1 - Roof
- 2 - Peaks
- 1 - Base Plate Adaptor
- 6 - Side Panels
- 1 - Ceiling Plate
- 6 - 12" Perch Rails
- 6 - 19" Perch Rails
- 1 - 22" Perch Rail
- 26 - Rail Clips
- 1 - Package Hardware

PMSR16 Parts:


- 1 - Galvanized A Divider
- 1 - Galvanized B Divider
- 4 - Floors
- 3 - A Divider
- 3 - B Divider
- 8 - SR Doors
- 8 - Porch Dividers
- 1 - Roof
- 2 - Peaks
- 1 - Base Plate Adaptor
- 8 - Side Panels
- 1 - Ceiling Plate
- 8 - 12" Perch Rails
- 8 - 19" Perch Rails
- 1 - 22" Perch Rail
- 34 - Rail Clips
- 1 - Package Hardware

1. Attach the galvanized divider stamped "A" to the top of the floor panel. Attach it across the short side of the floor panel on the side stamped "UP". Attach with 2 screws and 2 nuts through the floor panel **and base plate** (nuts always with white nylon insert out). Do not tighten. This is an important first step - **don't forget the base plate on the bottom.**
2. Place galvanized divider B (*the one that is not stamped*) with slot down into the slot of the "A" divider and secure with 2 screws and 2 nuts through the floor **and base plate**. Tighten all 4 screws. **NOTE: Galvanized dividers only go on the bottom floor.**




Step 1


bottom of floor panel w/base plate adaptor

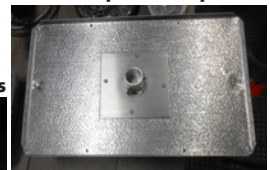

floor panel w/room dividers

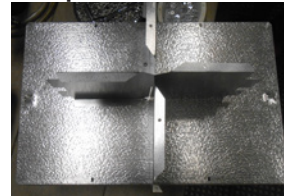

Step 2

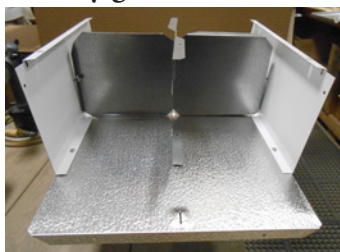


Step 3

3. Place 1 white side panel on the floor assembly with the stamped word "UP" facing up. Attach with 2 screws and 2 nuts to the floor panel and 1 screw and 1 nut through divider "A". Repeat this step on the other side.

Step 4

4. Place the next floor panel on top of the completed floor unit. Make sure the stamped word "UP" is facing up. Repeat the instructions for placing and attaching the "A" divider and other divider (no marking). Secure with screws and nuts through the new divider, the floor and the lower dividers. Attach 2 more white side panels as in Step 3.

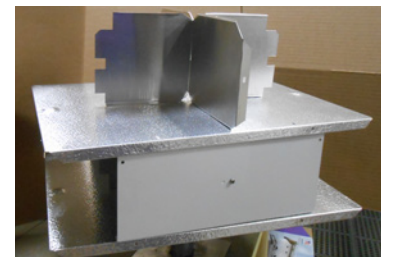

Step 6

5. Repeat Step 4 for each floor unit. Example: 3 floor units for PMSR12 model.
6. Attach the ceiling plate (with the stamped word "UP" facing up). Secure with 8 screws and 8 nuts through the ceiling plate, side walls and interior dividers.


7. Attaching the side rails. Attach 2 rail clips with screws and nuts on each side of the outside of the white panels. Face the loop of the clips to the **OUTSIDE**. Do not tighten. Turn the loop of the clips up, center the 19" rod along the side and snap onto the clips on each side. Tighten the 4 screws. Repeat on all floors.




Step 7

- Attach the roof assembly to the house at the 4 screw locations with screws & nuts.
- Insert tabs of porch divider into door slots and twist slightly to lock tabs.


Step 8

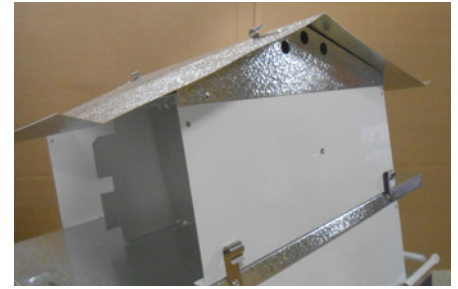

Step 10

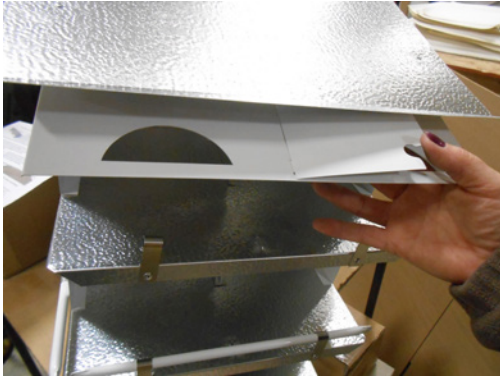


Step 9

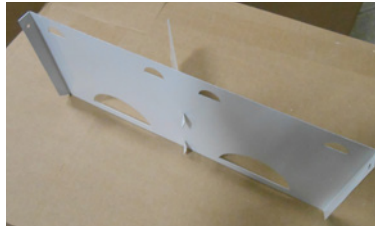


- Install each door to the **INSIDE** of the wall panels, vents to the top. It is important to have the door up when doing this. Tighten each side enough to allow each door to remain open, but not so tight that it binds when opening & closing. **ALWAYS** swing the porch dividers to the right when opening the doors. This is how you will check the nest by opening and closing these doors.

- Attaching the front rails. Attach 2 rail clips with screws and nuts on the short sides of the house. Face the loop of the clips to the **INSIDE**. Turn the loop of the clips up, center the 12" rod along the side and snap onto the clips on each side. Center and tighten the 4 screws. Swing the porch dividers to the front and lock into the indent of the floor panel. The front dowel clips can be adjusted inward so that the rail will lock the porch divider in the indent securely.

Step 12

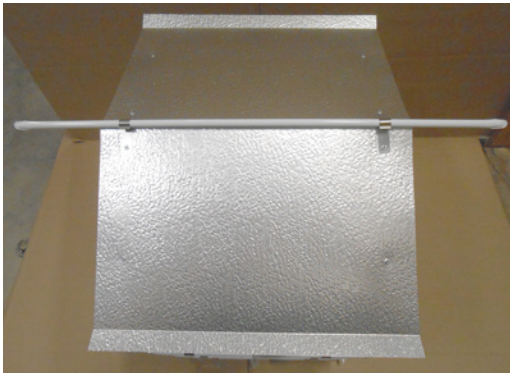

Step 11

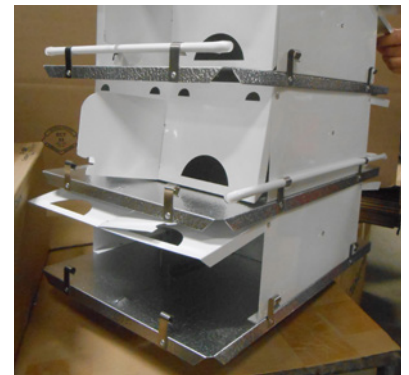

- To attach the top perching rail, rotate the clips so the loops are at the peak of the roof. Center and snap the 22" perch rail into place.

Your house is now ready for the mounting pole.

Thank you for purchasing one of our fine products.

If you have any questions or would like more information, please email us at birdlovers@birdschoice.com. You can also visit our website www.birdschoice.com for information and to see more of our professional outdoor birding supplies.

Proudly made in Chilton, Wisconsin, USA according to BirdsChoice quality standards and specifications



Shown assembled is the PMSR12 - 3 Floor SREH (Starling Resistant Entrance Hole) Purple Martin House

birds
CHOICE

477 Vogt Lane • Chilton, WI 53014
866-995-BIRD (2473) • www.birdschoice.com

ASSEMBLY INSTRUCTIONS for Roof

1 Locate the roof section and 2 roof peak sections.



2 With the bend on the peaks to the inside of the roof, put 2 screws through from the top of the roof and through the hole on the bend on the peak, (outside) short ends first. Secure with nuts.

3 Put 1 screw through the holes on the roof and peak towards the top of the roof. Secure with nut.

4 Place one rail clip on top of the roof, insert screw through clip, roof and peak. Secure with nut.

5 Repeat Step 2, 3 and 4 to secure the other peak to the roof section. The rail clips should be on the same side as shown in the picture. Turn rail clips up so loop is at the peak of the roof.

6 After all 8 screws are tightened, the roof is ready to be attached to the house.

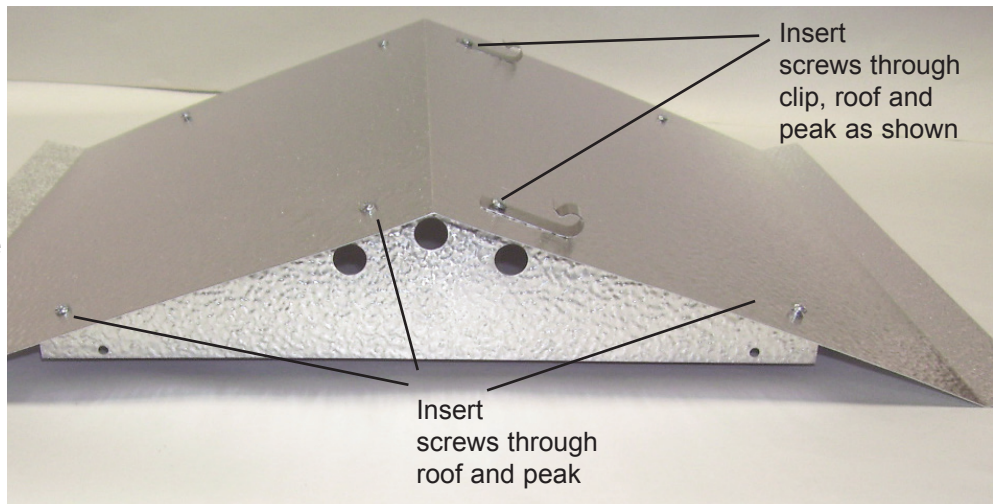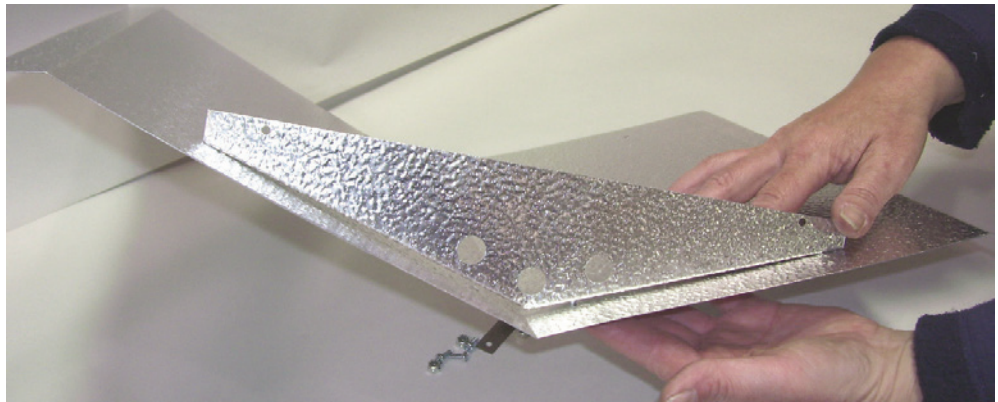

birds
CHOICE

477 Vogt Lane • Chilton, WI 53014
866-995-BIRD (2473)
www.birdschoice.com

Purple Martins are almost totally dependent on man-made housing and return to the same house year after year even though they fly thousands of miles to migrate in South America.

Purple Martins nest and raise their young in the United States. Should Americans fail to continue supplying martins with man-made housing, they would likely fall into extinction.

Purple martins eat only flying insects which they catch in flight. They feed during the daytime and their diet is diverse. They also drink and bathe on the fly.

Attracting Martins


Providing proper housing is the true key to success.

1. Locate your purple martin house in the right area. There should be no trees taller than your purple martin house within 40 feet.
2. Martins love humans, so your purple martin house should be 30-120 feet away from your house or where humans gather regularly.
3. Your purple martin house should be erected on a telescoping pole for easy nest checks and cleaning at the end of the season. Nest checks will not cause martins to abandon their nests or their colony site.
4. Keep predators from entering your purple martin house, such as sparrows, starlings, snakes and raccoons. If any other species of bird is allowed to claim martin housing first at an uncolonized site, any martins that may come around are not likely to stay because they will be aggressively chased away.
5. To check nests or to clean the house after the purple martins have vacated it and headed south, move the porch divider out of the slot and swing to the left or right. Lift the door up. To close, push the door down and swing the porch divider back to the locking position.

For more information, visit <http://purplemartin.org>



The nest, constructed by both male and female, is composed of a collection of twigs, grasses, straw. If during a nest check you see the cavity filled with a mass of grass, feathers, and trash, remove it. House sparrows should not be allowed to occupy or share the martin house at any time of the year.

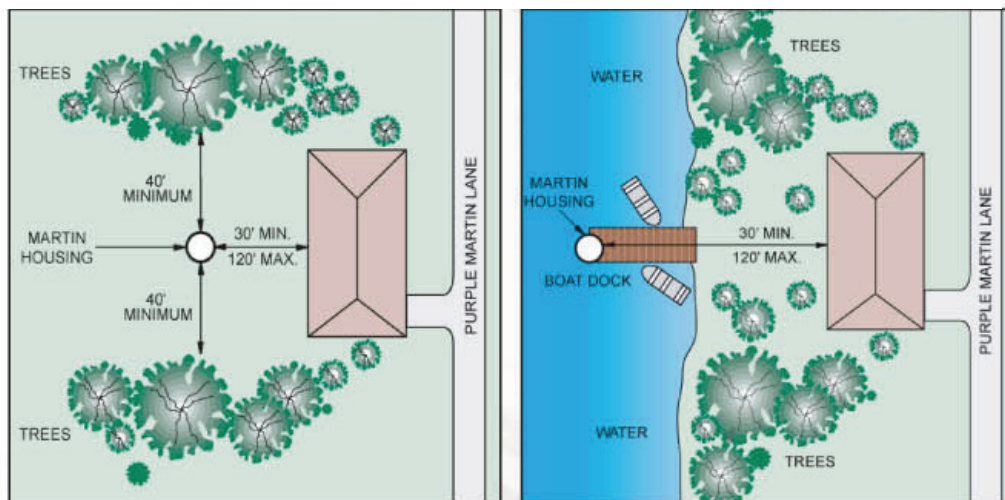

birds
CHOICE

Thank you for your purchase.
If you have any questions,
please contact us at
866-995-BIRD (2473) or email us
at birdlovers@birdschoice.com.
Made in Chilton, WI, USA