



CUSTOMISATION SHOP

# **INSTRUCTION MANUAL**

HIDE AWAY MOUNT

**AIRLIFT - VERTICAL** 





www.fatfender.com

## HIDE AWAY MOUNT - AIRLIFT - VERTICAL

FFG INSTALLATION GUIDE 📻

#### Package Includes:

- Controller Mount
- Mounting Surface
- Mounting Block
- Hardware




#### Step 1: Mount Controller

- Screw the controller mount to the smaller mounting surface of the hinge using the provided 6-32 x ¼" button head screws.
- We recommend applying blue Loctite.


### Step 2: Attach Blocks

- Screw the mounting block to the larger mounting surface of the hinge using the provided 6-32 x ¼" button head screws.
- We again recommend applying blue Loctite.

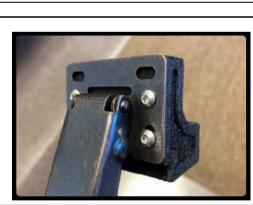

#### Step 3: Drill Holes

- The holes that you need to drill for the mounting block are 1" apart. We recommend using a 5/32" drill bit.
- Once you have drilled your holes, you can install the hinge assembly under your dash using the provided 10/32 x 3/8" button head screws.

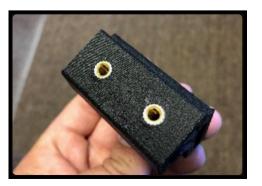




1315 N Marvin Ct, Phoenix AZ, 85233 • Phone: 480 - 621 - 6072 • www.fatfender.com

#### Step 4: Test Fitment

- Check to make sure that the Hideaway mount is snug and secure and test its function.
- Any loose screws can have Loctite added to them, to further ensure their durability.

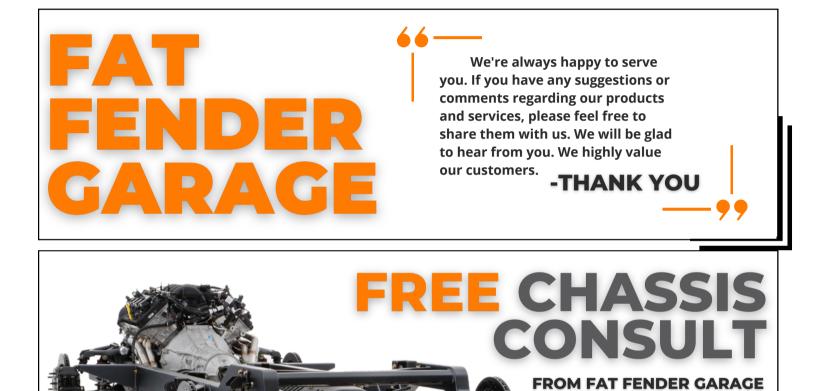

LEARN MORE



PAFA3

1315 N Marvin Ct, Phoenix AZ, 85233 Phone: 480 - 621 - 6072 www.fatfender.com