

Step
7

Unwrap the slats & lay them in your frame with the joining cleats on the slats facing down.



Step
8

Now lay your mattress on the top, fit your sheets and take a nap. Congratulations on your bed assembly!

*Thank you for investing
in a Coastwood slat bed.*

BED ASSEMBLY INSTRUCTIONS

HEAVY DUTY

INSTALL IN 8 SIMPLE STEPS!

Coastwood
FURNITURE 

BEFORE YOU START:


Please check you have all components

- Head End x 1
- Foot End x 1
- Side Rails x 2
- Centre Rail (For sizes Double & larger)
- Centre Leg (For sizes King & Super King)
- Set of slats
- Black Hex head screws x 12 (For rail brackets)
- Allen Key for screws
- 60mm JC Bolt x 1 (For sizes King & Super King)

You are now ready to assemble your bed. We recommend this is done by two people.


Step
1

Take the head end and stand it upright against something solid

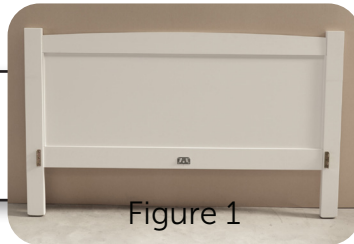

Step
2

Take one side rail and attach to headend as shown in figure 2. Ensure the slat spacers on the inside of the side rail are facing up as shown in figure 3. Insert the black hex screws and screw in loosely, do not tighten yet.

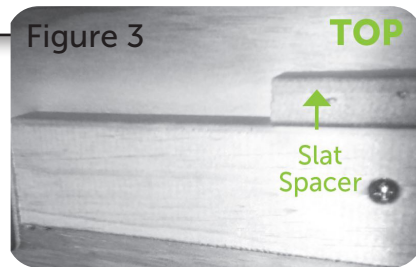

Step
3


Move foot end into position and attach side rail as per head end.

Step
4

Now attach the other side rail following instructions in steps 2 & 3 and tighten all screws with the Allen Key supplied.

Step
5

Fit the centre rail. Make sure this is sitting right down in the slots on the brackets. (Figure 5)

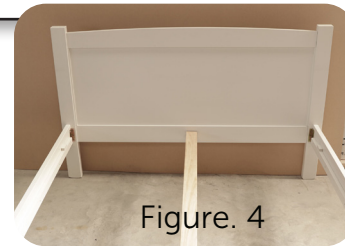

Step
6

(For sizes King & Super King)

- Place centre leg under the centre rail.
- Screw 60mm JC Bolt through the centre rail into the insert nut that is in the end of the centre leg.
- Tighten from top with the 4mm Allen Key.
- Adjust the foot so it is sitting just above the floor.

