


Step
8

(For sizes King & Super King)

- Place centre leg under the centre rail.
- Screw 60mm J C Bolt through the centre rail into the insert nut that is in the end of the centre leg.
- Tighten from top with the 4mm Allen Key.
- Adjust the foot so it is sitting just above the floor.

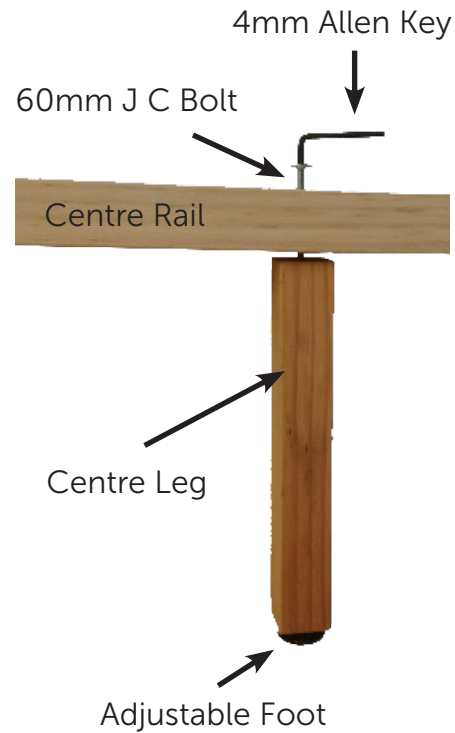

Step
9

Unwrap the slats & lay them in your frame with the joining cleats on the slats facing down.



Step
10

Now lay your mattress on the top, fit your sheets and take a nap. Congratulations on your bed assembly!

BED ASSEMBLY INSTRUCTIONS

INSTALL IN
10 SIMPLE
STEPS!

*Thank you for investing
in a Coastwood slat bed.*

Coastwood
FURNITURE 

BEFORE YOU START:


Please check you have all components -

- Head End x 1
- Foot End x 1
- Side Rails x 2
- Centre Rail (For sizes Double & larger)
- Centre Leg (For sizes King & Super King)
- Set of slats
- 18mm Pozi drive screws x 4
- 60mm JC Bolt x 1 (For sizes King & Super King)

You are now ready to assemble your bed. We recommend this is done by two people.


Step
1

Take the head end and stand it upright against something solid

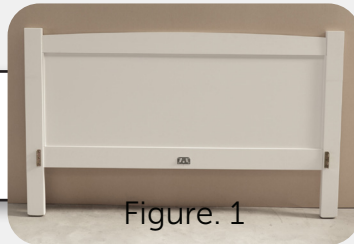

Step
2

Take one side rail and attach to head end as shown in figure 2.
**Please make sure that top of rail is facing up as shown in figure 3*
**Please note cleat at inside of side rail and slat spacer at top.*
**Some ranges will have the cleats higher than shown.*

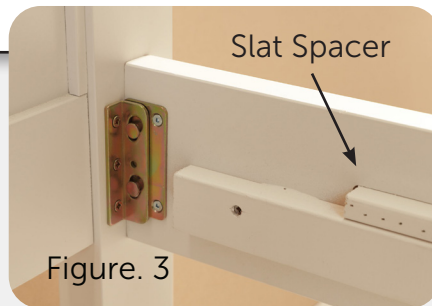

Step
3

Move foot end into position and attach side rail as per head end.


Step
4

Now attached the other side rail following instructions in step 2 & 3.

Step
5

Make sure the lugs on the side rail brackets are sitting right down to the bottom of the slots in the bracket on head and foot ends (Figure 5)

The first time assembling, fitting may be tight so you may need to stand on the side rail with soft soled shoes and jiggle. (Figure 4)

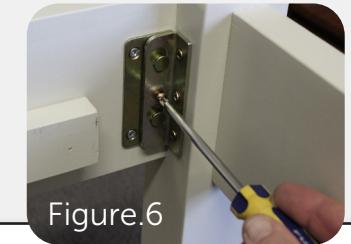

Step
6

Insert Pozi drive screw through the hole on both brackets, on side rails and bed. This is your locking screw which holds the side rails firmly in place. (Figure 6)

Step
7

Fit the centre rail. Make sure this is sitting right down in the slots on the brackets. (Figure 8)

