

7

Insert the Cross Dowels and 100mm JC Bolts into the two upper safety rails already assembled.

8

Install the last side rail, repeating step 6.



Fig. 5

9

Decide which end you want the ladder. On the opposite end to this, push one of the medium safety rails into the dowels, insert the Cross Dowel into the hole, then insert the JC Bolt and finger tighten. Ensure the holes on the face are facing inside. Repeat for the second rail. Install the short rails on the opposite end, using the same process as above. Install the bottom ladder rail using the same process as the bottom back rail in step 6. Refer to the fully assembled image on the front to help.

10

Hook the ladder over the side rail. Insert the 60mm JC Bolts through the inside of the rails, into the ladder (Fig. 6). Use the remaining two 60mm JC Bolts and Bolt Caps on the opposite loft end (Fig. 7). Tighten all JC Bolts with the Allen Key. Screw the ladder hooks to the side rail using the 1" screws.

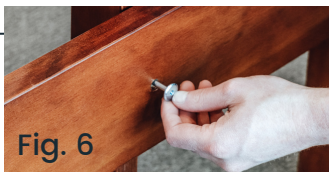


Fig. 6

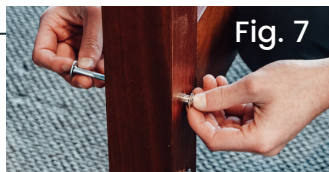


Fig. 7

11

Take both of the gate slats and sit in place. Screw the four corners of each gate down using the 1, 1/4" screws through the pre-drilled holes.



Fig. 8

Coastwood Loft Assembly Instructions

For sizes Single and King Single
2 Person Assembly Recommended

Thank you for your purchase. Please follow the instructions for correct assembly.

Tools Required:

- Hammer
- Battery drill, or screw driver with pozi driver or no.2 square drive
- Flat head screwdriver



Parts List:

-  2 x JC Bolt Caps
-  2 x 1" Screws
-  18 x Cross Dowels
-  8 x 1, 1/4" Screws
-  24 x Dowels
-  8 x 60mm JC Bolts
-  18 x 100mm JC Bolts
-  1 x 4mm Allen Key

Parts list continued:



1 x Pack of bed slats
(2 gates)

- 1 x Ladder
- 2 x Loft ends
- 1 x Long bottom back rail (137mm wide)
- 2 x Long safety rails (117mm wide)
- 2 x Side rails (with cleats)
- 2 x Medium safety rails (1380mm long)
- 1 x Bottom ladder rail (650mm long)
- 2 x Short safety rails (300mm long)

Warning:

- Top lofts and elevated beds are not recommended for children under the age of 9.
- The upper loft bed must be more than 2 m from any ceiling fan.
- Children should be discouraged from playing on the loft bed.
- The loft bed should be checked periodically to ensure that the guardrail, ladder and other components are maintained in the correct position and state of repair and that all connectors are tight.

Instructions:

- 1** Ensure you have a smooth surface for assembling (carpet or rug). Insert the wooden dowels into the top 12 x 9mm holes in each loft end.



Fig. 1

- 2** Lean the loft end against a wall on its side. Make sure the side you want to be the back is on the floor (Fig. 2)

- 3** Push the two safety rails into the top dowels on the loft end. The face with the holes should face down. Then push a side rail into the bottom set of dowels (Fig. 2). Ensure the locator cleats on the side rail are facing up.



Fig. 2

- 4** Insert a Cross Dowel into the hole at the end of the side rail. Using the flathead screwdriver, ensure the groove is horizontal. Insert a 100mm JC Bolt through the back of the loft end, into the Cross Dowel and finger tighten.



Fig. 3

- 5** Stand the other loft end on its side to mirror the other end. Repeat steps 3 and 4.

- 6** Lift bunk upright. Get the long bottom back rail and insert four Cross Dowels into the holes on the face, ensuring the groove is horizontal. The holes on the face should be facing outwards. Lift the rail up and insert the 100mm JC bolts through the leg and into the the Cross Dowel and finger tighten. Repeat on other side.



Fig. 4