


Step
7

(For sizes King & Super King)

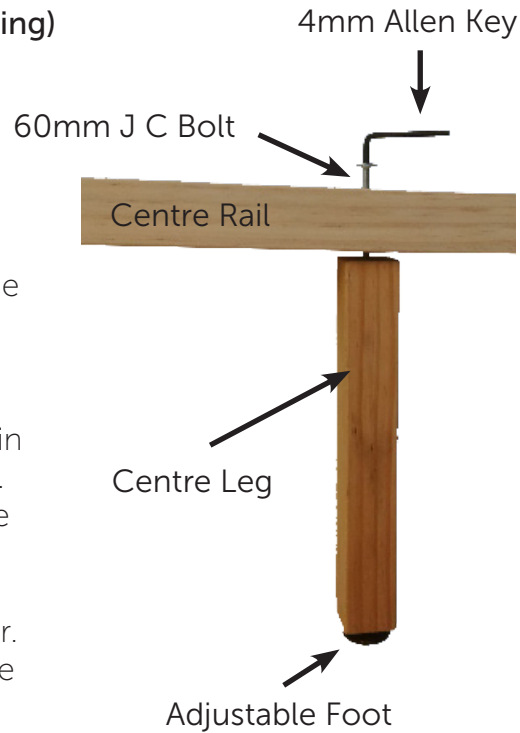

- Place centre leg under the centre rail.
- Screw 60mm JC Bolt through the centre rail into the insert nut that is in the end of the centre leg.
- Tighten from top with the 4mm Allen Key.
- Adjust the foot so it is sitting just above the floor.
- Put slats on and complete the bed assembly.

Step
8

Unwrap the slats & lay them in your frame with the joining cleats on the slats facing down.



Step
9

Fit Headboard using 32mm headboard bolts and screwing through from the back of the headboard



FLOATING FRAME BED ASSEMBLY INSTRUCTIONS

INSTALL IN 9 SIMPLE STEPS!

Thank you for investing
in a Coastwood slat bed.

Coastwood
FURNITURE 

BEFORE YOU START:

Please check you have all components -

- Headboard
- End Rails x 2
- Side Rails x 2
- Corner blocks with feet attached x 4
- Centre Rail (For sizes Double & larger)
- Centre Leg (For sizes King & Super King)
- Set of slats
- Pack which includes:
 - 60mm Headboard bolts x 4
 - 50mm JC Bolts x 8
 - 60mm JC Bolt x 1 (For sizes King & Super King)
 - Allen Key for JC bolts 6mm
 - Black Hex head screws x 12 (For rail brackets)
 - Allen Key for screws



Step
1

Take the headend and stand it upright against something solid.

Step
2

Take one side rail and attach to headend as shown in figure 1. Ensure the slat spacers on the inside of the side rail are facing up as shown in figure 2. Insert the black screws and screw in loosely, do not tighten yet.



Figure 1.

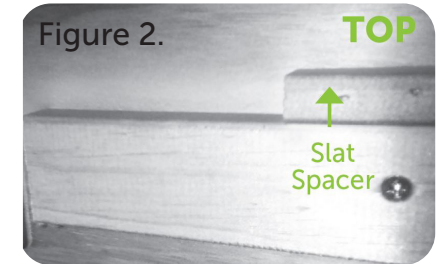


Figure 2.

Step
3

Move foot end into position and attach side rail as per headend.

Step
4

Now attach the other side rail following instructions in steps 2 & 3 and tighten all screws with the Allen Key supplied.

Step
5

Stand bed on its side and fit the corner blocks in place using the 50mm JC bolts.



Step
6

Lay bed back down onto its feet and fit the centre rail. (Only for beds size Double & larger)

