


Trundler Assembly Instructions

BEFORE YOU START:

Please check you have all components -

- 2 x side rails
- 2 x end rails
- 8 x wooden dowells
- 4 x screw-in Maxifix bolts
- 1 x Allen Key

Coastwood
FURNITURE 

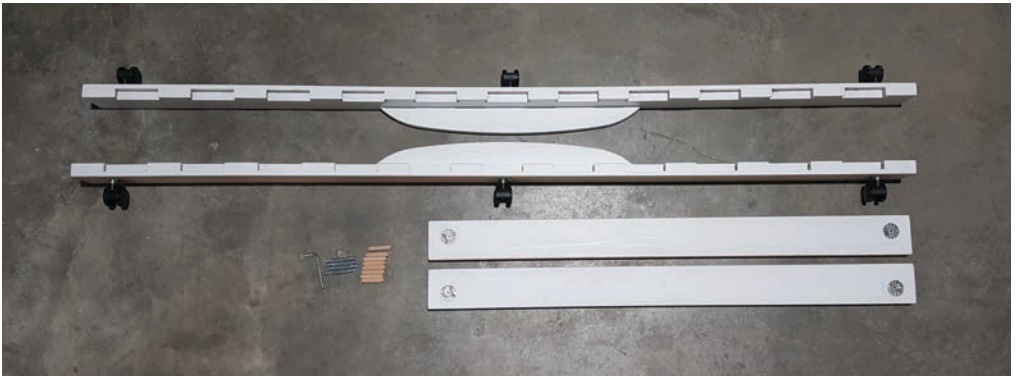

Step
1

Insert wooden dowells and Maxifix screw-in bolt into end of side rails




Step
2

Slot the end of the side rails into the end rail, inserting the dowells and bolt to the pre-drilled holes.



Step
3

Make sure the arrow on the Maxifix casing is pointing towards the Maxifix bolt. Use the provided Allen Key to tighten Maxifix casing.

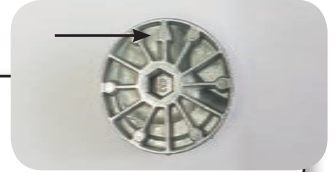

Step
3

Insert slats and your trundler is ready to use!



Your trundler is now ready for use.
Thanks for choosing quality New Zealand made product.
Enjoy!