
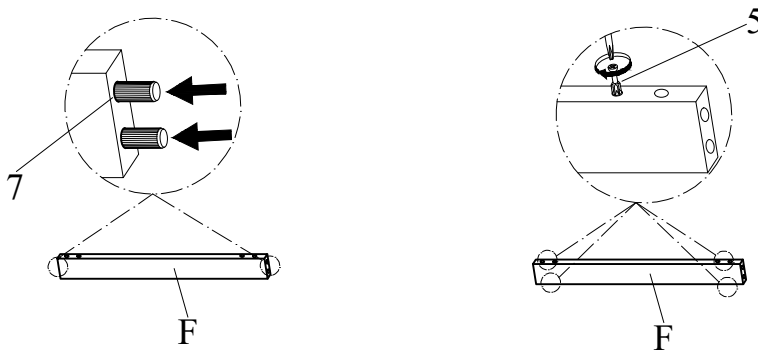
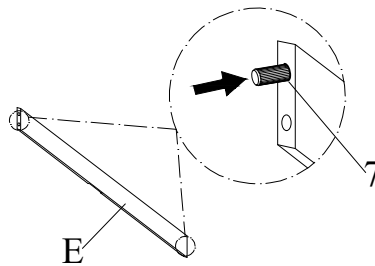
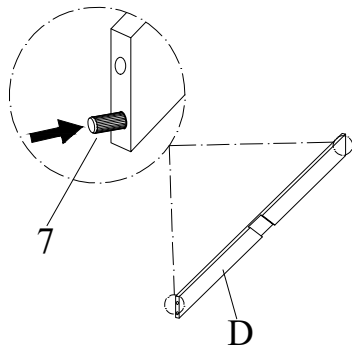
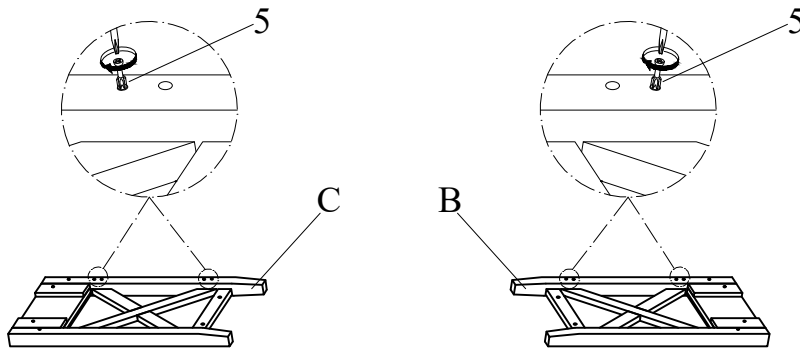



MODEL : SUMMER 2D/1SH CONSOLE TBL*1200

ASSEMBLY INSTRUCTION

Step 1

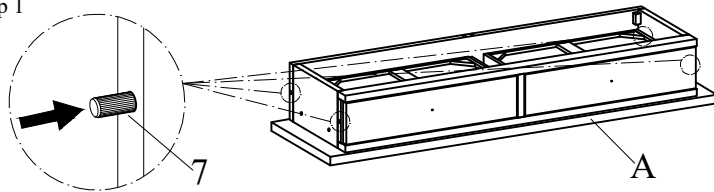


Step 2

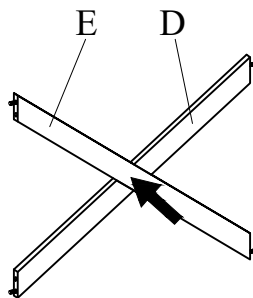

No	Hardware List	Qty
1	Ball Shape Allen Key M4	1 Pc
2	JCBC M6 x 35mm (BOLT)	8 Pcs
3	Spring Washer M6	8 Pcs
4	Flat Washer M6	8 Pcs
5	Mini Fix 24mm	8 Pcs
6	Mini Fix Housing	8 Pcs
7	PVC Dowel M8 x 30	16 Pcs
8	CSK Screw M4 x 38mm	1 Pcs
9	I- Bracket	1 Pc
10	CSK Screw M4 x 16mm	2 Pcs
11	Handle (JD3853) & 1 pc Screw 22mm	2 Sets


Part List

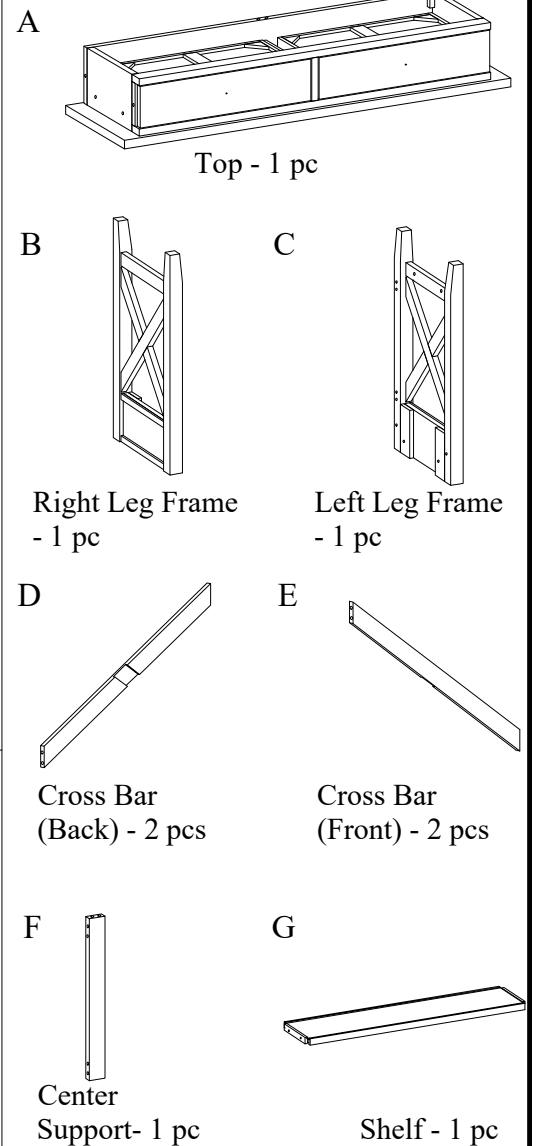


*** Notes : 1. Do not fully tighten the bolts until all bolts are attached.

2. Do not over tighten the bolts. This will avoid causing damage to the thread.


Step 3

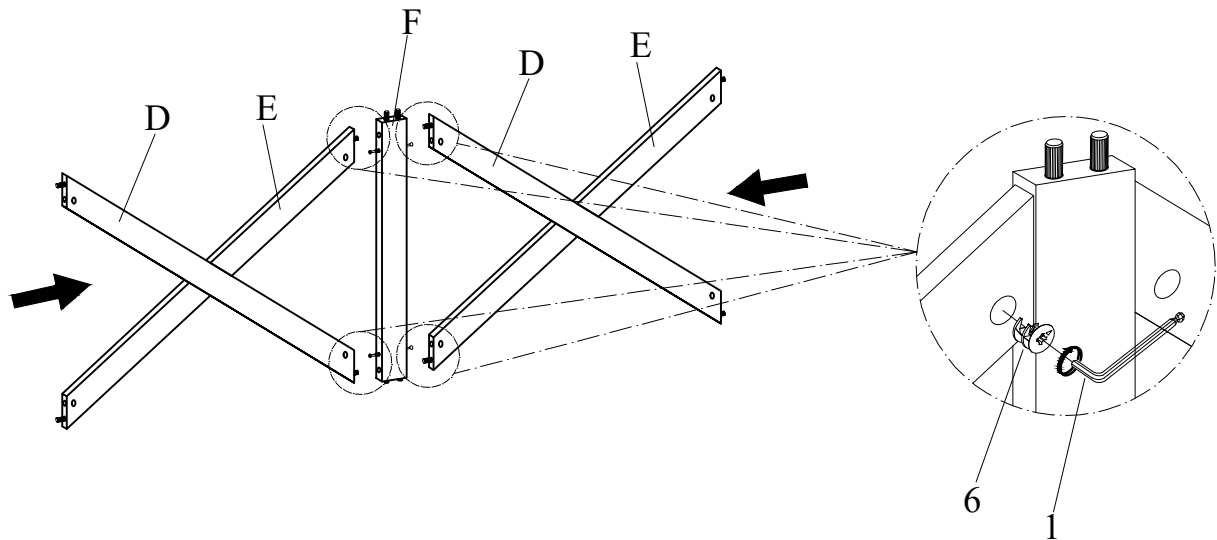

Step 4

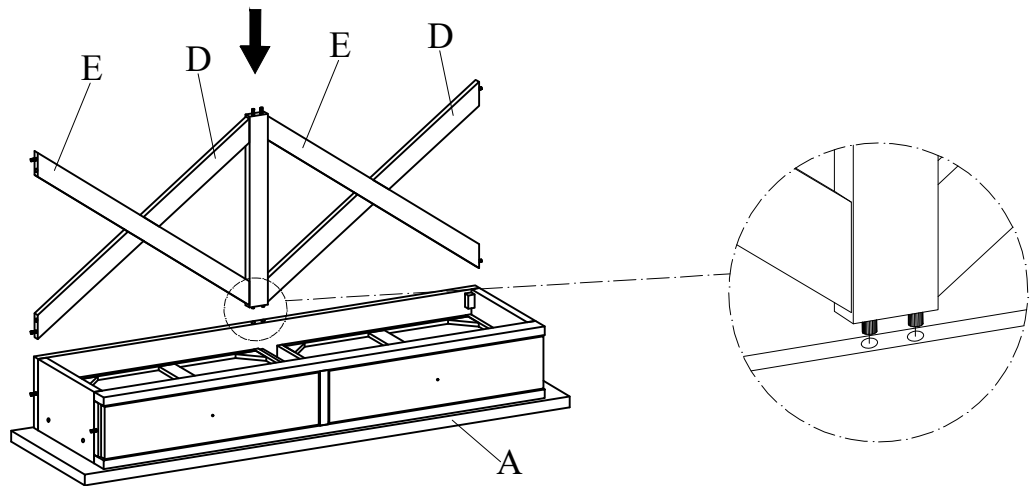


Step 5

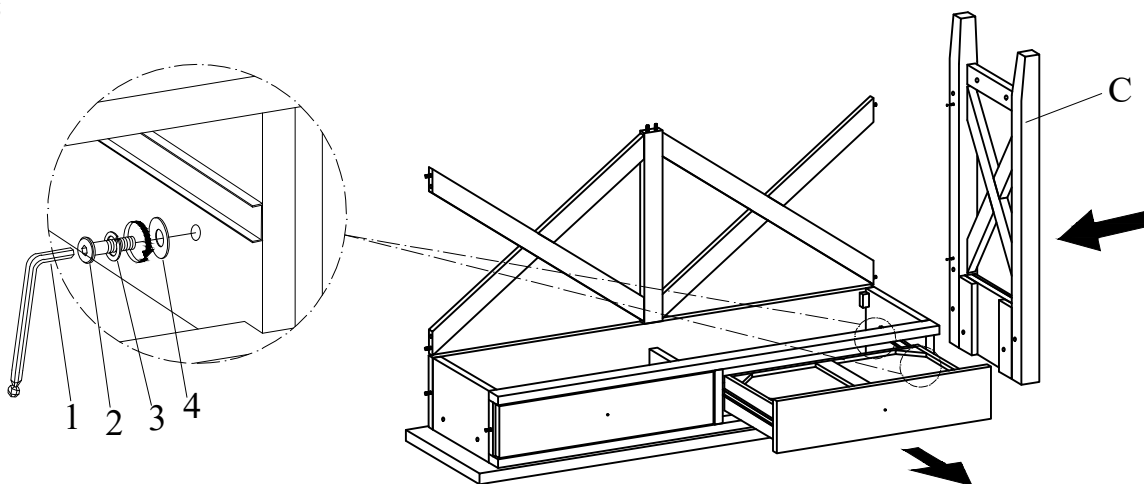

*** Do not fully tighten the bolt


- *** Notes :
1. Do not fully tighten the bolts until all bolts are attached.
 2. Do not over tighten the bolts. This will avoid causing damage to the thread.

Step 6

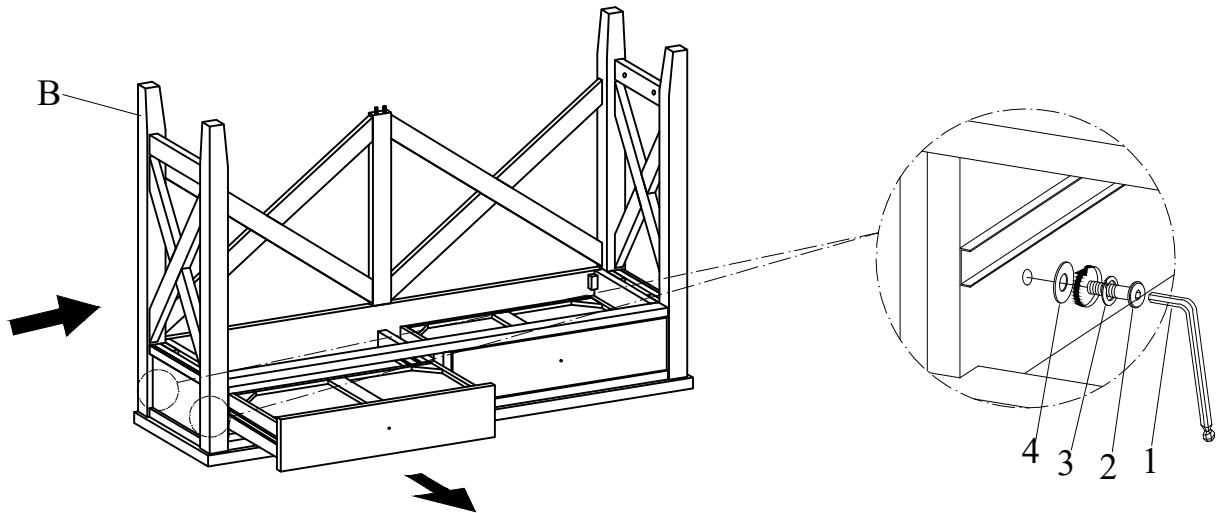


*** Do not fully tighten the bolt

Step 7

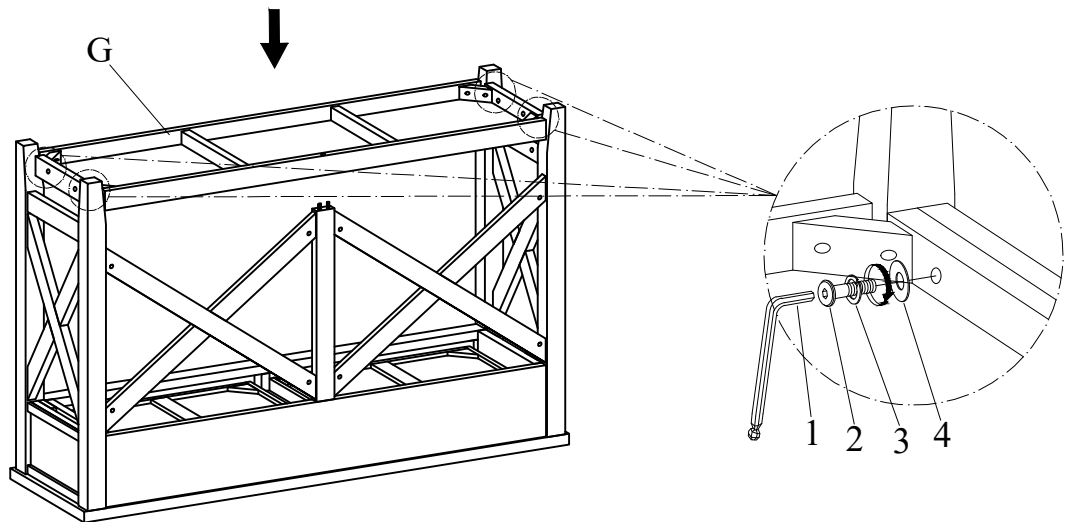

*** Fully tighten all the bolts


Step 8

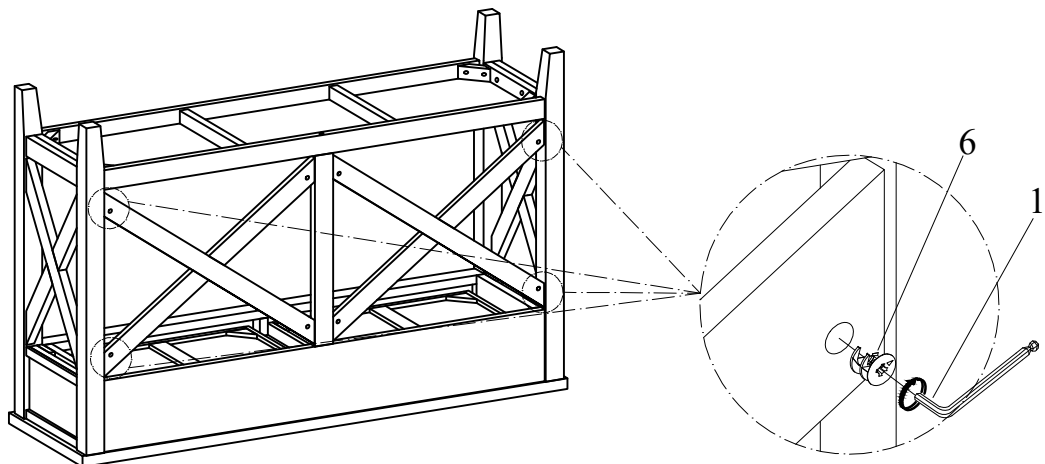


*** Fully tighten all the bolts

- *** Notes :
1. Do not fully tighten the bolts until all bolts are attached.
 2. Do not over tighten the bolts. This will avoid causing damage to the thread.


Step 9

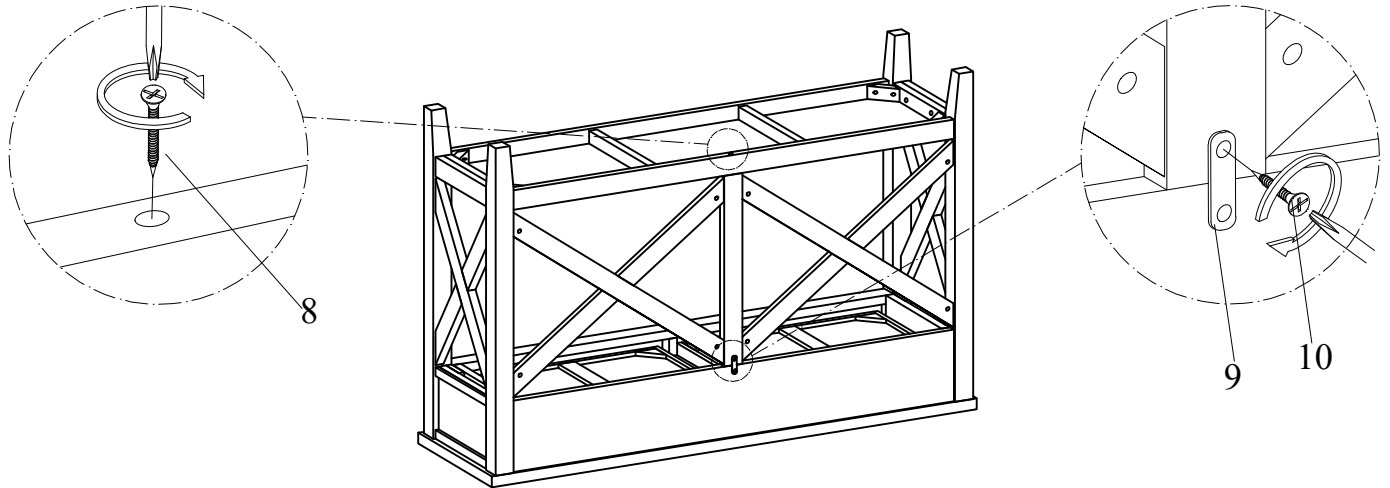

Step 10

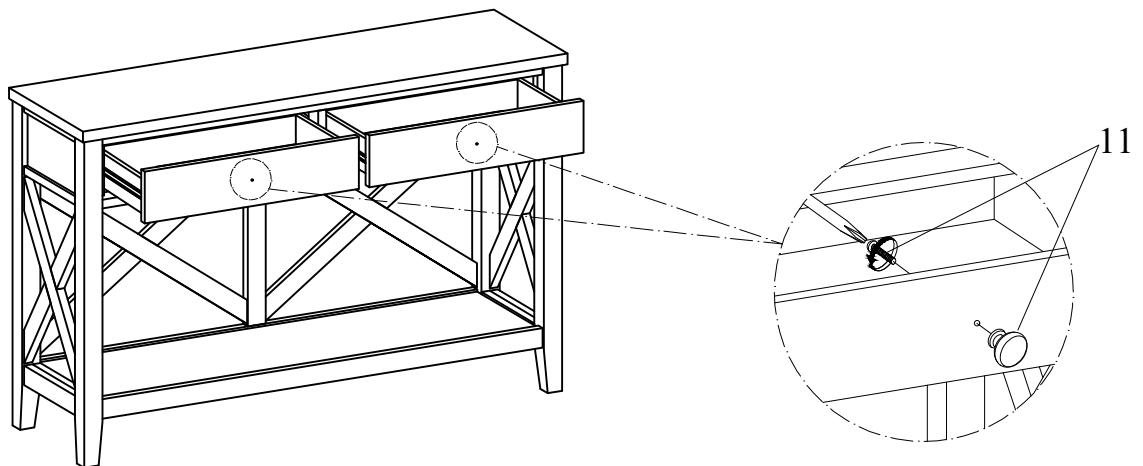

Step 11

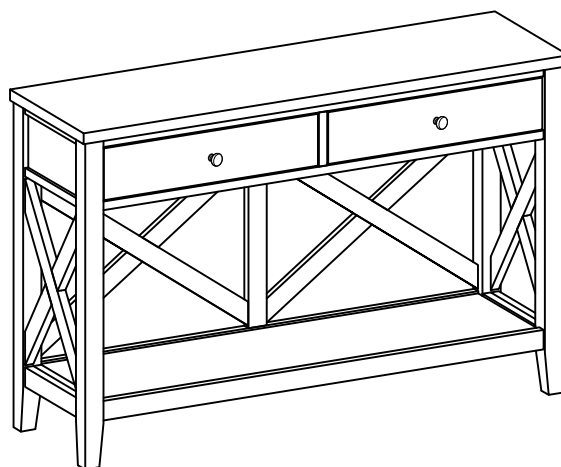

*** Notes : 1. Do not fully tighten the bolts until all bolts are attached.
2. Do not over tighten the bolts. This will avoid causing damage to the thread.