





NAOS DUAL USB TV BED WITH STORAGE

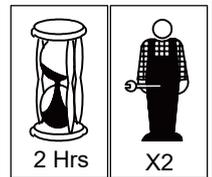


Assembly Instructions

please keep these instructions for future reference

Double & King

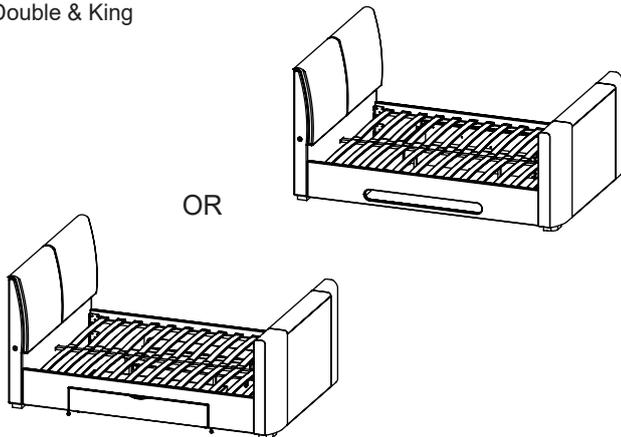


Super King

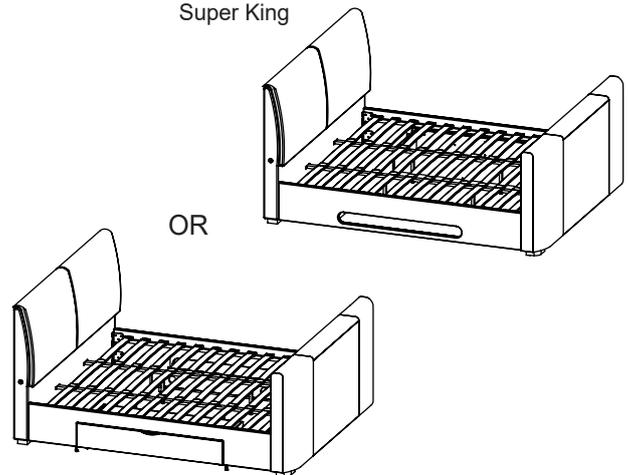

Important Information

- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.
- Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:

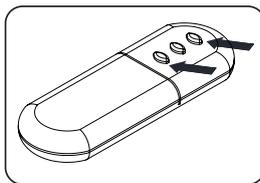

- ①. Disconnect all mains electric power to the bed, for at least 60 seconds.
- ②. Press UP or DOWN Button on Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. TV Lift unit receives signal from Remote Control and lift will begin to move UP or DOWN whichever direction is appropriate.
- ③. Re-connection is now completed.

Product Information

- TV bed.
- Upholstered Bed Using Polyester Fabric. Bed conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 14 Kg
- Compatible with slimline LED television with a screen size of 42".
- Maximum TV dimensions: W97 x H56 x D8cm

Care Instructions

- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the colour.
- Periodically check & re-tighten any fastener.
- Periodically dust lightly with a light vacuum cleaner or wipe with a clean soft cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

Nestco will not be held responsible for any damage caused to the TV, TV cabling or the TV Bed itself, due to incompatibility of any additional equipment installed by the end-user or due to loose and poorly installed cabling (see Step 11).

Please read this Assembly Instruction carefully and follow the recommendations.

☞ Conforms To LA08 SERIES TV LIFT STANDARD FOR UK (LVD + EMC)

EN 60335-1:2012+A11: 2014

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2: 2013

EN 301 489-1 V2.2.0: 2017

EN 301 489-3 V2.1.1: 2017

EN 55014-1:2006+A1:2009+A2:2011

EN 61000-3-2: 2014

EN 62233: 2008

EN 300 440 V2.1.1: 2017

EN 301 489-3 V2.1.1: 2017


EN 62479: 2010

EN 55014-2: 2015

EN 61000-3-3: 2013


Components Packed in carton 1

(1) Headboard x 1

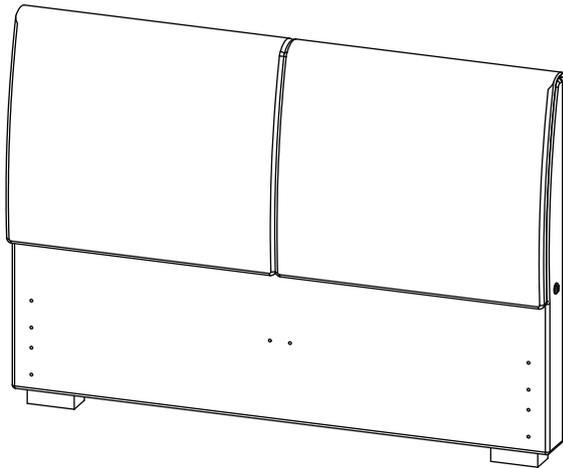

Components Packed in carton 2

(2) Footboard x 1

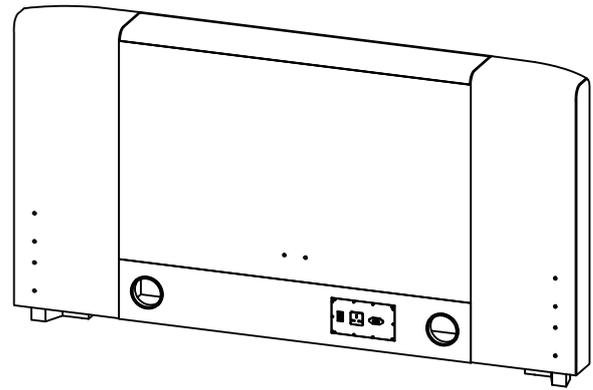

ALL HARDWARE IS IN CARTON 2 - ASSEMBLING THE BED & FITTING TV

HARDWARE FOR ASSEMBLING THE BED

A x16



M8x30mm

B x16



Ø8mm


C Double & King x28

Super King x36



Ø8mm

D x1




Allen Key (5mm)

E Double & King x8

Super King x12

M8x45mm



F x6 Double & King x4

Super King x8

M8mm



G x1



Spanner

H x27

Screws (Ø5x50mm)



J x8

Screws (Ø4x30mm)



K x20



Screws (Ø3x20mm)

L x27



Plastic Barrel Nuts

M x5




Wheel

N Double & King x10


Super King x14

M8x25mm




HARDWARE FOR TV INSTALLATION


P x1



Allen Key (5mm)




Allen Key (4mm)



Allen Key (2.5mm)


Q x2



Screw-Washer sets
(M8x25mm)




Counter-Sunk Screws
(M6x12mm)



Counter-Sunk Screws
(M4x12mm)

CABLES & ACCESSORIES FOR TV INSTALLATION

S x1



Power Lead - 3 metre

T x2








HDMI Leads - 2.8 metre

U x1







Aerial Lead - 4 metre











CABLES & ACCESSORIES FOR TV INSTALLATION
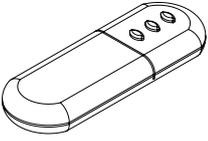
<p>V x3</p>  <p>Cable Clips</p>	<p>W x3</p>  <p>Cable Ties</p>	<p>X x1</p>  <p>HDMI 90° adaptor</p>
<p>Y x1</p>  <p>TV Lift Remote</p>	<p>Z x1</p>  <p>Adapter</p>	


Components Packed in carton 3

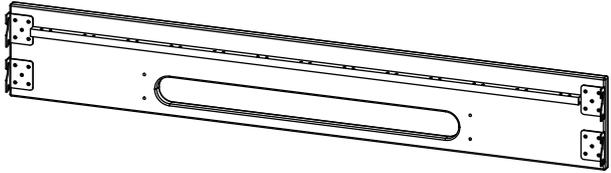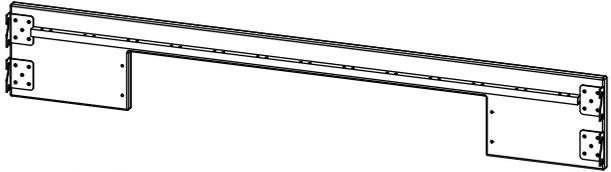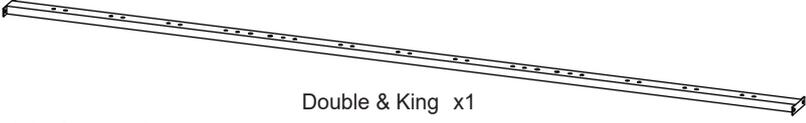
 <p>(3) Side Panel (fit media tray) x1</p>	 <p>(4) Side Panel (fit drawer) x1</p>
 <p>(5) Centre Support Bar</p> <p style="margin-left: 100px;">Double & King x1 Super King x2</p>	 <p>(6) Centre Leg</p> <p style="margin-left: 100px;">Double & King x2 Super King x4</p>

Components Packed in carton 4


 <p>(7a&7b) Adjust Support Legs x1 Pr</p>	 <p>(8) Wooden Slats</p> <p style="margin-left: 100px;">Double x24 King x26 Super King x39</p>	 <p>(11) Media Tray Support Legs x2</p>
 <p>(9) Single Plastic Cap</p> <p style="margin-left: 100px;">Double x24 King x26 Super King x26</p>	 <p>(10) Double Plastic Cap</p> <p style="margin-left: 100px;">Double x12 King x13 Super King x26</p>	
 <p>(12) Media Tray Base Panel x1</p>	 <p>(13) Media Tray Back Panel x1</p>	 <p>(14) Media Tray Left Side Panel x1</p>
 <p>(15) Media Tray Right Side Panel x1</p>	 <p>(16) Drawer Face Panel x1</p>	 <p>(17) Drawer Side Panels x2</p>
 <p>(18) Drawer Front Panel x1</p>	 <p>(19) Drawer Back Panel x1</p>	 <p>(20) Drawer Bottom Panel x1</p>
 <p>(21) Drawer Bottom Side Support Rails x2</p>	 <p>(22) Drawer Bottom Middle Support Rail x1</p>	


Step 1

C  x4 D  x1 E  x4

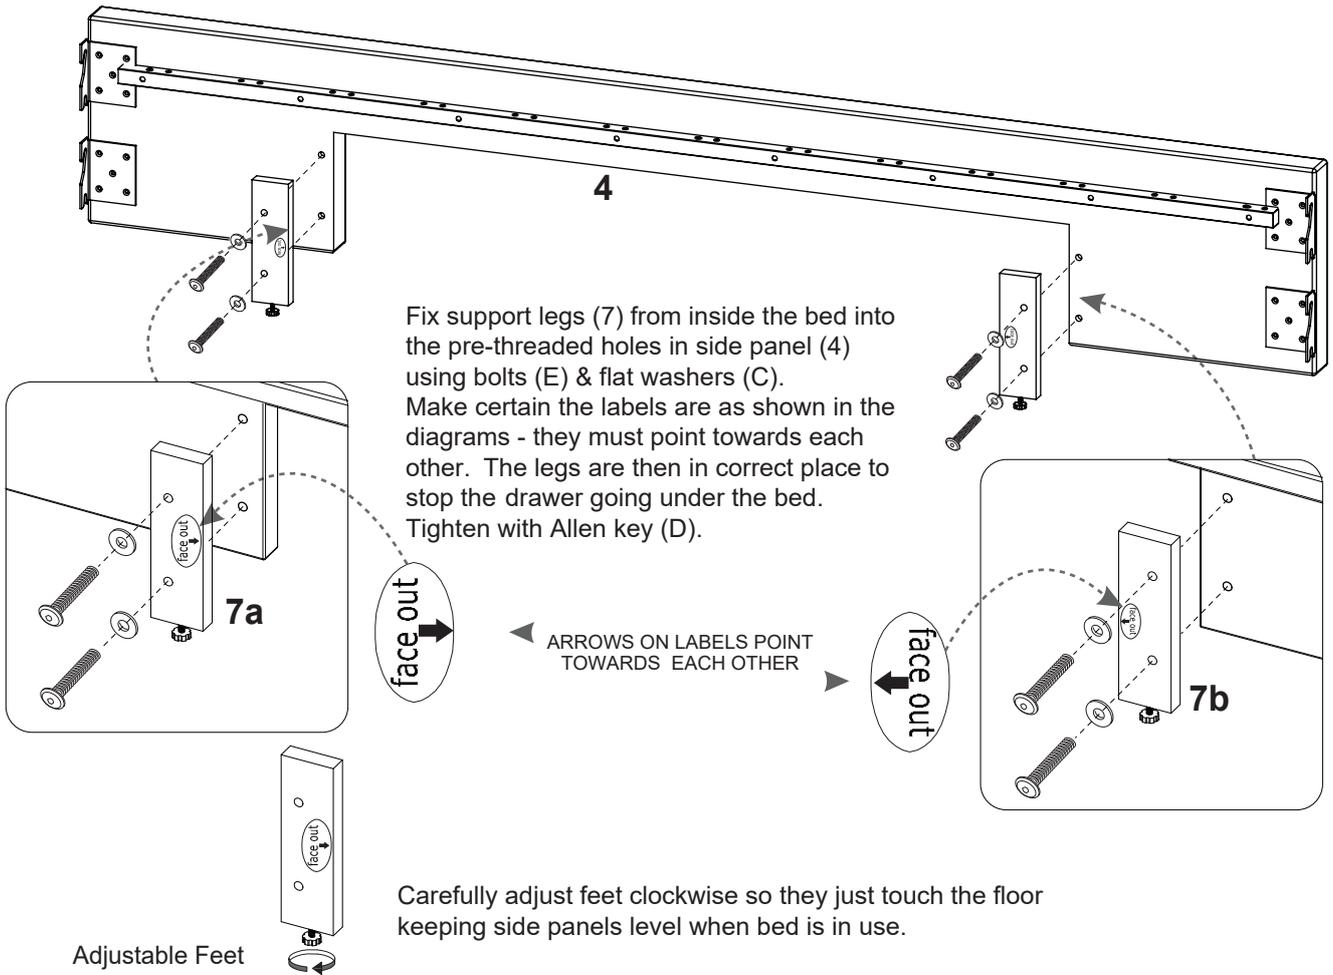


Step 2

C  Double & King x4
Super King x8 D  x1 E  Double & King x4
Super King x8 G  x1 F  Double & King x4
Super King x8

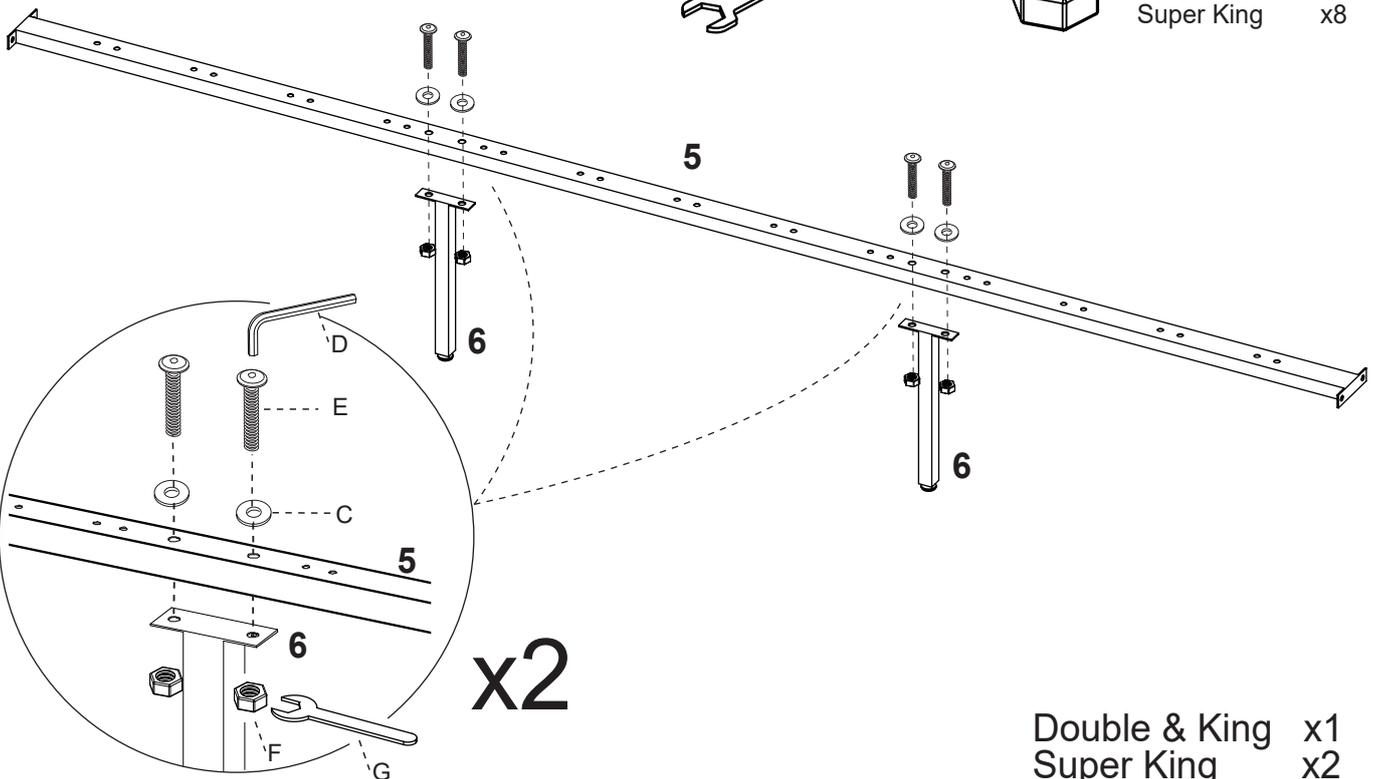


Step 3

L  x13

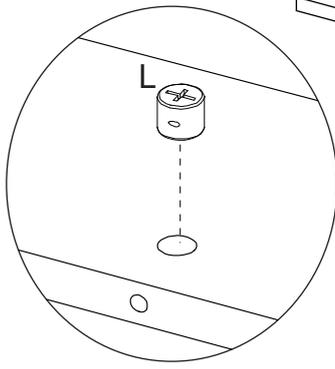



IMPORTANT:

MAKE SURE WHEN FITTING THE BARREL NUTS THAT THE HOLE IS IN CORRECT ALIGNMENT WITH THE HOLE IN THE PANEL EDGE.

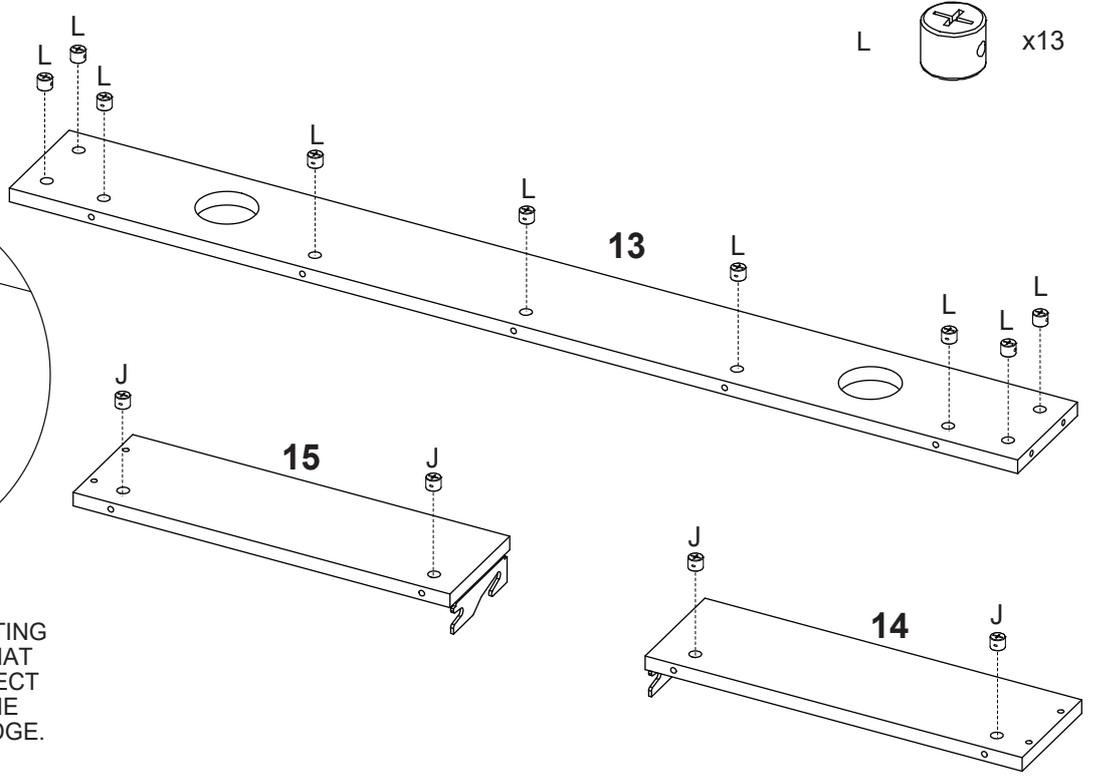


Step 4


H  x13

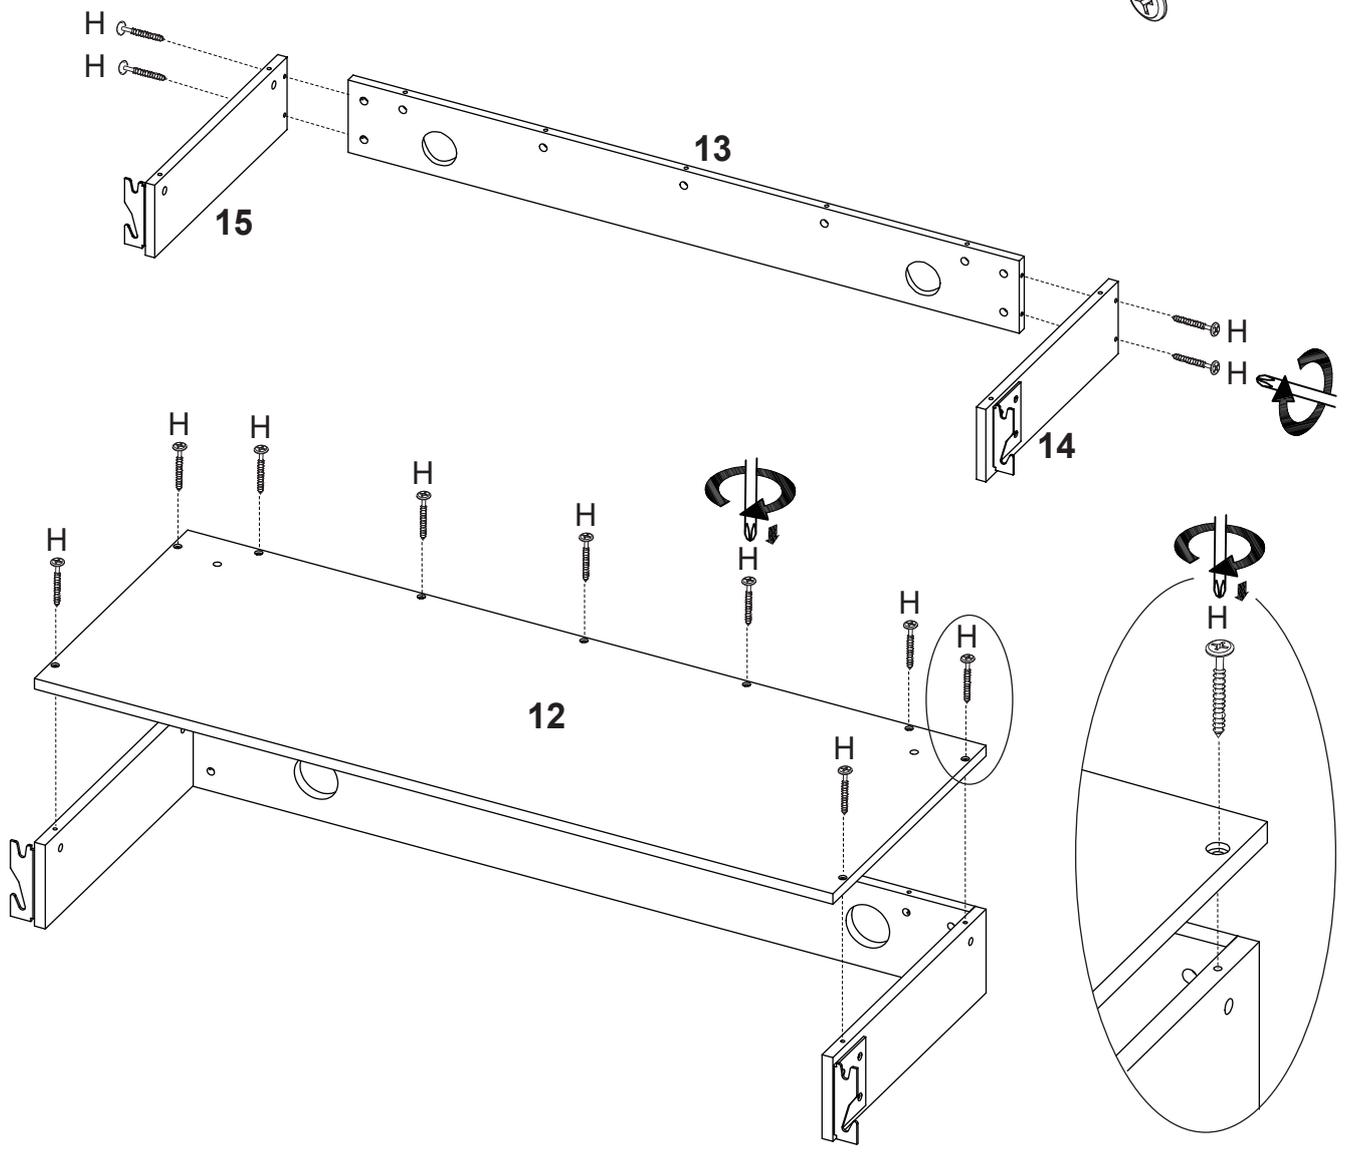

Step 5

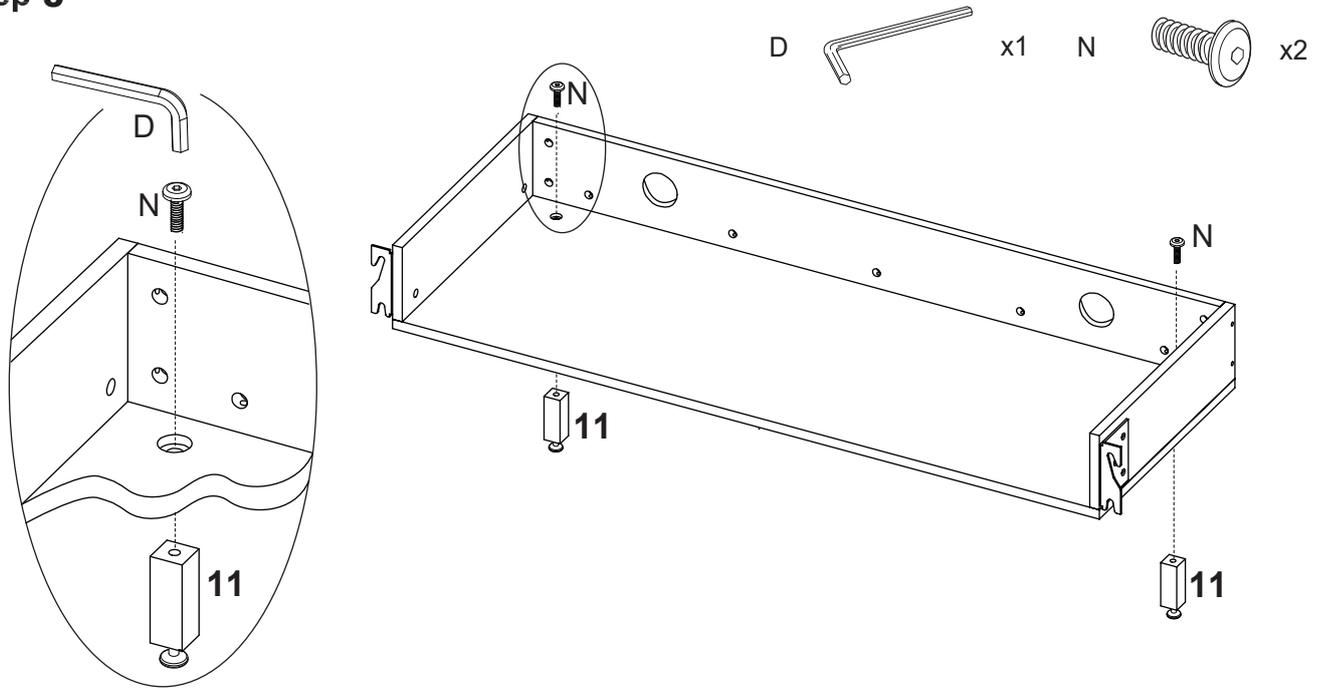





Step 6

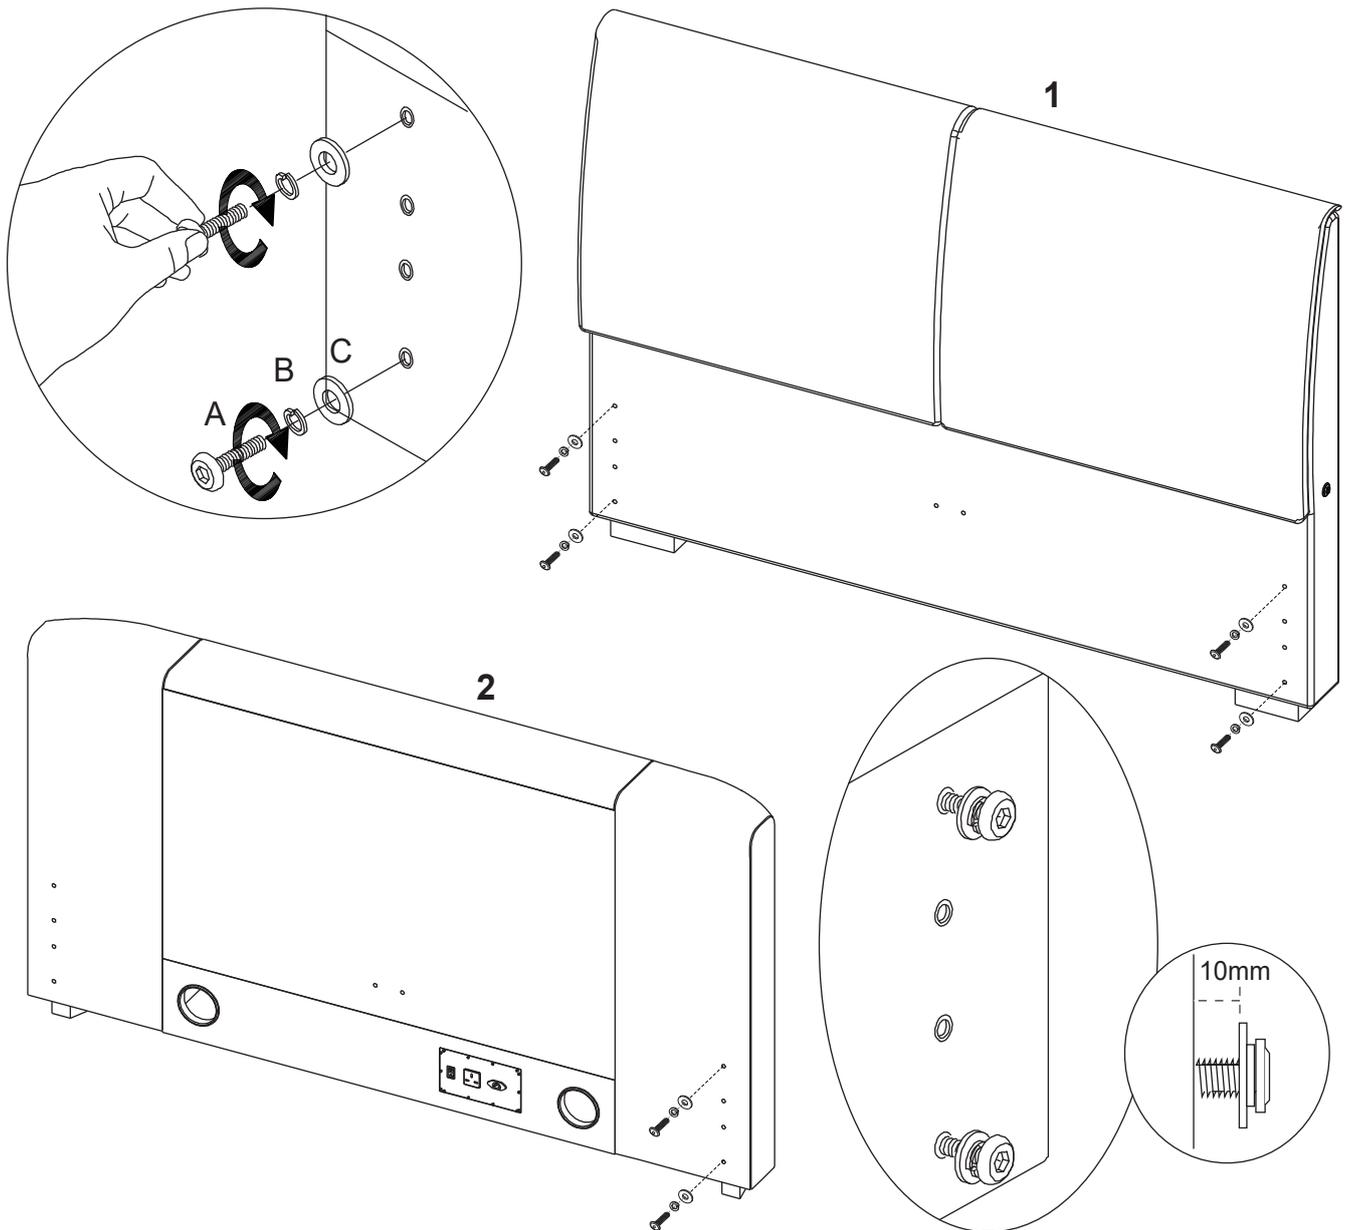




Step 7a

DOUBLE & KING

- A  x8
- B  x8
- C  x12
- D  x1
- N  x4



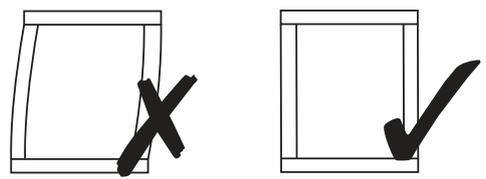
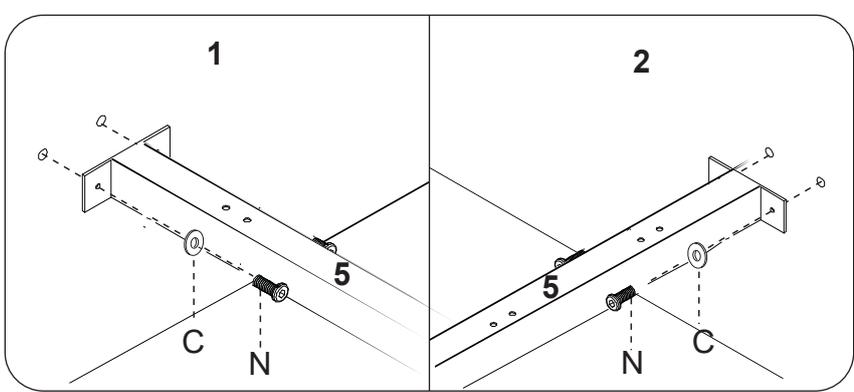
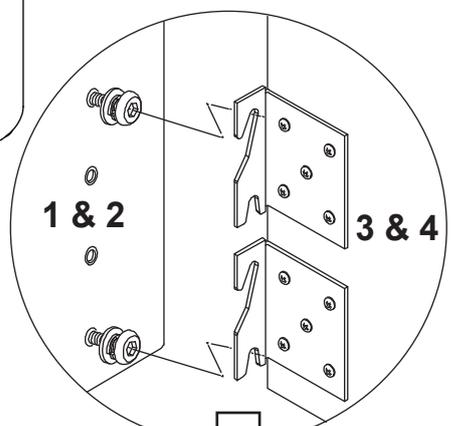
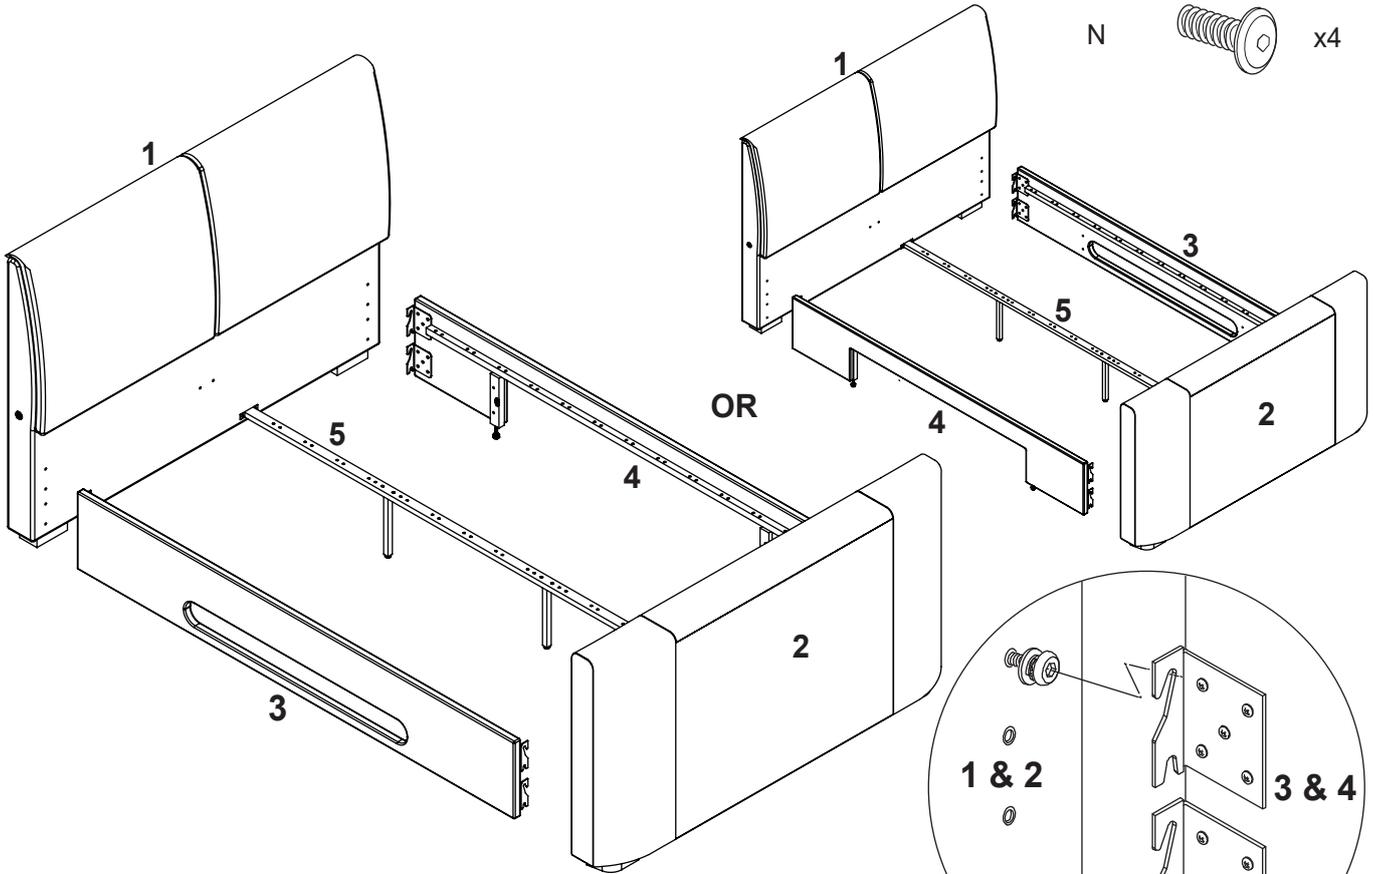


Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

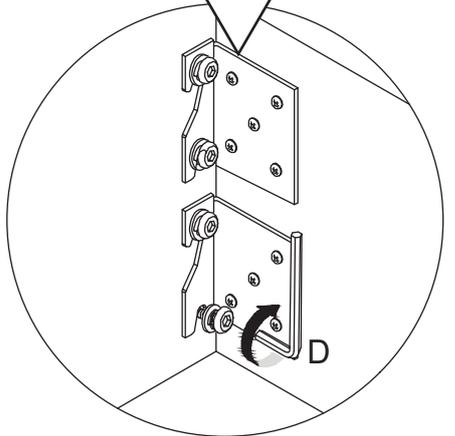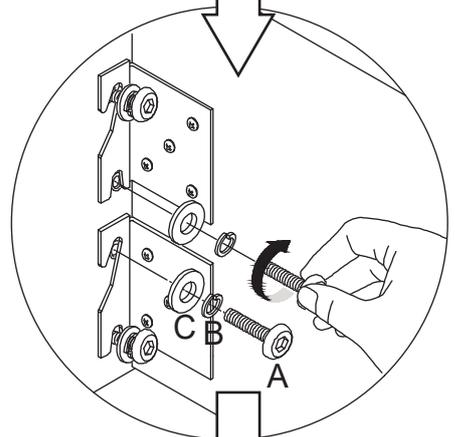
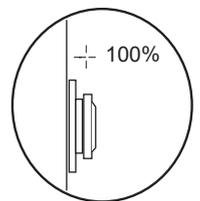


Step 7b

SUPER KING

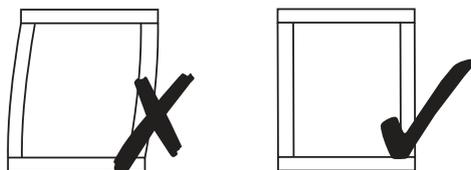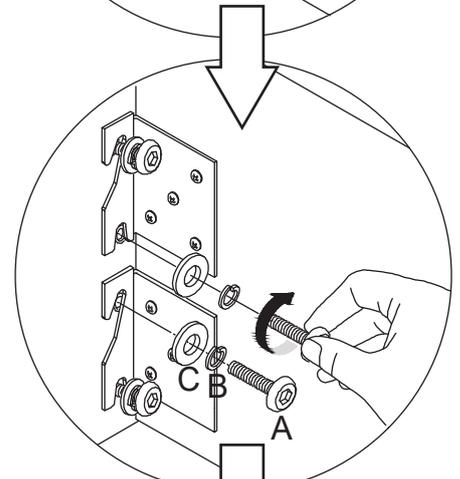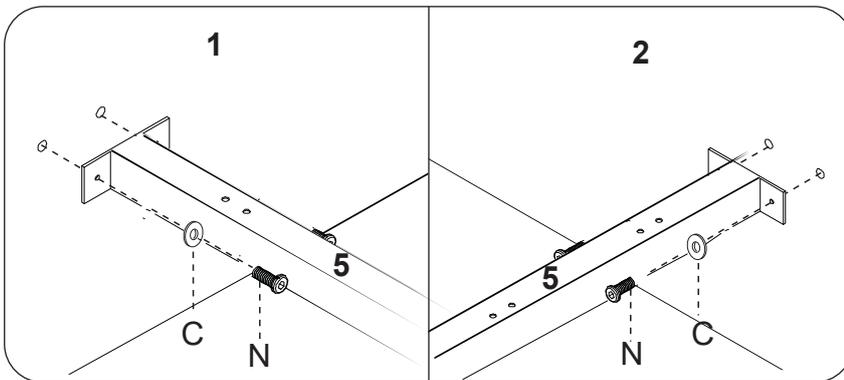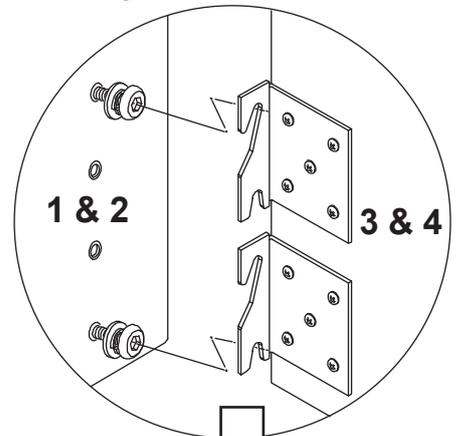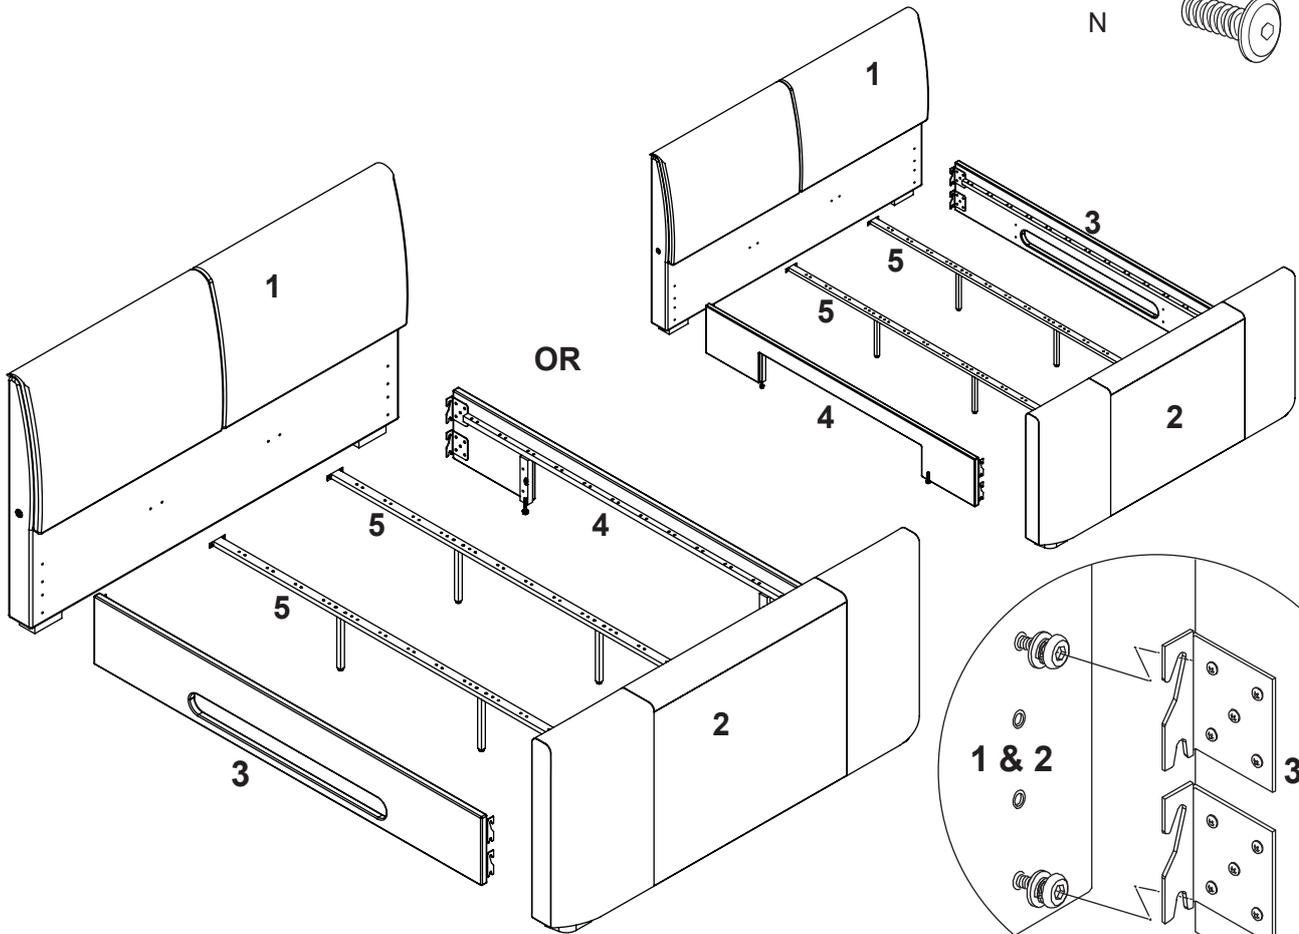


Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

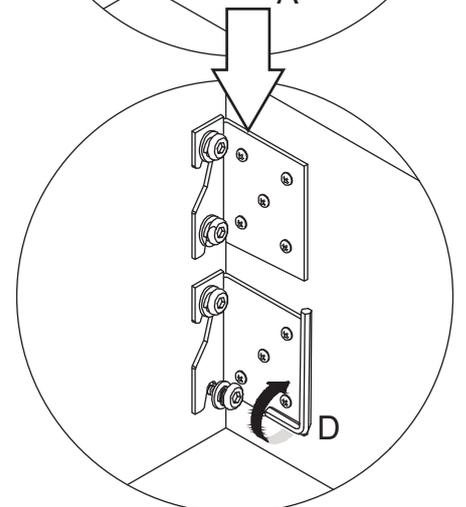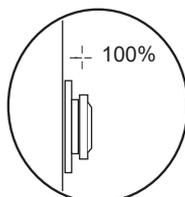


Step 8


- C  x4 D  x1 N  x4

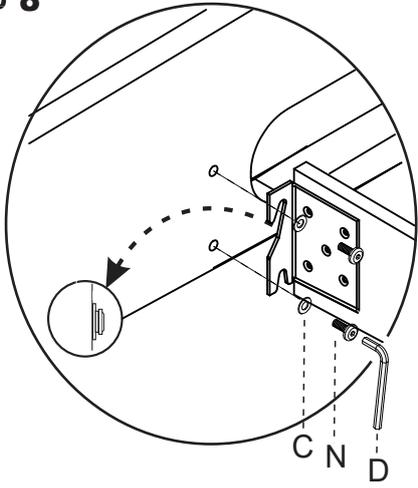


Double & King

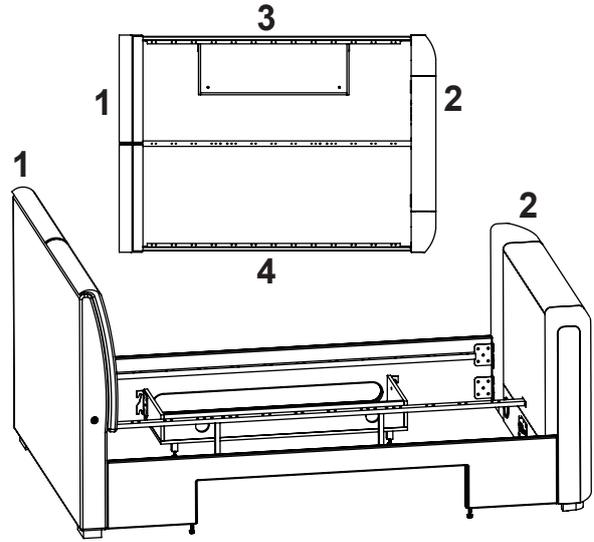


OR

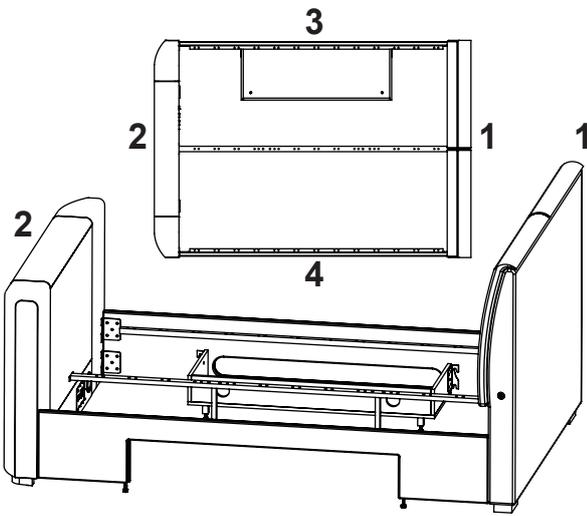

Super King

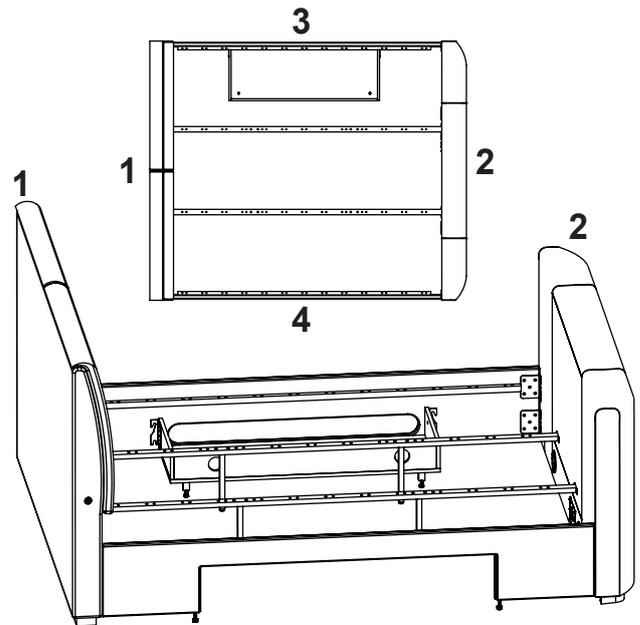


OR

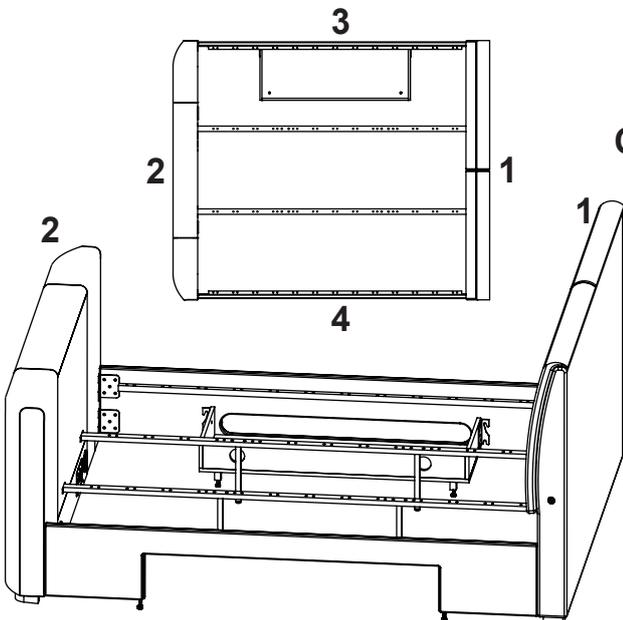



Step 9

Connect Main Power Lead (S) to your wall socket - for safety, this must be an earthed supply.

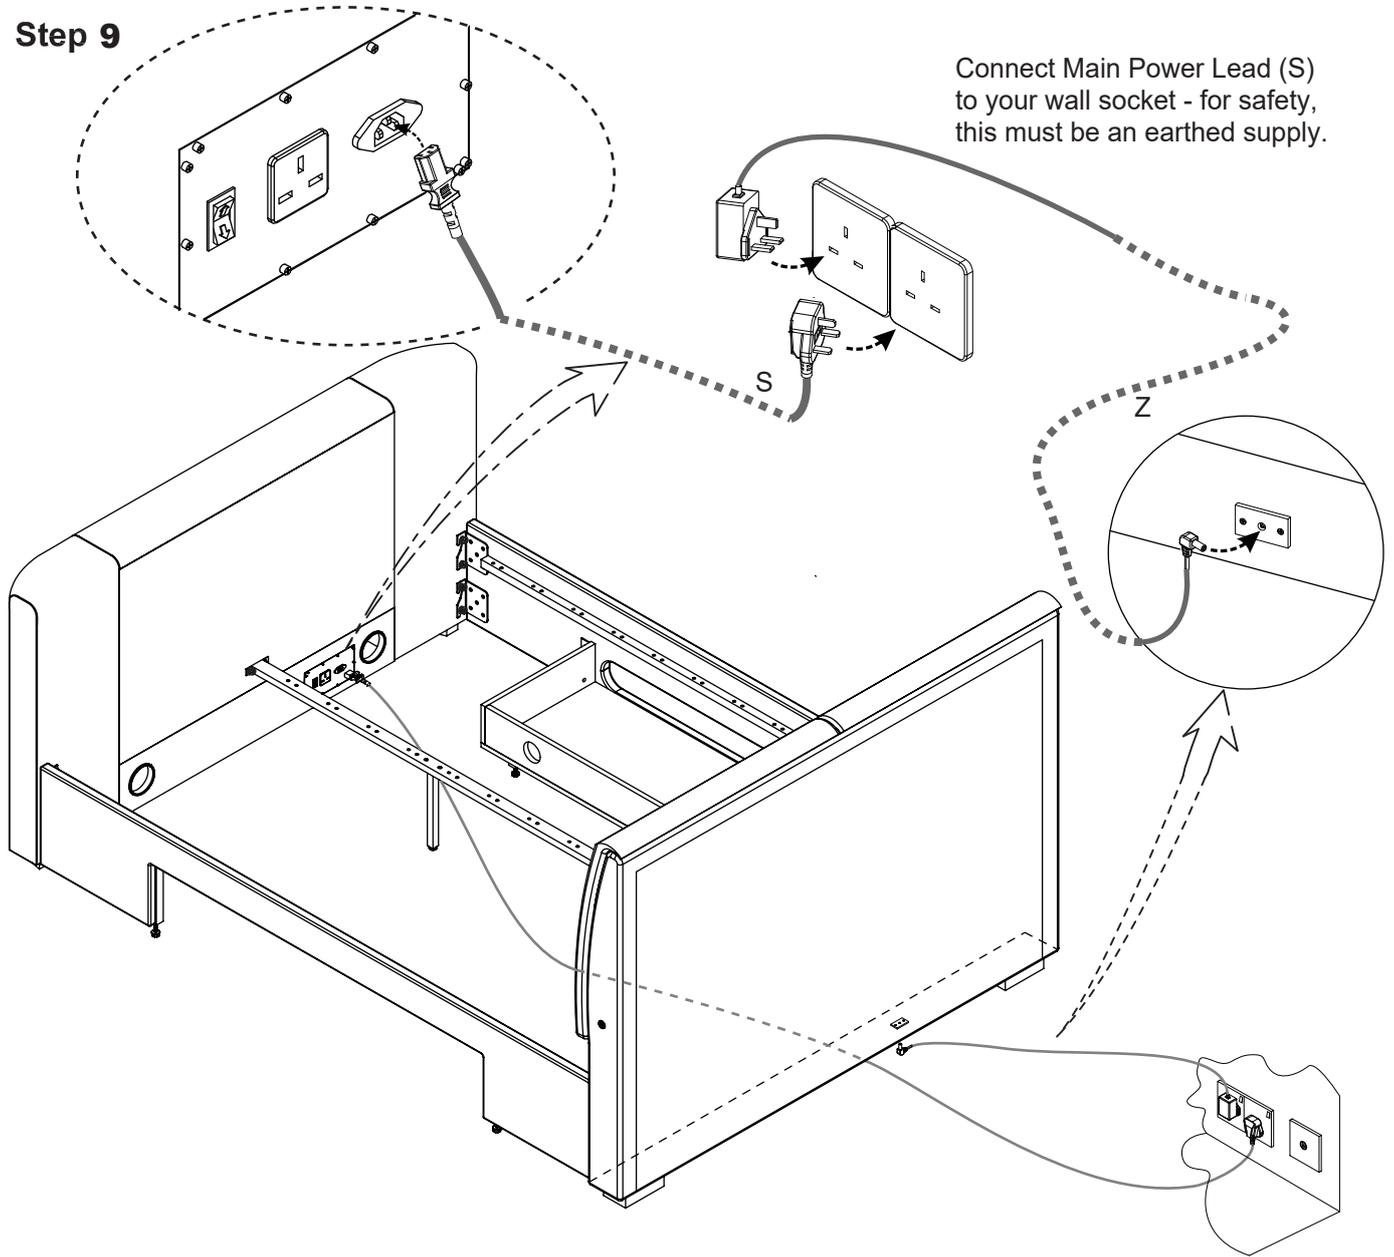

Step 10

Press the "UP" button to raise the TV lift.

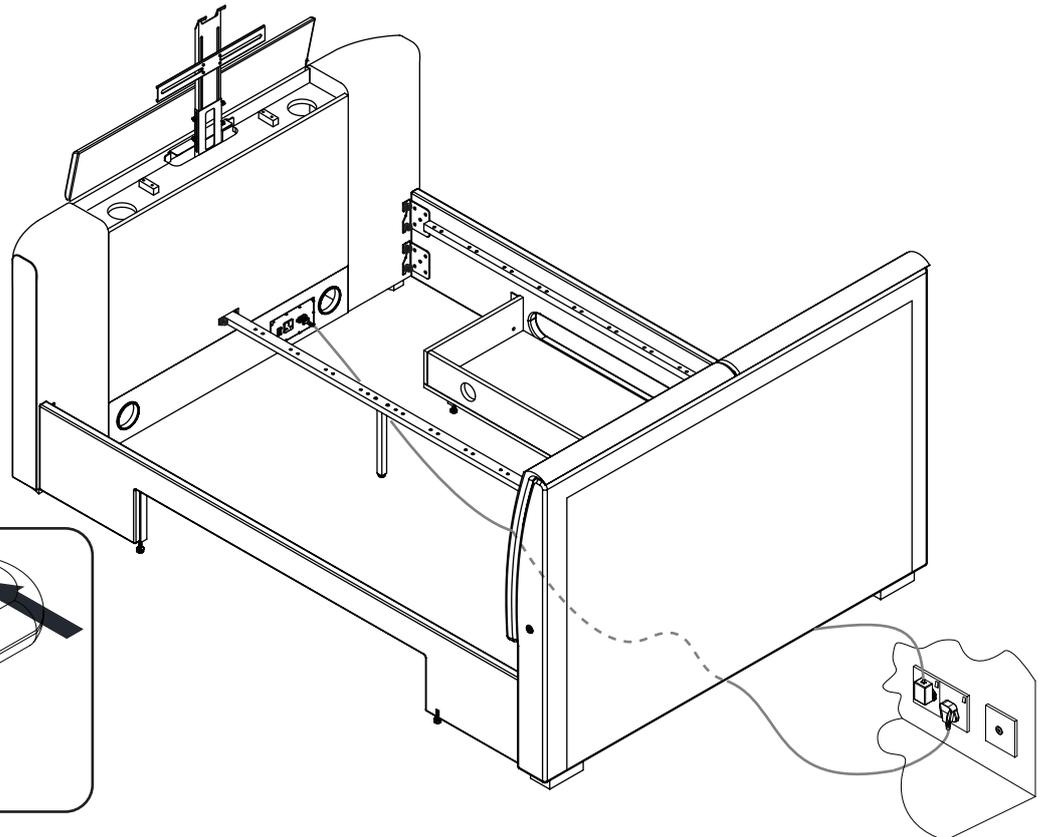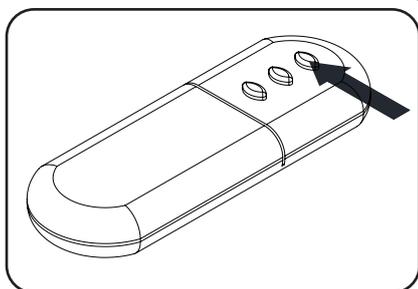


Step 11

TIP:

BEFORE FITTING THE TV,
PUSH CABLES THROUGH
EACH DUCT FROM THE TOP.
CHOOSE THE BEST SIDE TO
USE DEPENDING ON WHERE
THE CONNECTION PORTS
ARE, ON BACK OF YOUR TV.
NEVER CROSS CABLES FROM
ONE SIDE TO THE OTHER.

**Note: For illustration purposes
only, TV connections may vary.**

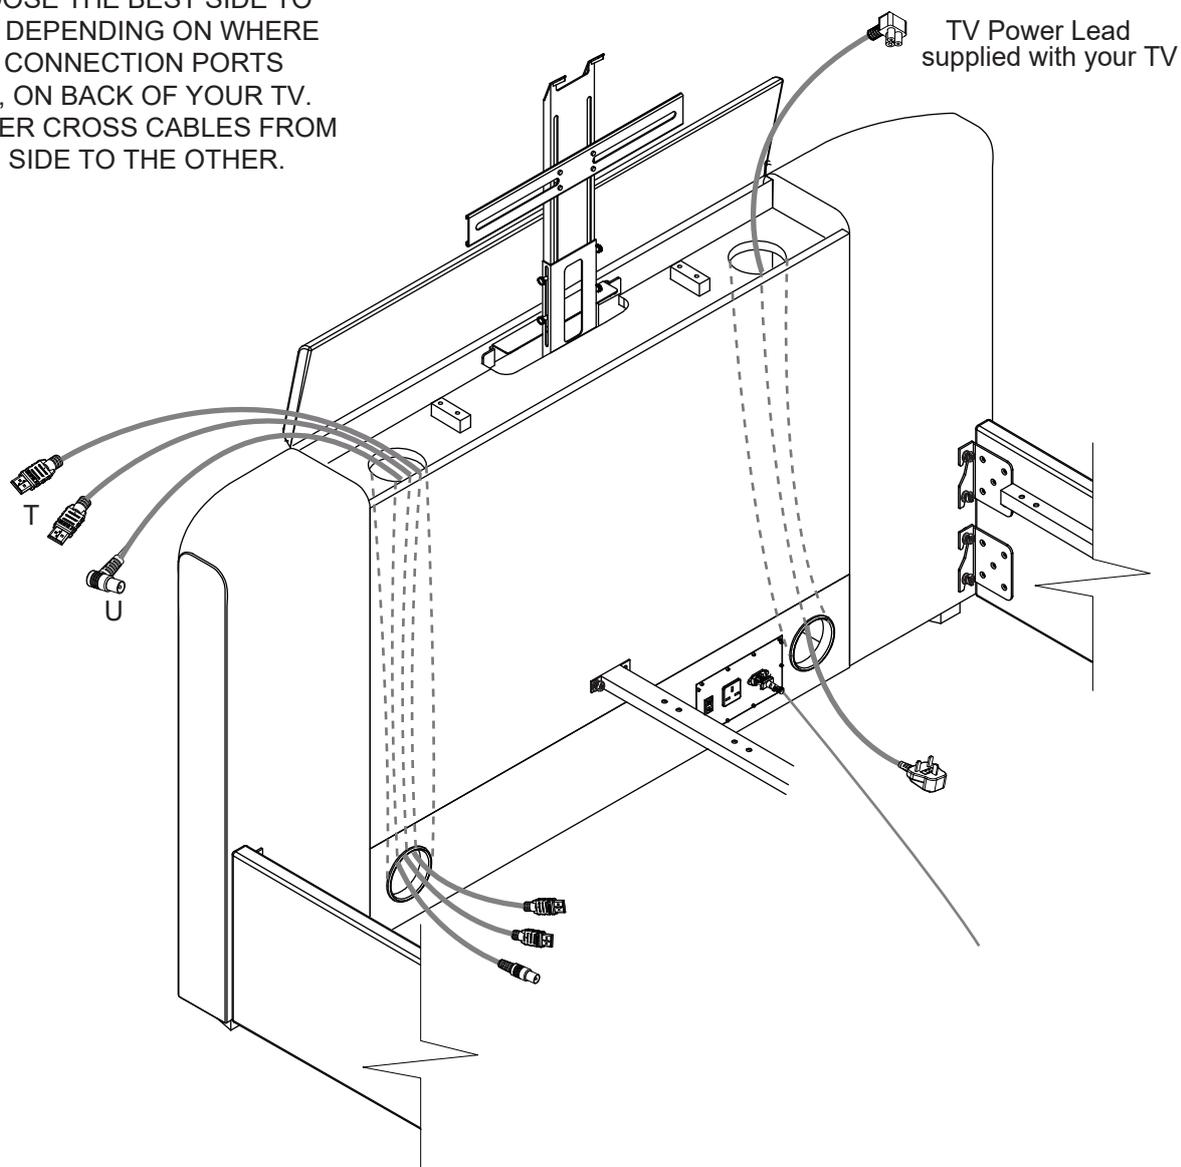

Step 12


TV INSTALLATION KIT

P Allen Key (5mm/4mm/2.5mm)










x1

Q Screw-Washer set (M8/M6/M4)





x2

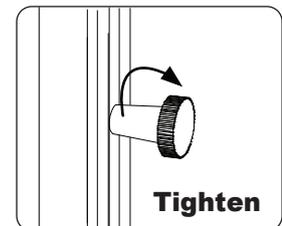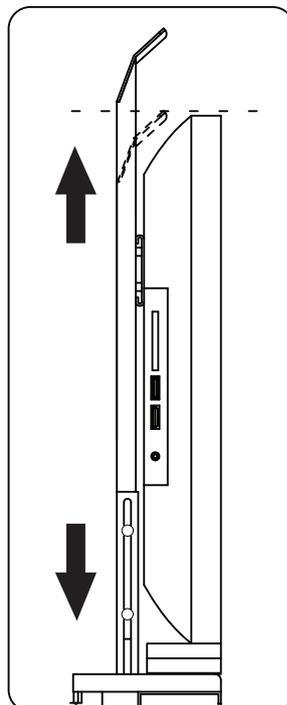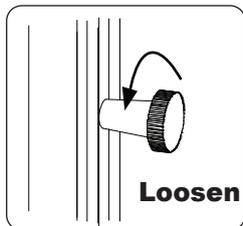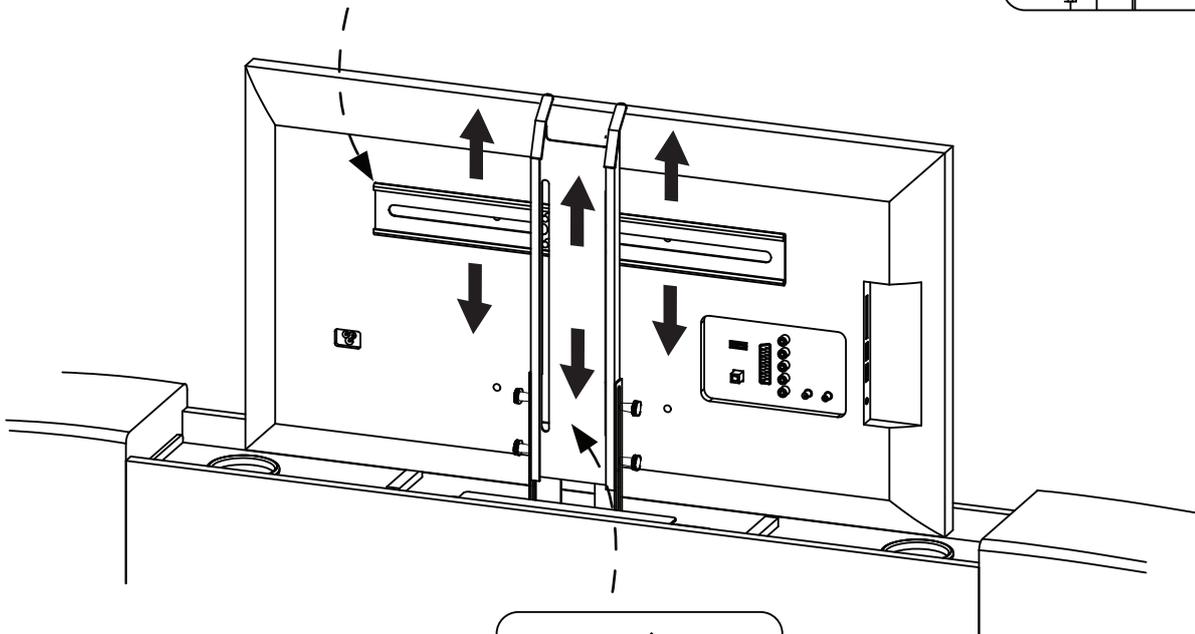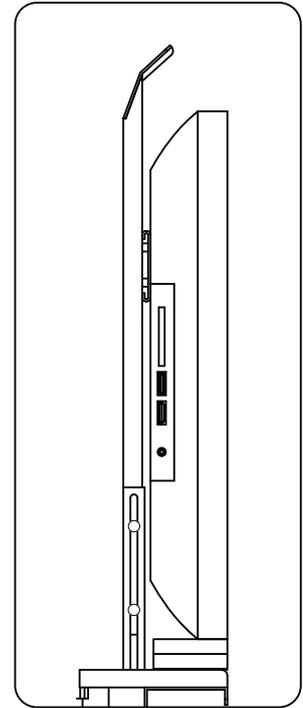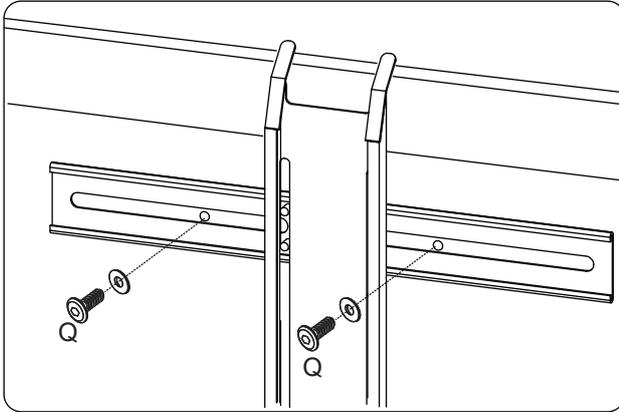




Step 13

Note: For illustration purposes only, TV connections may vary.



TV Power Lead
supplied with your TV

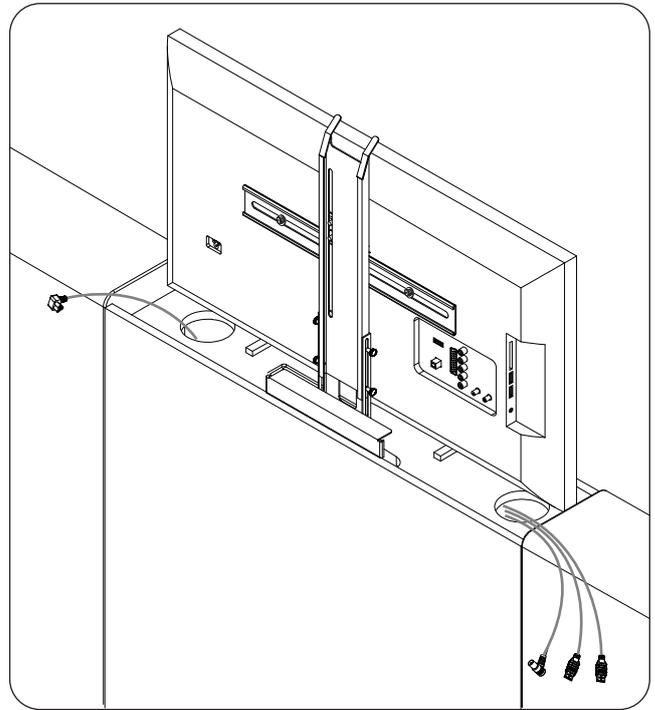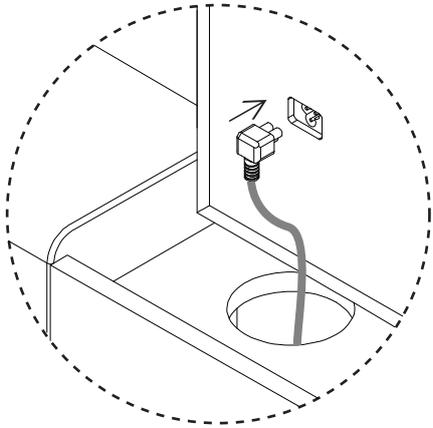

! 90° ADAPTOR

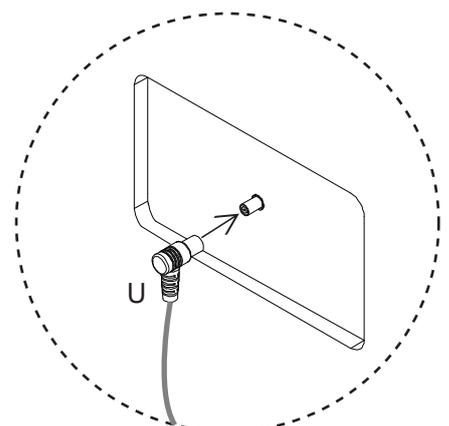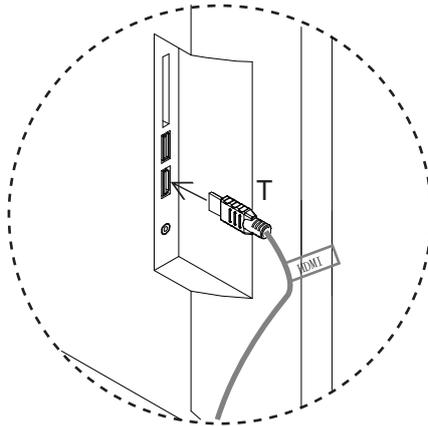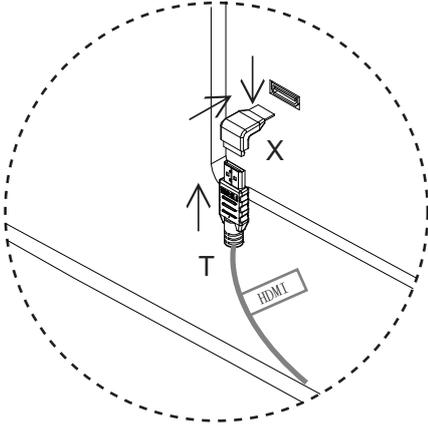




**PLUG IN - KEEP ALL CABLES TIGHT
- USE CLIPS & TIES PROVIDED.**

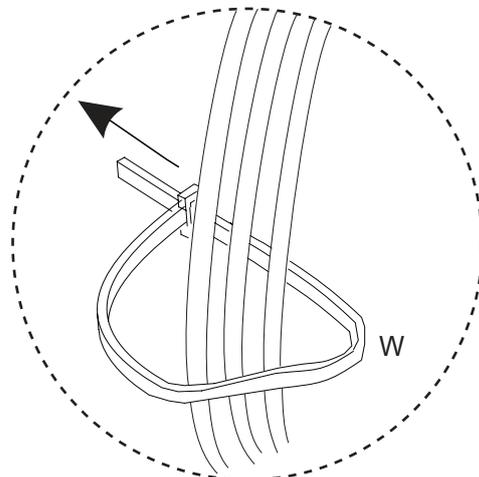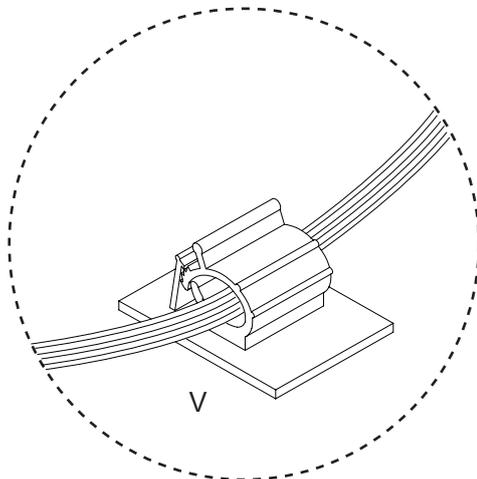


Keep wires tight - peel
off cover from cable clips
& adhere to back of TV.

Step 14


Press the "DOWN" button to lower the TV lift.

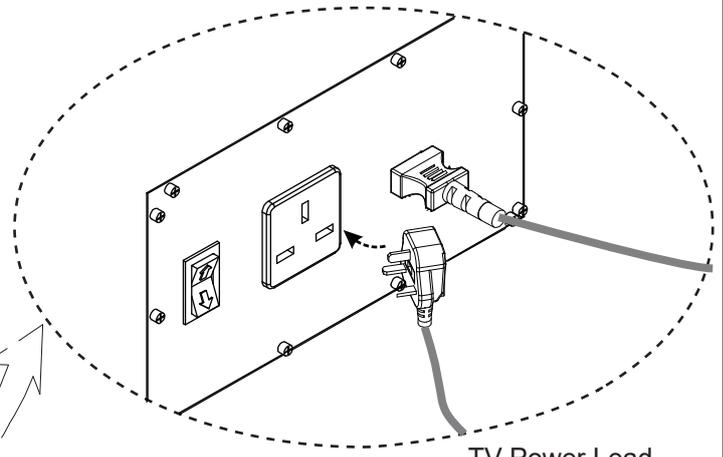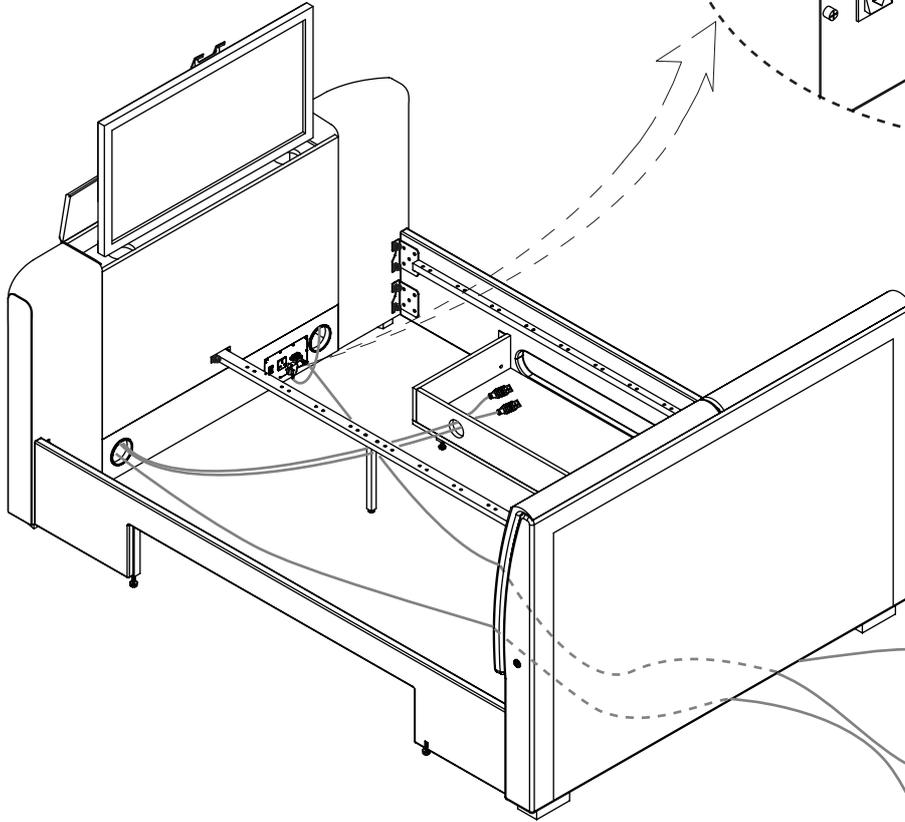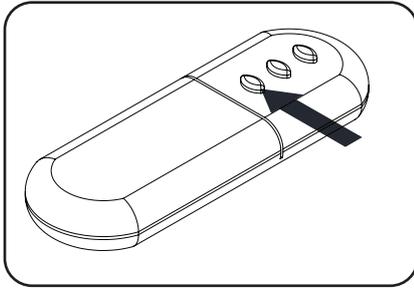

TV Power Lead
supplied with your TV


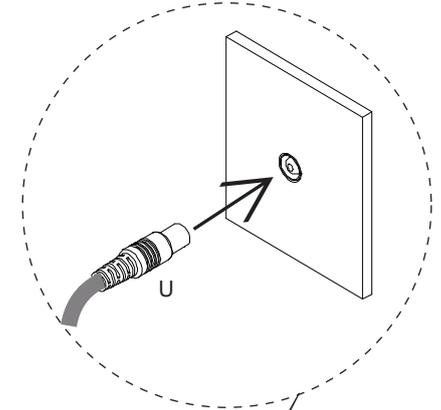


Step 15

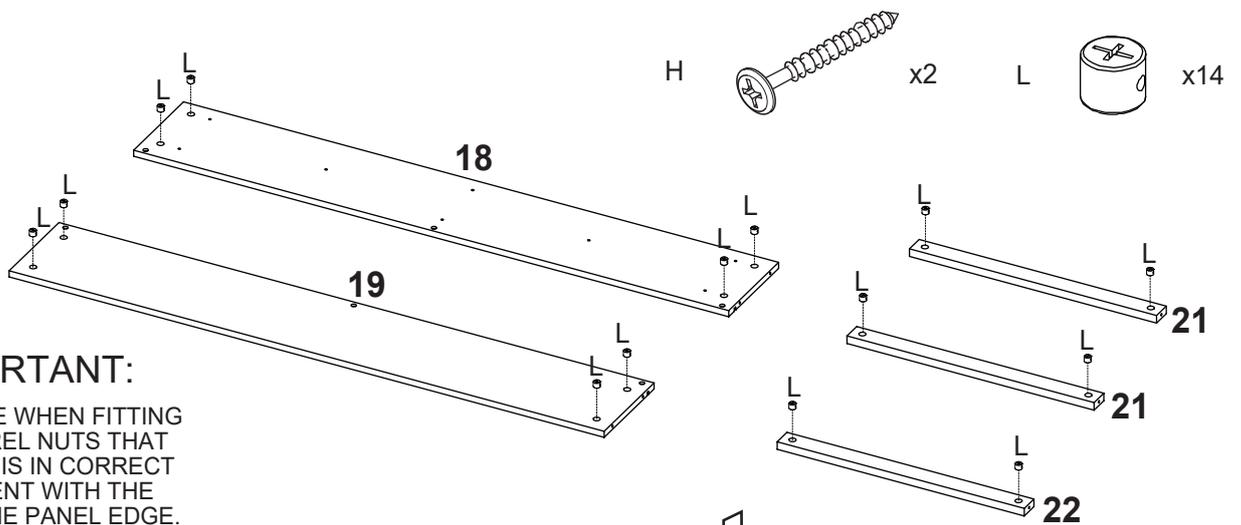


IMPORTANT:


MAKE SURE WHEN FITTING
THE BARREL NUTS THAT
THE HOLE IS IN CORRECT
ALIGNMENT WITH THE
HOLE IN THE PANEL EDGE.

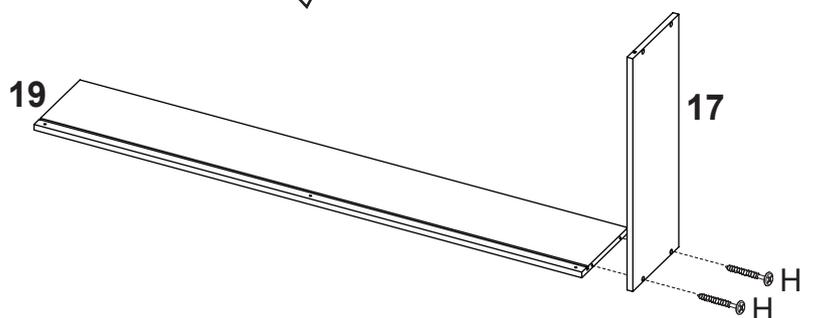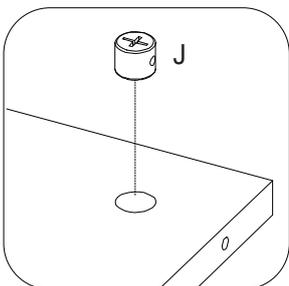


Step 16

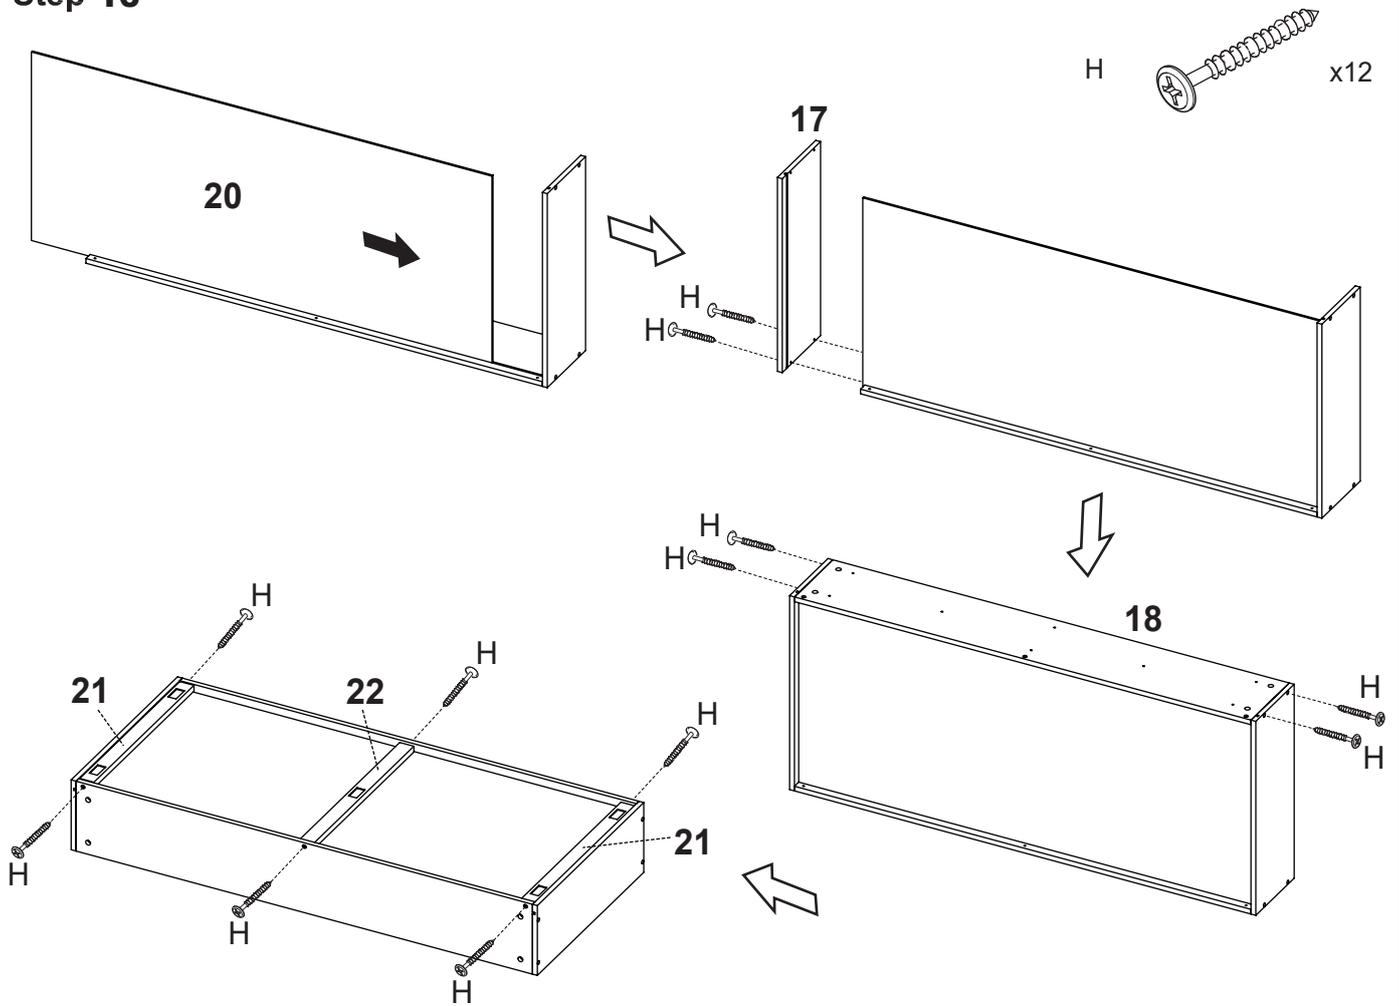

Step 17



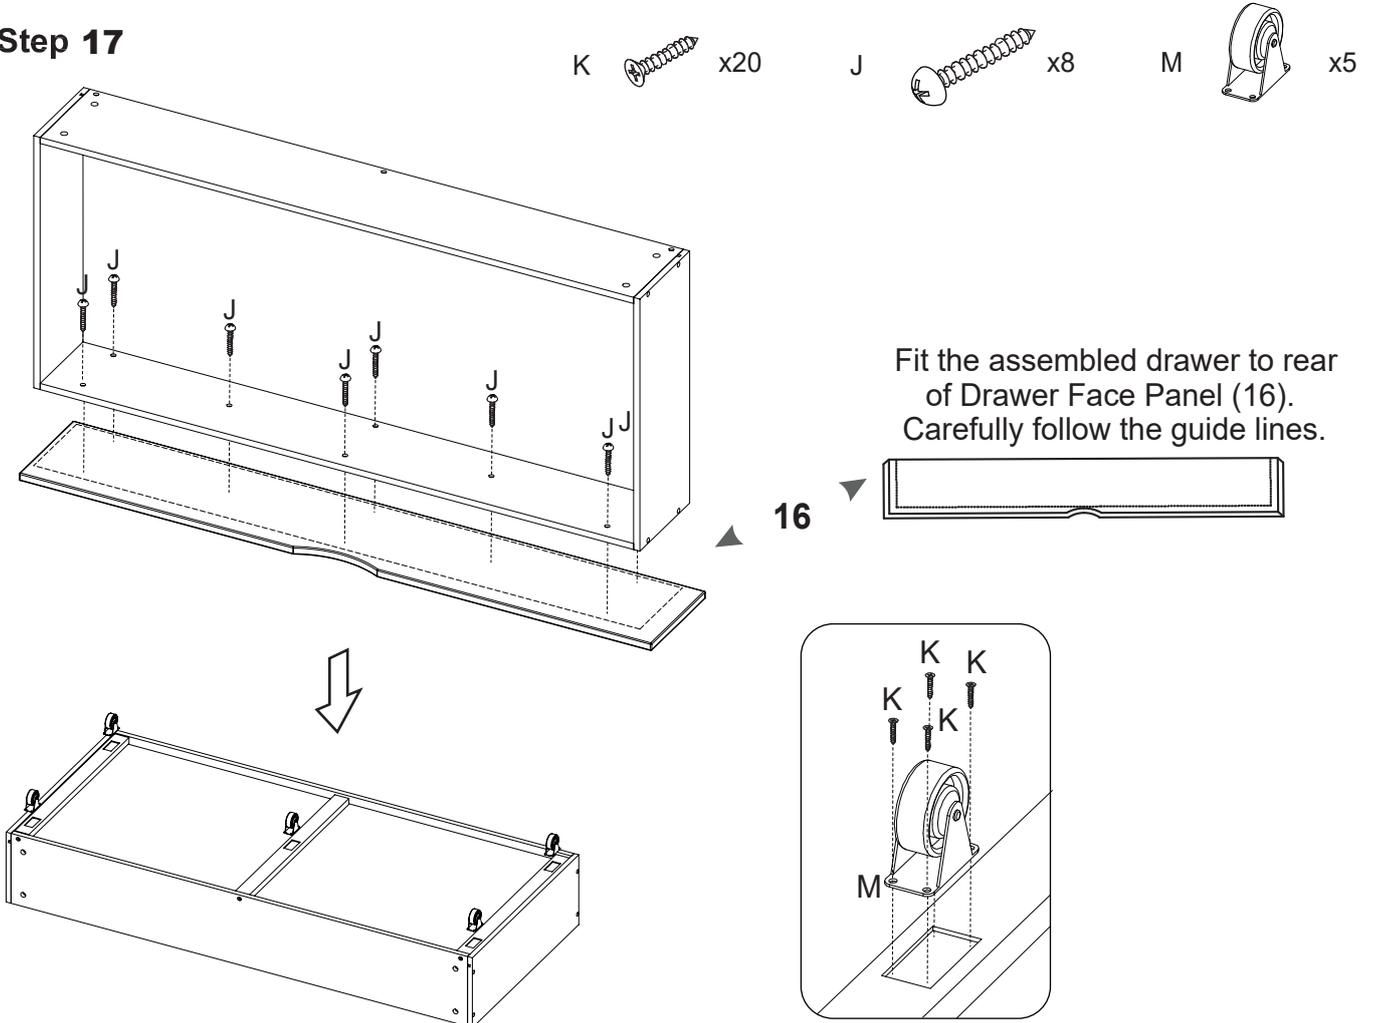


Step 18

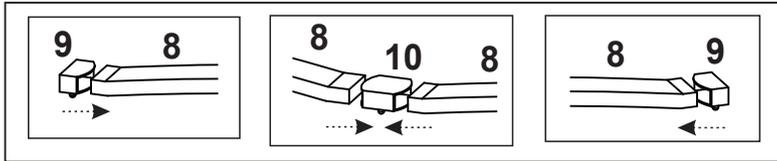

Double King x12 sets
x13 sets


Super King x13 sets

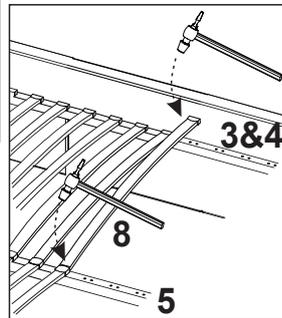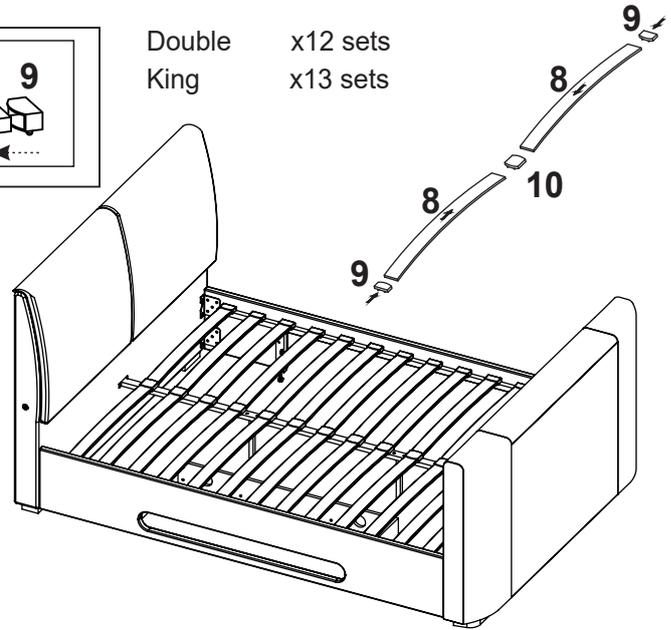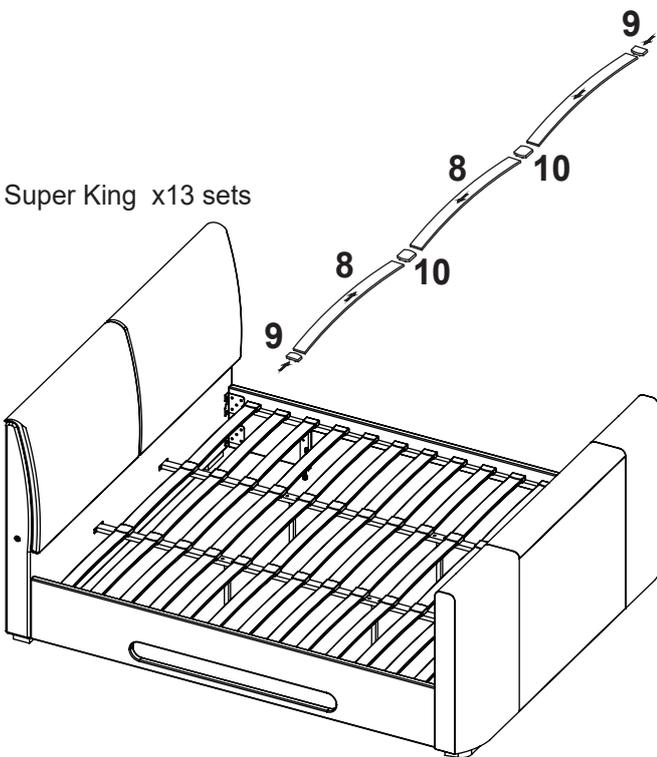


Fix wooden slat (8) to double plastic cap (10).
Fix single plastic cap (9) to each end.
Then connect onto centre support bar (5) & metal support rails of side panels (3) by gently pushing lugs down into the holes.

Step 19


DOUBLE & KING

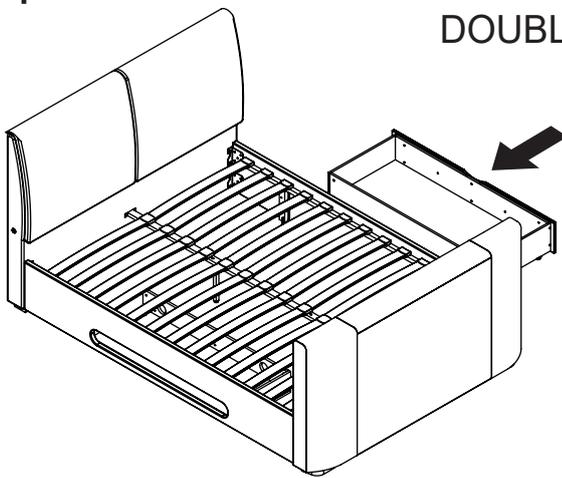

OR

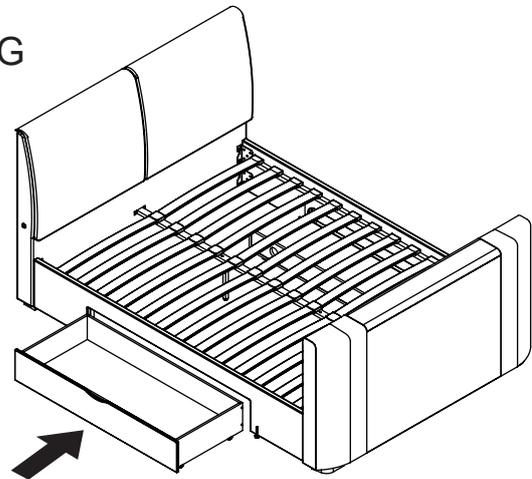

SUPER KING

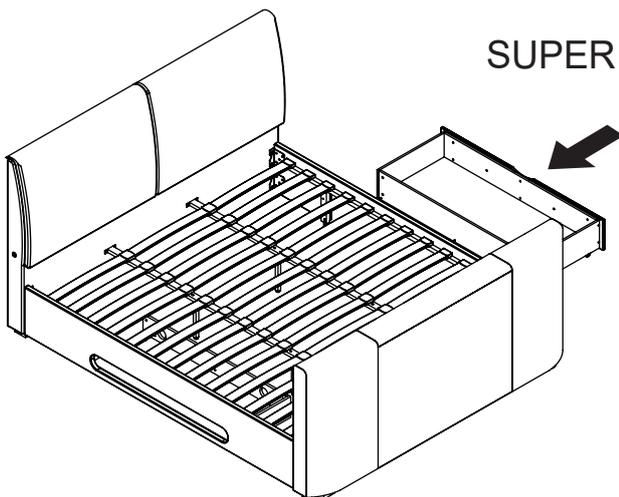

OR

